

MIKRO Flash the Reference Design via Bootloader Instructions


[Home](#) » [MIKRO](#) » MIKRO Flash the Reference Design via Bootloader Instructions 

Contents

- [1 MIKRO Flash the Reference Design via Bootloader](#)
- [2 How to flash the Reference Design via Bootloader](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

MIKROE

MIKRO Flash the Reference Design via Bootloader

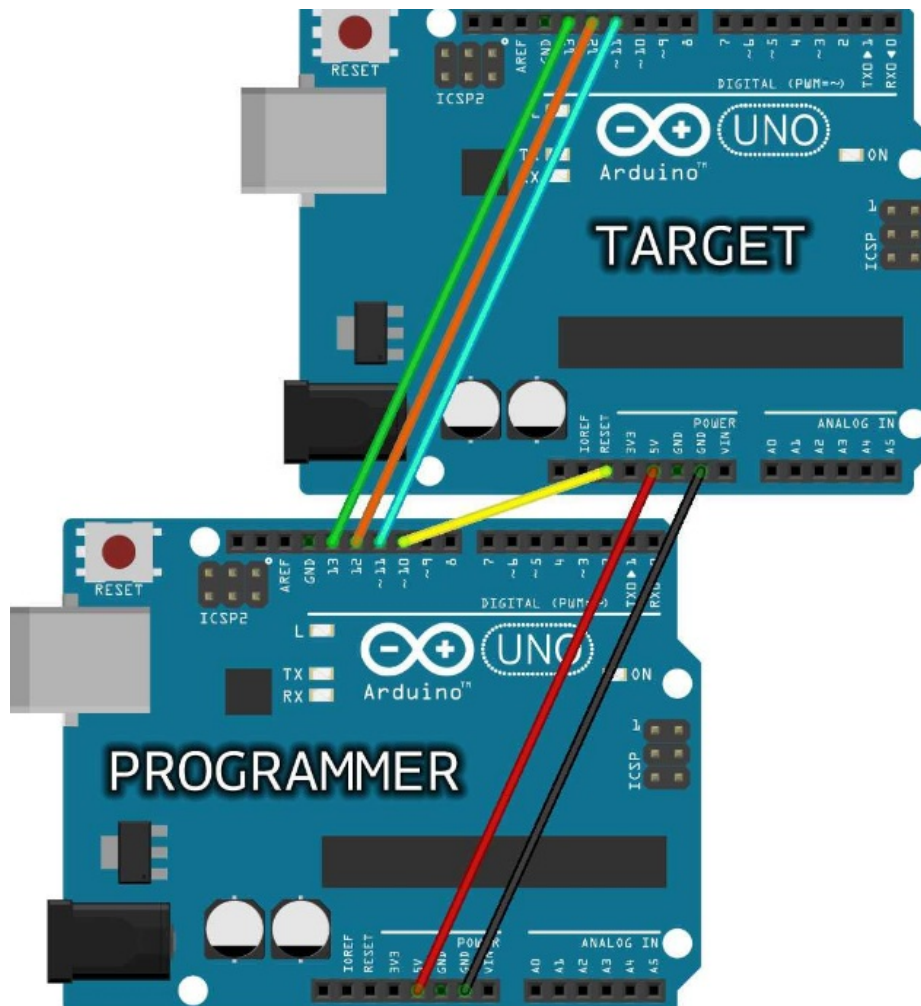

How to flash the Reference Design via Bootloader

Step 1

Install Renesas Flash Programmer V3.09 or later: <https://www.renesas.com/us/en/software-tool/renesas-flash-programmer-programming-gui#download>


Step 2

Put Jumper on Pin 7 and Pin 9 of the Debug Interface.



Step 3

Connect the Device to the PC.

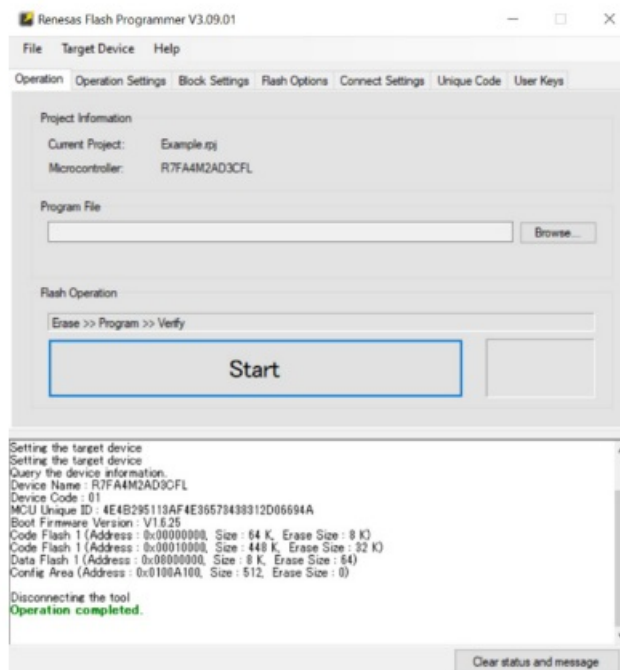

Step 5

Jumper needs to be removed or set to its initial position again (not flashing position) otherwise the board will not be functional in normal operation.

Documents / Resources

	MIKRO Flash the Reference Design via Bootloader [pdf] Instructions Flash the Reference Design via Bootloader, Flash the Reference Design, Bootloader Flash the Reference Design, Flash the Reference Design Using Bootloader, Bootloader
--	--

References

- [Broadcom Inc · GitHub](#)