

MIKROE TPM4K Clicker 4 Development Kits User Manual


[Home](#) » [MikroE](#) » MIKROE TPM4K Clicker 4 Development Kits User Manual 

Contents


- 1 MIKROE TPM4K Clicker 4 Development Kits
- 2 Introduction
- 3 Key Microcontroller Features
- 4 MCU Programming
- 5 MCU reset
- 6 Buttons and LEDs
- 7 Power Supply
- 8 Connectivity
- 9 Click boards
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



MIKROE TPM4K Clicker 4 Development Kits

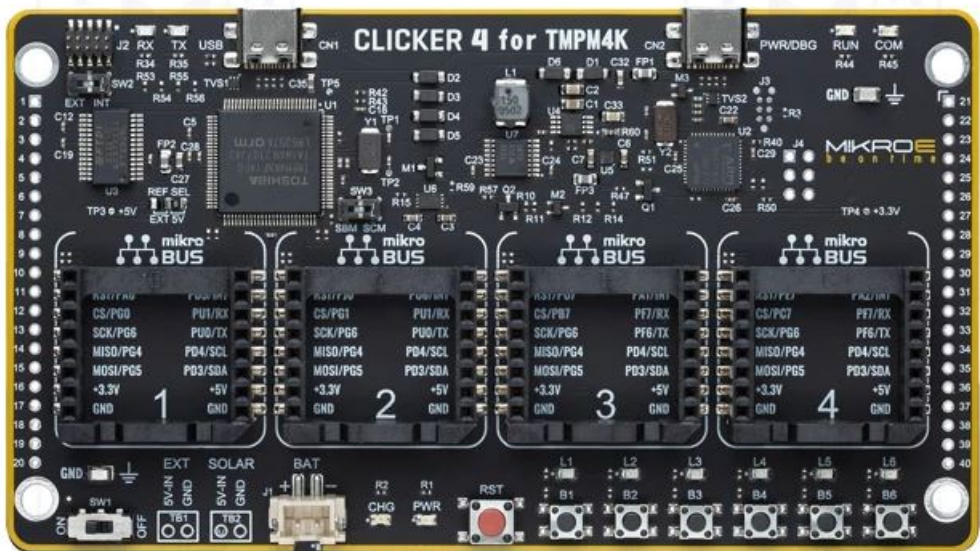


Introduction

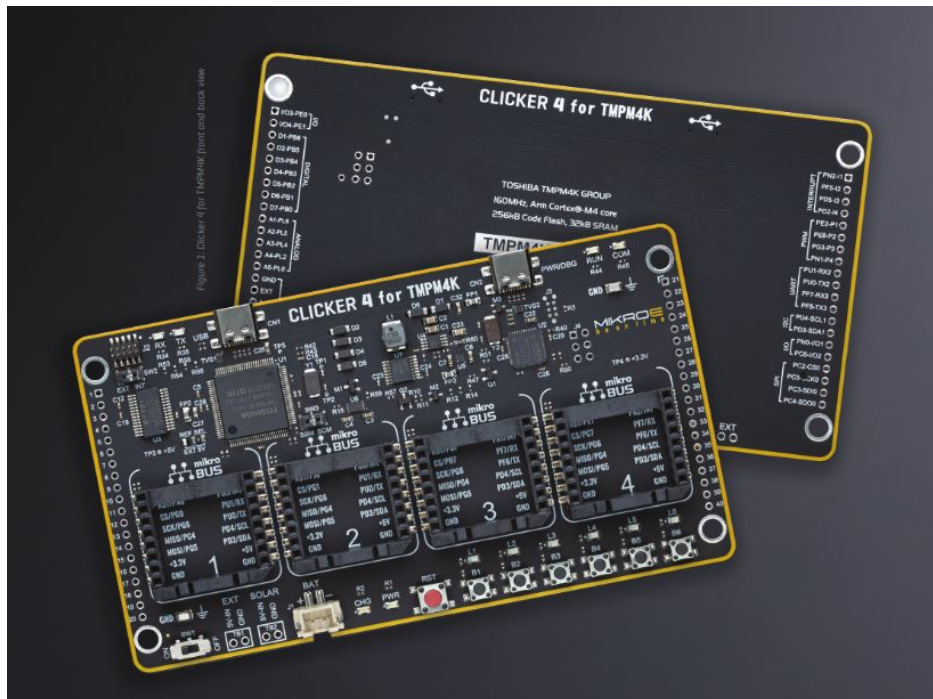

Clicker 4 for TMPM4K is a compact development board designed as a complete solution, you can use it to quickly build your own gadgets with unique functionalities. Featuring a TMPM4KNFYAFG MCU, four mikroBUS sockets for Click boards connectivity, power management, and more, it represents a perfect solution for the rapid development of many different types of applications. At its core, there is a TMPM4KNFYAFG MCU, a powerful micro controller by Toshiba, based on the high-performance Arm® Cortex®-M4 32-bit processor core operating at up to 160 MHz frequency. It provides sufficient processing power for the most demanding tasks, allowing Clicker 4 to adapt to any specific application requirements. Besides two 1×20 pin headers, four improved mikroBUS sockets represent the most distinctive connectivity feature, allowing access to a huge base of Click boards, growing on a daily basis. Each section of Clicker 4 is clearly marked, offering an intuitive and clean interface. This makes working with the development board much simpler and thus, faster. The usability of Clicker 4 doesn't end with its ability to accelerate the prototyping and application development stages: it is designed as a complete solution which can be implemented directly into any project, with no additional hardware modifications required. Four mounting holes [4.2mm/0.165"] at all four corners allow simple installation by using mounting screws. For most applications, a nice stylish casing is all that is needed to turn the Clicker 4 development board into a fully functional, custom design.

Key Microcontroller Features

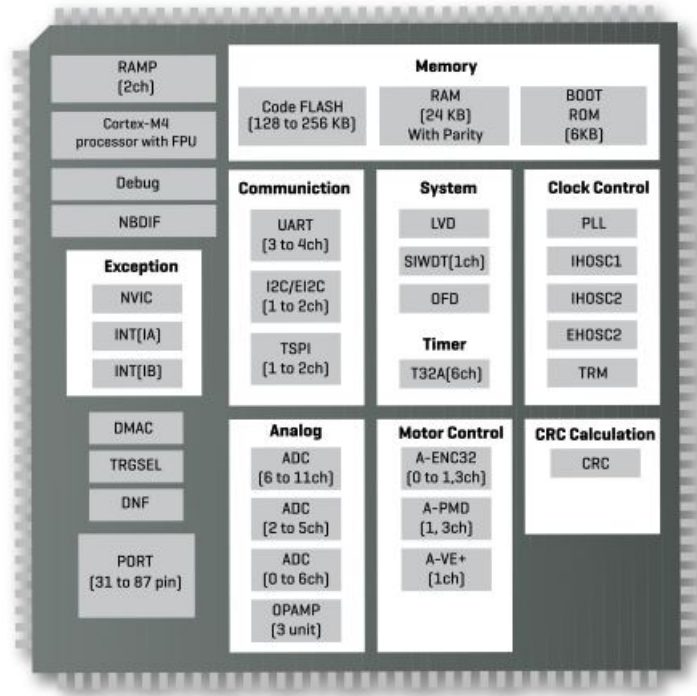

At its core, Clicker 4 for TPM4K uses the TPM4KNFYAFG MCU.

TPM4KNFYAFG is the 32-bit ARM® Cortex®-M4 core. This MCU is produced by Toshiba, featuring a dedicated floating point unit (FPU), memory protection unit (MPU), and advanced features ideal for motors and industrial equipment applications. Among many peripherals available on the host MCU, key features include:

- 256kB Code Flash
- 32kB Data Flash
- 24kB of SRAM
- Operating frequency up to 160 MHz
- Advanced programmable motor control circuit (A-PMD)
- Advanced vector engine plus (A-VE+)
- Advanced Encoder input circuit (32-bit) (A-ENC32)

For the complete list of MCU features, please refer to the TPM4KNFYAFG datasheet.

MCU Programming

Programming with on-board debug unit


- Clicker 4 for TPM4K uses Toshiba's TPM067FWQG as the on-board Debug Unit. It is compliant with an on-board emulator standard called CMSIS-DAP.
- CMSIS-DAP is the interface firmware for a Debug Unit that connects the Debug Port to USB. Debuggers, which execute on a host computer, connect via USB to the Debug Unit and to the Device that runs the application software. The Debug Unit connects via JTAG or SW to the target Device. Once Clicker 4 is powered up, and PWR/DBG connector is connected to the PC, it takes a few seconds for the on-board Debug Unit to initialize. After the on-board CMSIS-DAP is initialized, two LEDs RUN and COM blink one time.

Programming with an external programmer

The microcontroller can be programmed with an external programmer and supported software. The external programmer is connected to the development board via a 2x5 JTAG/SWD connector soldered on the J2 connector pads.


Note: Before usage, please check if the programmer pinout and the 2 x 5 pin header pinout are compatible. Based on the used programmer/debugger tool pinout, a corresponding adapter might be needed.

MCU reset

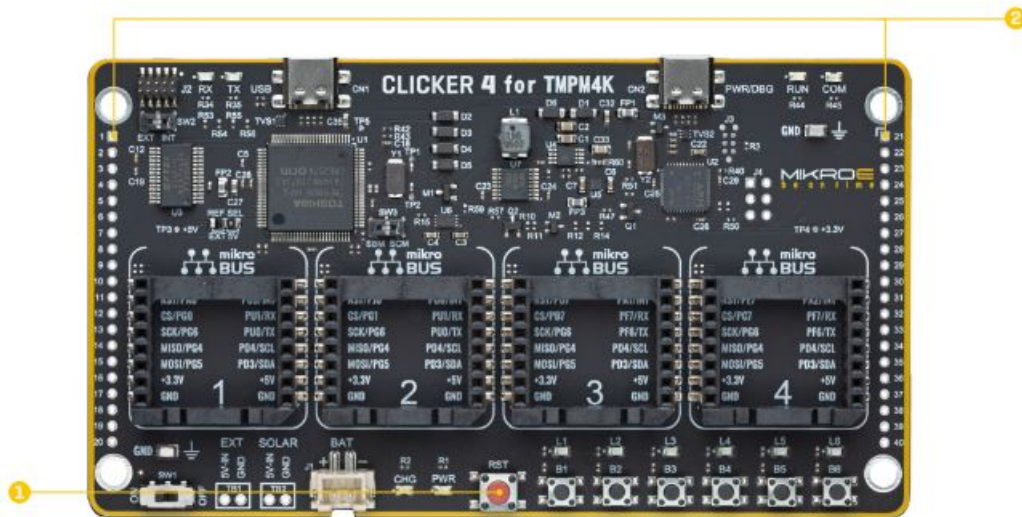

1. Clicker 4 for TMPM4K development board is equipped with the reset button labeled as RST (1), located on the front of the board. It is used to generate a LOW logic level on the MCU reset pin.
2. The RST pin of the host MCU is also routed to the pin 40 of the 1 x 20 pin header (2), allowing an external signal to reset the MCU.

Buttons and LEDs

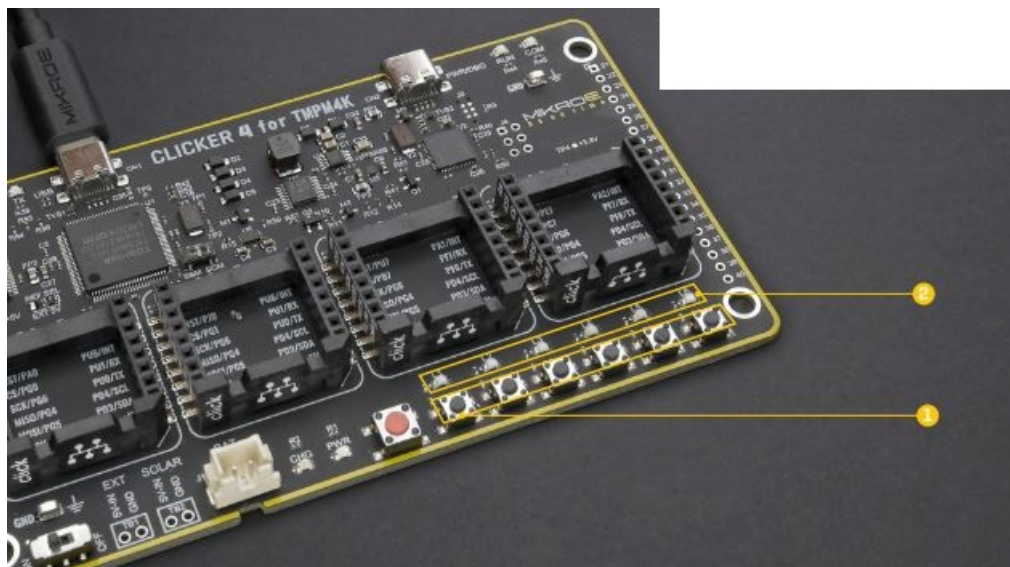

1. The board also contains six buttons and LEDs, located on the front side. Buttons (1) can be used to apply the desired logic state to pins of the MCU they are routed to. Pressing any of the six buttons can change the logic state of the microcontroller pins from logic high (1) to logic low (0).
2. CLICKER 4 for TMPM4K U S E R M A N U A L LEDs (2) can be used to visually indicate a logic state of the

specific pin. The maximum current through a single LED is limited with the 4.7k resistor. Each LED is connected to a MCU pin, and an active LED indicates that a logic high (1) is present.

Power Supply


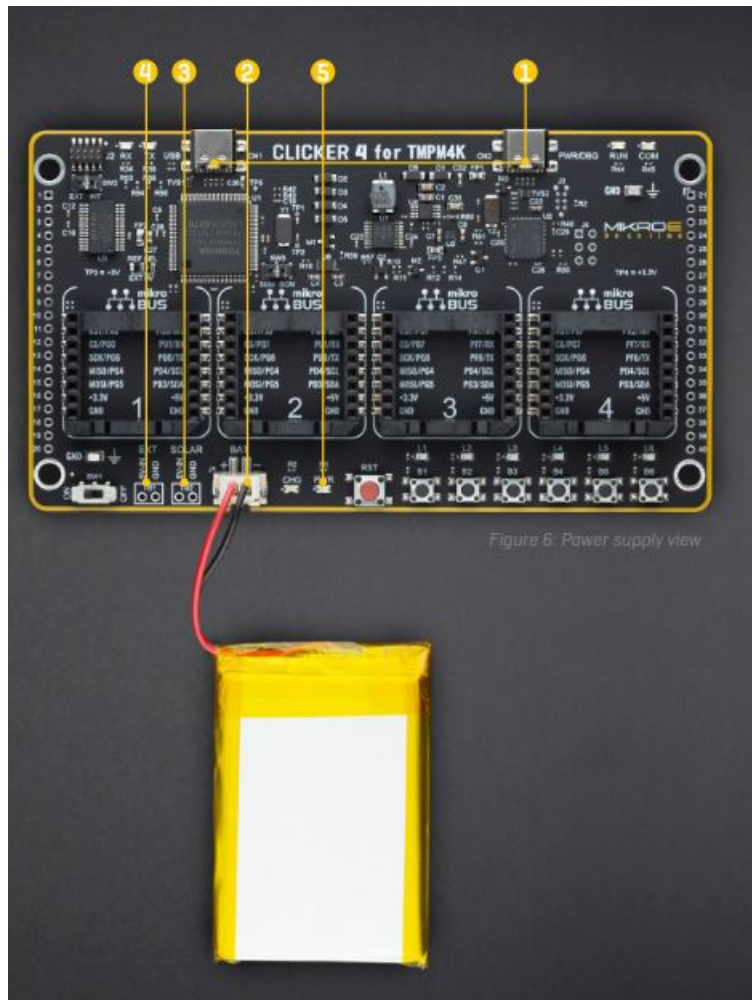


Figure 6: Power supply view


After a valid power supply source is connected (1 – 2 – 3 – 4), Clicker 4 for TPM4K can be powered ON. A LED indicator labeled as PWR (5) indicates that the board is powered ON. The power supply unit (PSU) provides clean and regulated power, necessary for proper operation of the Clicker 4 for TPM4K development board. It is equipped with four different power supply inputs, offering all the flexibility that Clicker 4 for TPM4K needs, and a reliable and safe battery charging circuit, which allows a single-cell Li-Po/Li-Ion battery to be charged. As explained, the advanced design of the PSU allows four types of power sources to be used, offering unprecedented flexibility: when powered by a Li-Po/Li-Ion battery, it offers an ultimate degree of autonomy. Power is not an issue even if it is powered over the USB cable. It can be powered over the USB-C connector, using power supply delivered by the USB HOST (i.e. personal computer), USB wall adapter, or a battery power bank. There are five power supply connectors available, each with its unique purpose:

1. CN1, CN2: USB-C connector (1)
2. J1: Standard 2.5mm pitch XH battery connector (2)
3. TB1, TB2: A place for a standard 2.54mm terminal block (3,4)

Connectivity

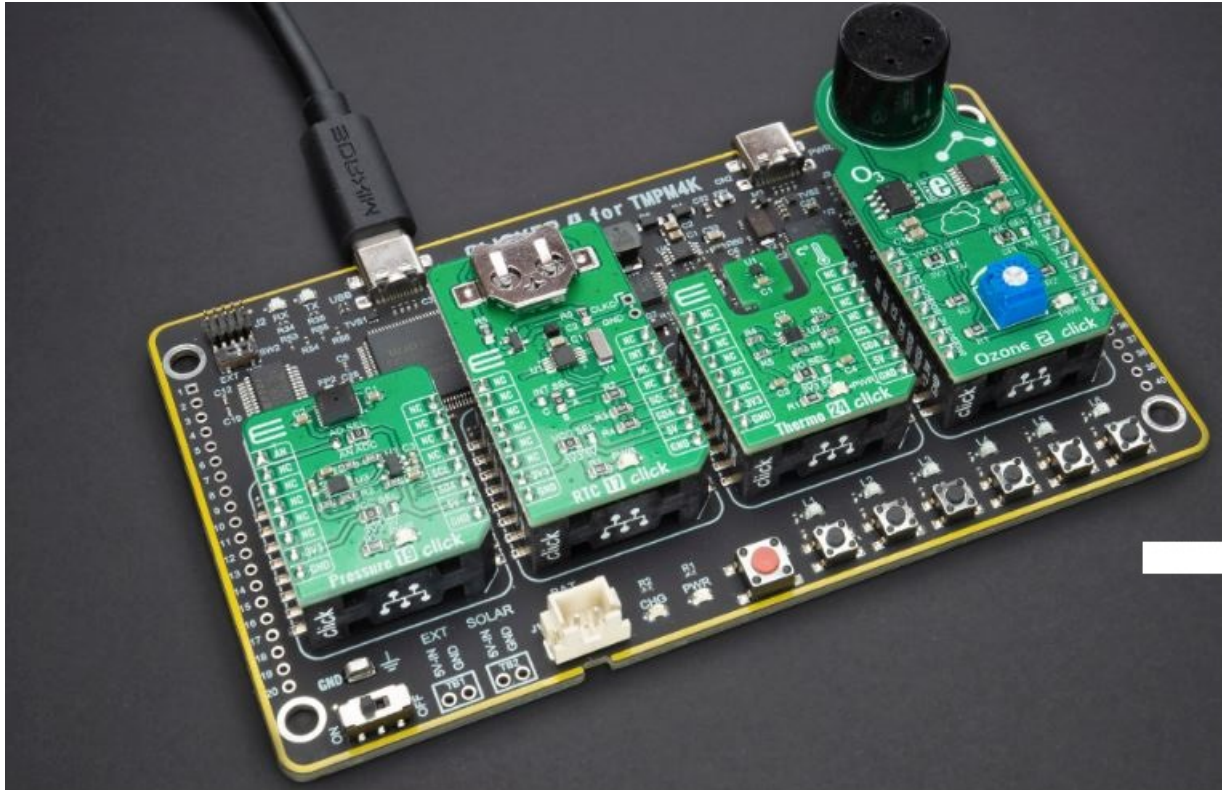


Clicker 4 offers a variety of connectivity options including USB-UART, four standardized mikroBUS™ sockets, and two 1×20 pin headers which are used to directly access the host MCU pins. Clicker 4 supports USB to serial UART interface, allowing the development of a wide range of various USB-based applications.

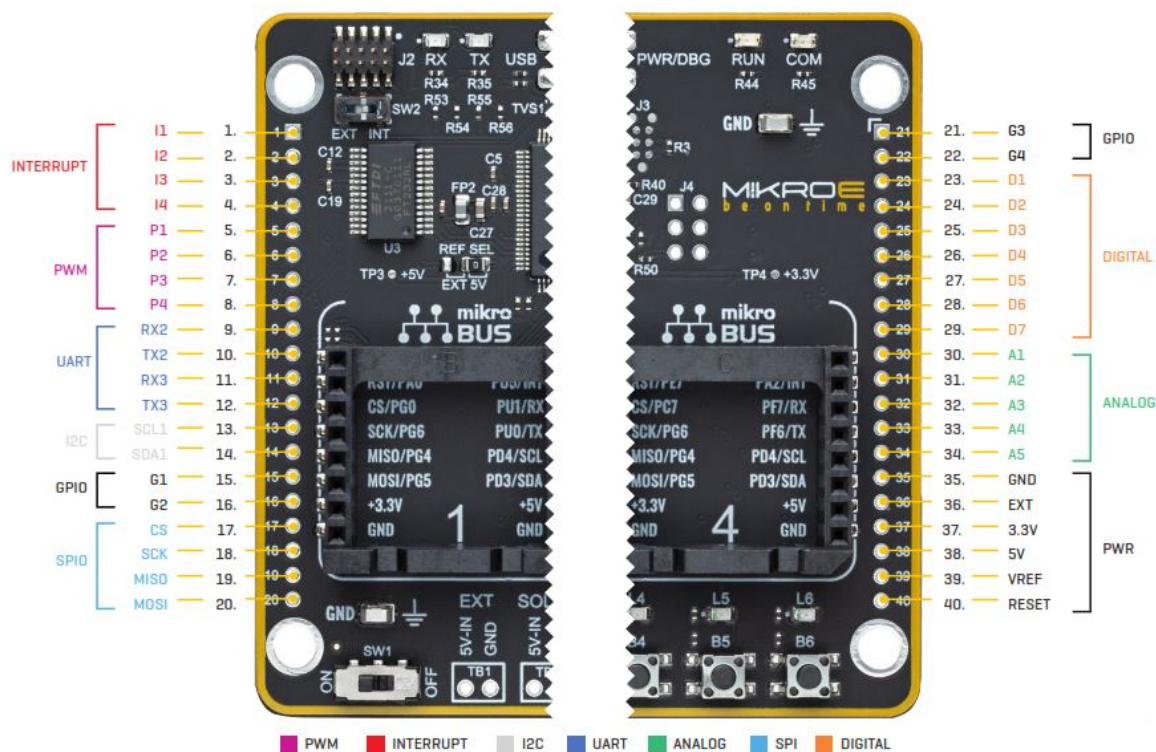

A lot of the host MCU pins are routed to two 1×20 pin headers, making them available for further connectivity. In addition to MCU pins, some additional peripheral pins are also routed to this header.

Click boards

THE LARGEST ADD-ON BOARD COLLECTION IN THE WORLD.

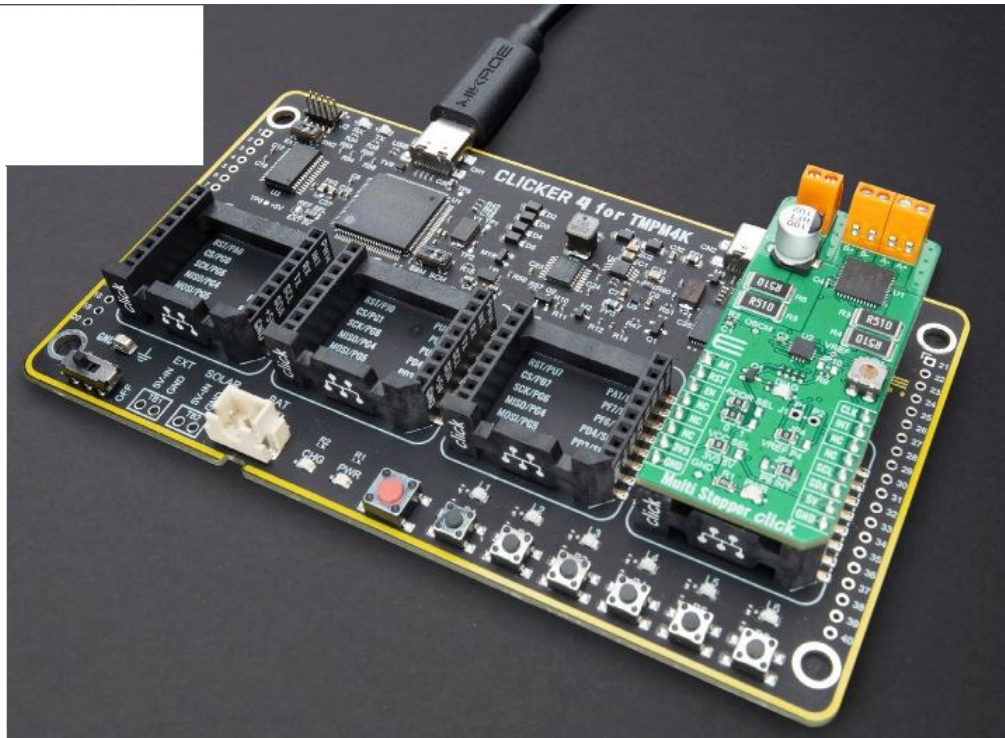

Click boards™ are standardized add-on boards that carry a variety of different electronic devices. They are designed to perfectly fit the mikroBUS™ socket. Engineered to deliver the best performances for the used components, they save developers of testing and troubleshooting often associated with the prototyping phase. They enhance rapid development and accelerate time to market. These ready-to-use boards require no additional hardware configuration. More information at www.mikroe.com/click

DISCLAIMER

All the products owned by MikroElektronika are protected by copyright law and international copyright treaty. Therefore, this manual is to be treated as any other copyright material. No part of this manual, including product and software described herein, must be reproduced, stored in a retrieval system, translated or transmitted in any form or by any means, without the prior written permission of MikroElektronika. The manual PDF edition can be printed for private or local use, but not for distribution. Any modification of this manual is prohibited. MikroElektronika provides this manual 'as is' without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties or conditions of merchantability or fitness for a particular purpose. MikroElektronika shall assume no responsibility or liability for any errors, omissions and inaccuracies that may appear in this manual. In no event shall MikroElektronika, its directors, officers, employees or distributors be liable for any indirect, specific, incidental or consequential damages (including damages for loss of business profits and business information, business interruption or any other pecuniary loss) arising out of the use of this manual or product, even if MikroElektronika has been advised of the possibility of such damages. MikroElektronika reserves the right to change information contained in this manual at any time without prior notice, if necessary.

HIGH RISK ACTIVITIES

The products of MikroElektronika are not fault – tolerant nor designed, manufactured or intended for use or resale as on – line control equipment in hazardous environments requiring fail – safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines or weapons systems in which the failure of Software could lead directly to death, personal injury or severe physical or environmental damage ('High Risk Activities'). MikroElektronika and its suppliers specifically disclaim any expressed or implied warranty of fitness for High Risk Activities.

TRADEMARKS

The MikroElektronika name and logo, the MikroElektronika logo, mikroC, mikroBasic, mikroPascal, mikroProg, mikromedia, Fusion, Click boards ™ and mikroBUS ™ are trademarks of MikroElektronika. All other trademarks mentioned herein are property of their respective companies. All other product and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are only used for identification or explanation and to the owners' benefit, with no intent to infringe. Copyright © MikroElektronika, 2022, All Rights Reserved.

If you want to learn more about our products, please visit our website at www.mikroe.com
If you are experiencing some problems with any of our products or just need additional information, please place your ticket at www.mikroe.com/support
If you have any questions, comments or business proposals, do not hesitate to contact us at office@mikroe.com

Documents / Resources

	MIKROE TPM4K Clicker 4 Development Kits [pdf] User Manual TPM4K, Clicker 4 Development Kits, Development Kits, TPM4K, Clicker 4
---	--

References

- [☰ Click Boards - MIKROE](#)
- [☰ MikroElektronika support is here to help - MIKROE](#)