



MikroTik Cube 60Pro Wireless Wire Cube Pro kit User Guide

[Home](#) » [Mikrotik](#) » MikroTik Cube 60Pro Wireless Wire Cube Pro kit User Guide

Contents

- [1 MikroTik Cube 60Pro Wireless Wire Cube Pro kit User Guide](#)
- [2 Quick Guide](#)
- [3 First steps:](#)
- [4 Safety Information:](#)
- [5 Exposure to Radio Frequency Radiation:](#)
- [6 Read More About This Manual & Download PDF:](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

MikroTik Cube 60Pro Wireless Wire Cube Pro kit User Guide



Quick Guide

This device needs to be upgraded to RouterOS v6.49 or the latest version to ensure compliance with local authority regulations!

It is the end users' responsibility to follow local country regulations, including operation within legal frequency channels, output power, cabling requirements, and Dynamic Frequency Selection (DFS) requirements. All MikroTik radio devices must be installed according to instructions

This "Cube 60Pro" series Quick Guide covers models: CubeG-5ac60ay (Cube 60Pro ac), CubeG-5ac60ay-SA (CubeSA 60Pro ac), CubeG-5ac60aypair (Wireless Wire Cube Pro).

This is a wireless network device. You can find the product model name on the case label (ID). Please visit the user manual page on <https://mt.lv/um> for the full up-to-date user manual. Or scan the QR code with your mobile phone.

The most relevant technical specifications for this product can be found on the last page of this Quick Guide.

Technical specifications, brochures, and more info about products at <https://mikrotik.com/products>

Configuration manual for software in your language with additional information can be found at <https://mt.lv/help>

If you need help with configuration, please seek a consultant <https://mikrotik.com/consultants>



First steps:

- Connect the device to the included PoE injector with Ethernet cable;
- Connect the PoE injector into the PC or to the network switch;
- Connect the power adapter to the PoE injector;
- Download WinBox configuration tool <https://mt.lv/winbox>;
- Open WinBox and connect to the device;
- Default IP: 192.168.88.1, user name: admin, for the paired models IP: 192.168.88.2/192.168.88.3, please find the password on the sticker;
- Download the latest RouterOS software from <https://mikrotik.com/download>;
- Choose ARM packages, and save them to your PC;
- Open WinBox and upload downloaded packages, drag and drop into any windows;
- Restart the device;
- Connect again and in the QuickSet menu set your Country, to apply country regulation settings;
- Secure your device and set a strong password.

Safety Information:

- Before you work on any MikroTik equipment, be aware of the hazards involved with electrical circuitry, and be familiar with standard practices for preventing accidents. The installer should be familiar with network structures, terms, and concepts.
- Use only the power supply and accessories approved by the manufacturer, and which can be found in the

original packaging of this product.

- This equipment is to be installed by trained and qualified personnel, as per these installation instructions. The installer is responsible for making sure, that the
- Installation of the equipment is compliant with local and national electrical codes. Do not attempt to disassemble, repair, or modify the device.
- This product is intended to be mounted outdoors on a pole but can also be installed indoors. Please read the mounting instructions carefully before beginning installation. Failure to use the correct hardware and configuration or to follow the correct procedures could result in a hazardous situation for people and damage to the system.
- We cannot guarantee that no accidents or damage will occur due to the improper use of the device. Please use this product with care and operate at your own risk!
- In the case of device failure, please disconnect it from power. The fastest way to do so is by unplugging the power adapter from the power outlet.
- This is a Class A product. In a domestic environment, this product might cause radio interference in which case the user might be required to take adequate measures!


Exposure to Radio Frequency Radiation:

This MikroTik equipment complies with the FCC, IC, and European Union radiation exposure limits set forth for an uncontrolled environment. This MikroTik device should be installed and operated no closer than 20 centimeters from your body, occupational user, or the general public.

Manufacturer: Mikrotiks SIA, Brivibas gatve 214i Riga, Latvia, LV1039.

Read More About This Manual & Download PDF:

Documents / Resources

	<p>MikroTik Cube 60Pro Wireless Wire Cube Pro kit [pdf] User Guide CB5A60Y, TV7CB5A60Y, cb5a60y, Cube 60Pro Wireless Wire Cube Pro kit, Cube 60Pro, Wireless Wire Cube Pro kit, Wire Cube Pro kit, Cube Pro kit, Pro kit</p>
---	--