



MikroTik RB5009UPr+S+OUT Network Device User Guide

[Home](#) » [Mikrotik](#) » MikroTik RB5009UPr+S+OUT Network Device User Guide 

Contents

- [1 MikroTik RB5009UPr+S+OUT Network Device](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Instructions](#)
- [5 Safety Information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



MikroTik RB5009UPr+S+OUT Network Device



Product Information

This device is a MikroTik RB5009UPr+S+OUT. It needs to be upgraded to v7.7 or the latest software version to ensure compliance with local authority regulations. It is the end users' responsibility to follow local country regulations. All MikroTik devices must be professionally installed.

Product Usage Instructions

1. Connect the device to your ISP using an Ethernet cable.
2. Connect your computer to the device using an Ethernet cable.
3. Open the WinBox application and enter the IP address 192.168.88.1 in the address field.
4. Enter the username "admin" and leave the password field blank (unless changed).
5. Once logged in, you can configure the device using the WinBox or WebFig interfaces.
6. For further assistance, refer to the MikroTik user manual available at <https://mt.lv/um-bg> or visit the MikroTik help page at <https://mt.lv/help-bg>.
7. If professional installation is required, you can find certified consultants at <https://mikrotik.com/consultants>.

Instructions

This device needs to be upgraded to v7.7 or the latest software version to ensure compliance with local authority

regulations! It is the end users' responsibility to follow local country regulation. All MikroTik devices must be professionally installed.

- This Quick Guide covers the model: RB5009UPr+S+OUT.
- This is a Network Device. You can find the product model name on the case label (ID).

Please visit the user manual page on <https://mt.lv/um> for the full up Or scan the QR code with your mobile phone.



The most relevant technical specifications for this product can be found on the last page of this Quick Guide. Technical specifications, Full EU Declaration of Conformity, brochures, and more info about products at <https://mikrotik.com/products> Configuration manual for software in your language with additional information can be found at <https://mt.lv/help> MikroTik devices are for professional use. If you do not have qualifications please seek a consultant <https://mikrotik.com/consultants>

First steps

- Make sure your ISP is allowing hardware change and will automatically issue an IP address.
- Connect your ISP cable to the first Ethernet port.
- Connect your PC to any of the Ethernet ports.
- Connect the device to the power source.
- Use a Web browser or Win Box to connect to the default IP address of 192.168.88.1 from any port, with the username admin and no password (or, for some models, check user and wireless passwords on the sticker).
- If IP is not available, download Win Box from our webpage and use it to connect through MAC address.
- Update RouterOS software to the latest version, and make sure that the device has an internet connection.
- If the device does not have an internet connection update software by downloading the latest version from our webpage <https://mikrotik.com/download> Find the latest software and choose your packages.
- To get the architecture type of your device model, open Win Box, Web Fig go to (System/Resources).
- Download packages to the PC and upload them to the Win Box, Web Fig, (Files) menu, and reboot the device.
- Set up your password to secure the device.

Safety Information

- Before you work on any MikroTik equipment, be aware of the hazards involved with electrical circuitry, and be familiar with standard practices for preventing accidents. The installer should be familiar with network structures, terms, and concepts.
- Use only accessories approved by the manufacturer, and which can be found in the original packaging of this product.
- This equipment is to be installed by trained and qualified personnel, as per these installation instructions. The installer is responsible for making sure, that the Installation of the equipment is compliant with local and


national electrical codes. Do not attempt to disassemble, repair, or modify the device.

- This product is intended to be mounted outdoors on a pole. Please read the mounting instructions carefully before beginning installation. Failure to use the correct hardware and configuration or to follow the correct procedures could
- result in a hazardous situation for people and damage to the system.
- When powering the device using a DC power adapter, the length of the DC cable shall not exceed 3 meters.
- We cannot guarantee that no accidents or damage will occur due to the improper use of the device. Please use this product with care and operate at your own risk!
- In the case of device failure, please disconnect it from power. The fastest way to do so is by unplugging the power adapter from the power outlet.
- This is a Class A product. In a domestic environment, this product might cause radio interference in which case the user might be required to take adequate measures.








Manufacturer: Mikrotikls SIA, Unijas 2, Riga, Latvia, LV1039.

Note: For some models, check the user and wireless passwords on the sticker.

Documents / Resources

	<p>MikroTik RB5009UPr+S+OUT Network Device [pdf] User Guide RB5009UPr S OUT, RB5009UPr S OUT Network Device, Network Device, Device</p>
---	---

References

-  [MikroTik Routers and Wireless - Software](#)
-  [User Manuals - User manuals - MikroTik Documentation](#)
-  [MikroTik Routers and Wireless](#)
-  [MikroTik Routers and Wireless - Buy](#)
-  [MikroTik Routers and Wireless - Support](#)
-  [MikroTik Routers and Wireless - Software](#)
-  [MikroTik Routers and Wireless - Products](#)