



MIKSTER LCT-02 Temperature Sensor Owner's Manual

[Home](#) » [MIKSTER](#) » MIKSTER LCT-02 Temperature Sensor Owner's Manual 

Contents

- [1 MIKSTER LCT-02 Temperature Sensor Owner's Manual](#)
 - [1.1 Technical Data](#)
 - [1.2 Description](#)
 - [1.3 External Dimensions](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

MIKSTER LCT-02 Temperature Sensor Owner's Manual




Technical Data

| | |
|--------------------------------|--|
| Power | <i>Transmission line OneWire</i> |
| Data communication | <i>OneWire (2 wire)</i> |
| Measuring element: | <i>Digital sensor</i> |
| Temperature measuring range: | <i>-40°C .. 70°C</i> |
| Temperature measurement error: | <i>≤ ±0.5 °C over the entire range</i> |
| Operating conditions: | <i>Temperature: -40 °C ÷ 70 °C Humidity: 0%RH ÷ 100%R.</i> |
| Installation data | |
| External dimensions | <i>51x50x38mm (W x H x D) without chokes and probes</i> |
| Weight | <i>0.8 kg</i> |
| Fixing | <i>can be screwed in</i> |
| Degree of protection | <i>IP65</i> |


Description

LCT 02 sensor – designed for temperature measurements in trailers or refrigerated trucks. Sensor casing adapted to wall mounting, communication with Loggicar C recorder by wire in OneWire system. It is recommended to use LCT 02 sensor when there is a need to monitor up to 4 measuring points.

External Dimensions

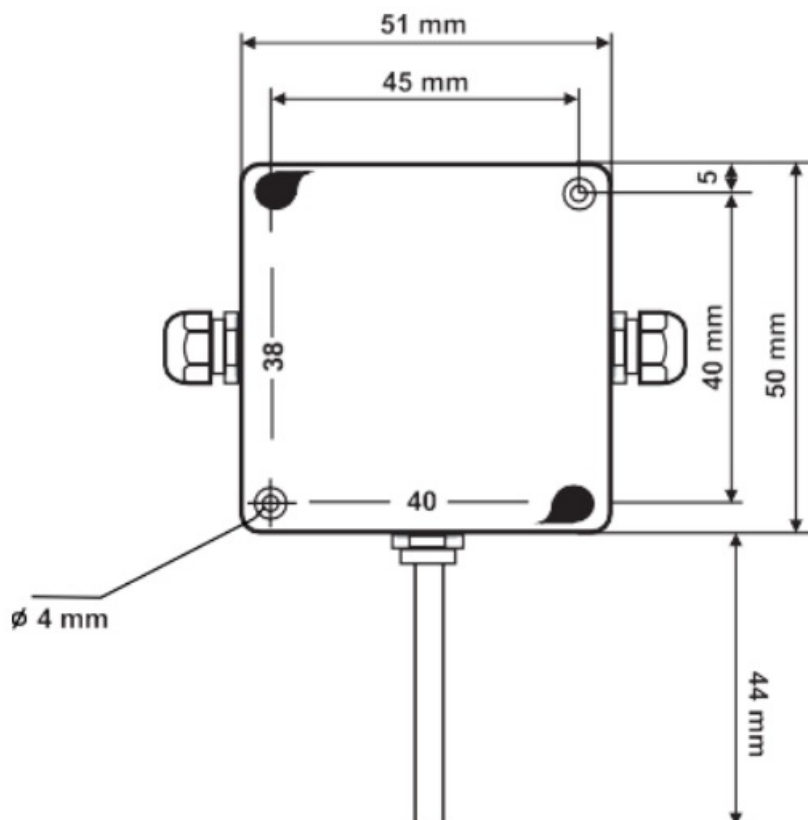

Documents / Resources

| | |
|---|---|
|  | <p>MIKSTER LCT-02 Temperature Sensor [pdf] Owner's Manual LCT-02 Temperature Sensor, LCT-02, Temperature Sensor, Sensor</p> |
|---|---|

References

- [Forpsi.com](#)
- [Forpsi.com](#)