



Milesight UC100 LoRaWAN IoT Controller User Guide

[Home](#) » [Milesight](#) » Milesight UC100 LoRaWAN IoT Controller User Guide 

Contents

- 1 Milesight UC100 LoRaWAN IoT Controller
- 2 Safety Precautions
- 3 Product Introduction
 - 3.1 Overview
 - 3.2 Features
- 4 Hardware Introduction
 - 4.1 Packing List
 - 4.2 Hardware Overview
 - 4.3 LED Patterns and Reset Button
 - 4.4 Dimensions (mm)
- 5 Device Installation
- 6 Operation Guide
 - 6.1 Log in the ToolBox
 - 6.2 LoRaWAN Settings
 - 6.3 General Setting
 - 6.4 IF-THEN Command
 - 6.5 Maintenance
- 7 Device Payload
- 8 Documents / Resources
- 9 Related Posts





Safety Precautions

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- The device must not be remodeled in any way.
- Do not place the device close to objects with naked flames.
- Do not place the device where the temperature is below/above the operating range.
- Power off the device when installing or wiring.
- Make sure electronic components do not drop out of the enclosure while opening.
- The device must never be subjected to shocks or impacts

Declaration of Conformity

UC100 is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does


cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: — Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver. — Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help.

3FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Copyright © 2011-2022 Milesight. All rights reserved.

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.

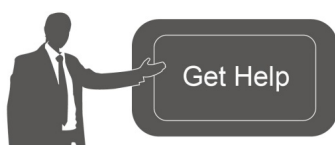

For assistance, please contact

Milesight technical support:

Email: iot.support@milesight.com

Tel: 86-592-5085280

Fax: 86-592-5023065

Address: Building C09, Software Park III, Xiamen 361024, China

Revision History

Date	Doc Version	Description
May 27, 2022	V 1.0	Initial version

Product Introduction

Overview

UC100 is an IoT controller used for remote control and data acquisition from Modbus RS485 devices via LoRa WAN® networks. It can read up to 16 Modbus RTU devices and support Modbus transparent transmission between server and RS485 devices as a Modbus to LoRaWAN® converter. Besides, UC100 supports multiple trigger conditions and actions which can work autonomously even when the network drops.

Features

- Easy to connect with diverse wired sensors through RS485 interfaces
- Support LoRaWAN® wireless communication


- Multiple triggering conditions and actions
- Embedded watchdog for work stability
- Industrial metal case design with a wide operating temperature range
- Compliant with standard LoRaWAN® gateways and network servers
- Quick and easy management with Milesight IoT Cloud solution

Hardware Introduction


Packing List




1 × UC100 Device

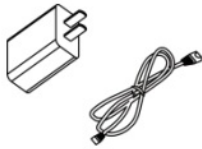

1 × Type-C Cable
& Power Adapter

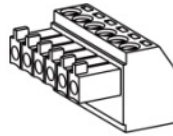

1 × Terminal
Block

 

2 × Wall Mounting
Kits




1 × Quick Guide



If any of the above items are missing or damaged, please contact your sales representative.

Hardware Overview

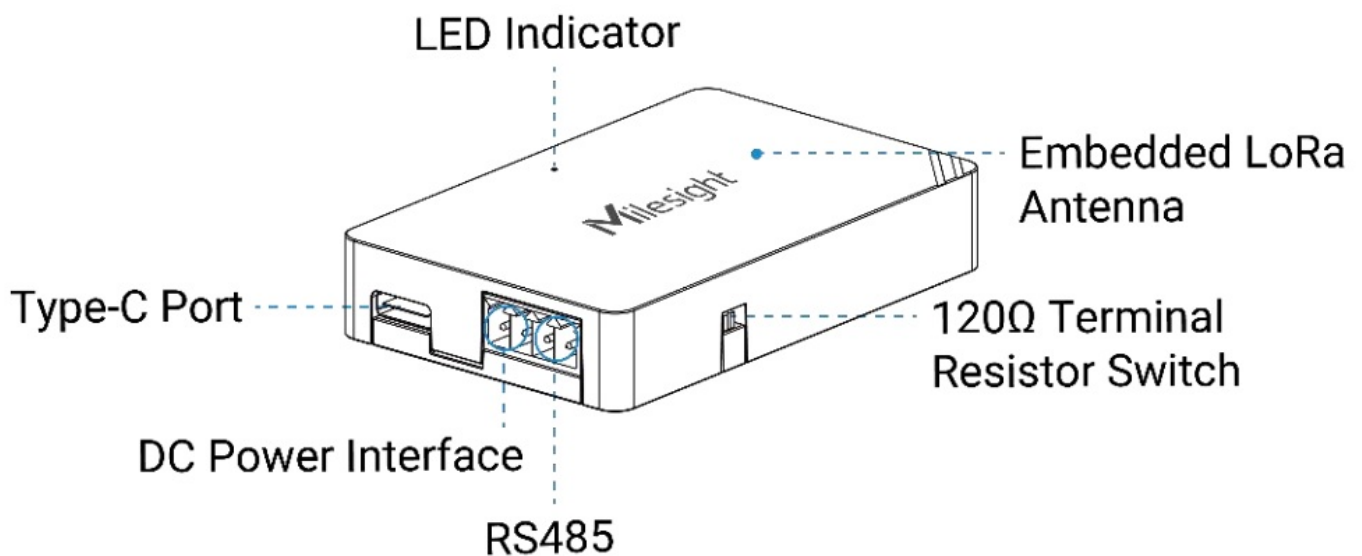


LED Patterns and Reset Button

The reset button is inside the device.

Device Status	LED Status
System is functioning properly	Static On
Reboot: hold the reset button inside the device for more than 3 seconds	Static On → Slowly Blinks
Reset to factory default: hold the reset button inside the device for more than 10 seconds	Static On → Quickly Blinks
Fail to acquire data from data interfaces	Slowly Blinks
Device upgrade or system error	Static On


Dimensions (mm)

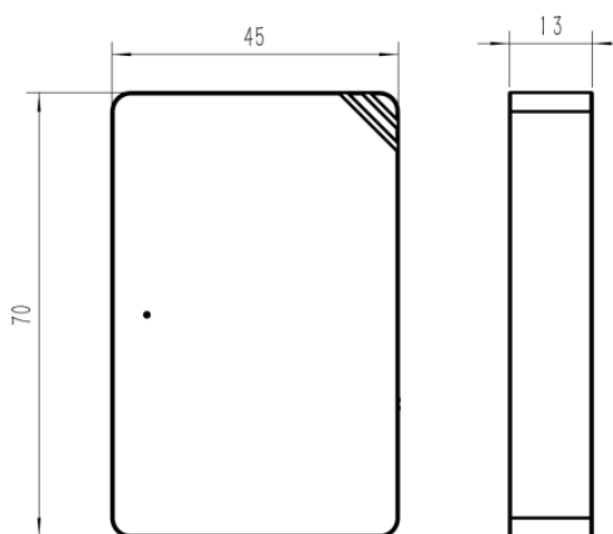


Device Installation

UC100 device can be placed on a desktop or mounted to a wall.

1. Take off the back cover of UC100 device, and fix the wall plugs into the wall according to the drilling position as referred.

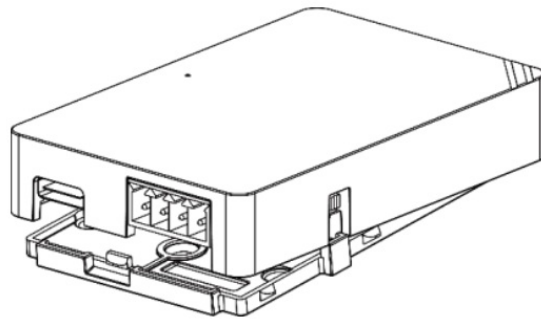


2. Screw the cover on the mounting positions and install back the device.

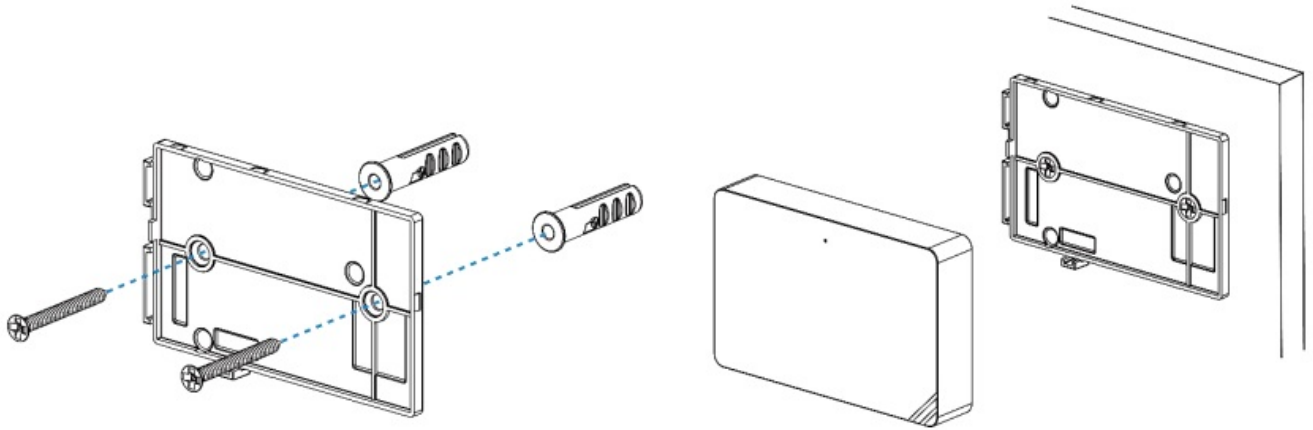

Operation Guide

Log in the ToolBox

1. Download ToolBox software from Milesight IoT website.
2. Power on the UC100 device, then connect it to computer via the type-C port

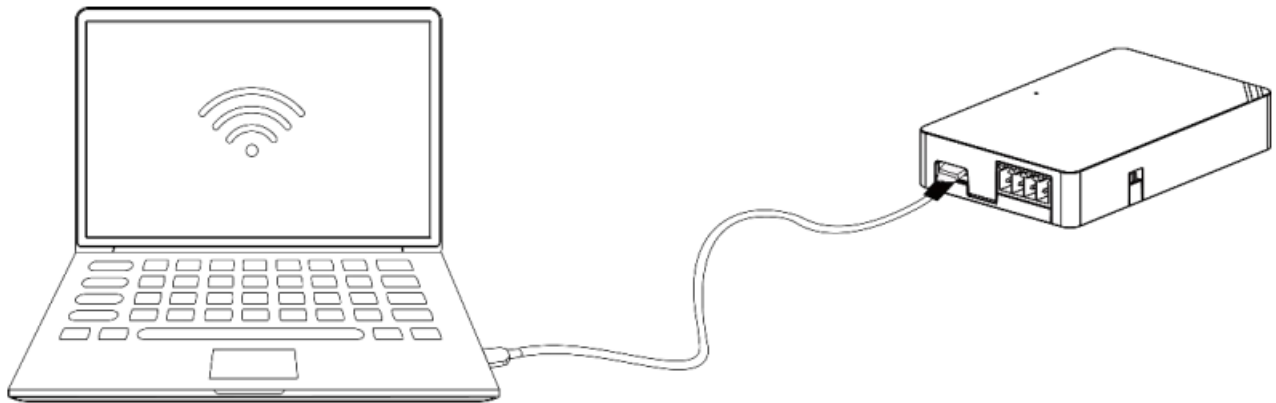

3. Open the ToolBox and select type as "General", then click password to log in ToolBox. (Default password: 123456)

ToolBox Settings

×

Type

General

Serial port

COM4

Login password

Baud rate

115200

Data bits

8

Parity bits

None

Stop bits

1

Save

Cancel

4. After logging in the ToolBox, you can change device settings.

Status >

Model:	UC100-915M
Serial Number:	6468C15002130004
Device EUI:	24e124468c150021
Firmware Version:	01.01
Hardware Version:	1.0
Join Status:	De-Activate
RSSI/SNR:	0/0
Channel Mask:	ffffffffffff
Uplink Frame-counter:	0
Downlink Frame-counter:	0

LoRaWAN Settings

Go to “**LoRaWAN Settings -> Basic**” to configure join type, App EUI, App Key and other information. You can also keep all settings by default.

Device EUI	<input type="text" value="24E124445B434113"/>
App EUI	<input type="text" value="24E124C0002A0001"/>
Application Port	<input type="text" value="85"/>
Join Type	<input type="text" value="OTAA"/>
Class Type	<input type="text" value="Class C"/>
Application Key	<input type="text" value="*****"/>
RX2 Data Rate	<input type="text" value="DR0 (SF12, 125 kHz)"/>
RX2 Frequency	<input type="text" value="505300000"/>
Spread Factor	<input type="text" value="SF10-DR2"/>
Confirmed Mode	<input type="checkbox"/>
Rejoin Mode	<input checked="" type="checkbox"/>
Set the number of packets sent	<input type="text" value="32"/> packets
ADR Mode	<input checked="" type="checkbox"/>
TXPower	<input type="text" value="TXPower0-19.15 dBm"/>

Parameters	Description
Device EUI	Unique ID of the device on the label.
App EUI	Default App EUI is 24E124C0002A0001.
Application Port	The port is used for sending and receiving data, the default port is 85.
Working Mode	Fixed as Class C.
Join Type	OTAA and ABP modes are available.
Application Key	Appkey for OTAA mode, default is 5572404C696E6B4C6F52613230313823.
Device Address	DevAddr for ABP mode, default is the 5th to 12th digits of SN.
Network Session Key	Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
Application Session Key	Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
RX2 Data Rate	RX2 data rate to receive downlinks.
RX2 Frequency	RX2 frequency to receive downlinks. Unit: Hz
Spread Factor	If ADR is disabled, the device will send data via this spread factor.
Confirmed Mode	If the device does not receive ACK packet from network server, it will resend data 3 times at most.

Rejoin Mode	Reporting interval ≤ 30 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every 30 mins to validate connectivity; If there is no response, the device will re-join the network. Reporting interval > 30 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval to validate connectivity; If there is no response, the device will re-join the network.
Set the number of packets sent	When rejoin mode is enabled, set the number of LinkCheckReq packets sent.
ADR Mode	Allow the network server to adjust datarate of the device.
Tx Power	Transmit power of device.

Note

1. Please contact sales for device EUI list if there are many units.
2. Please contact sales if you need random App keys before purchasing.
3. Select OTAA mode if you use Milesight IoT Cloud to manage devices.
4. Only OTAA mode supports rejoin mode.

LoRaWAN Frequency Settings:

Go to “LoRaWAN Settings -> Channel” to select supported frequency and select channels to send uplinks. Make sure the channels match what you set in the LoRaWAN® gateway.

<input type="checkbox"/>	Index	Frequency/MHz	Max Datarate	Min Datarate
<input checked="" type="checkbox"/>	0	868.1	5-SF7BW125	0-SF12BW125
<input checked="" type="checkbox"/>	1	868.3	5-SF7BW125	0-SF12BW125
<input checked="" type="checkbox"/>	2	868.5	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	3	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	4	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	5	0	5-SF7BW125	0-SF12BW125
<input type="checkbox"/>	6	0	5-SF7BW125	0-SF12BW125

If frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

Examples:

- 1, 40: Enabling Channel 1 and Channel 40
- 1-40: Enabling Channel 1 to Channel 40
- 1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60
- All: Enabling all channels
- Null: Indicates that all channels are disabled

Support Frequency : AU915

Enabled Channel Index: 0-71

Channel Index	Frequency/MHz	Channel Spacing/MHz	BW/kHz
0 - 15	915.2 - 918.2	0.2	125
16 - 31	918.4 - 921.4	0.2	125
32 - 47	921.6 - 924.6	0.2	125
48 - 63	924.8 - 927.8	0.2	125
64 - 71	915.9 - 927.1	1.6	500

General Setting

Basic Setting

Device ID: 6445C06166800001

Reporting Interval(min): 20

LoRa D2D: ☐

D2D Key: *****

Change Password: ☐

Parameters	Description
Device ID	Show the SN of the device.
Reporting Interval	Reporting interval of transmitting data to the network server. Range: 1-1080 mins, default: 20 mins
LoRa D2D	See details on chapter 4.5.
Change Password	Change the password to log in ToolBox.

RS485 Settings

UC100 has one RS485 port for Modbus RTU device connection.

1. Connect RS485 device to RS485 port.
2. Go to "General -> RS485" to enable RS485 and configure serial port settings. Serial port settings should be the same as the RS485 terminal devices.

Basic

RS485

Stop Bit

1 bits

Data Bit

8 bits

Parity

None

Baud Rate

9600

Execution Interval (ms)

50


Max Resp Time (ms)

500

Max Retry Times


3

Modbus RS485 bridge LoRaWAN




☒

Port



0

Parameters	Description
Stop Bit	1 bit/2 bit are available.
Data Bit	8 bit is available.
Parity	None, Odd and Even are available.
Baud Rate	1200/2400/4800/9600/19200/38400/57600/115200 are available.
Execution Interval (ms)	The execution interval between each Modbus channel command.
Max Resp Time (ms)	The maximum response time that the UC100 waits for the reply to the command. If it does not get a response after the max response time, it is determined that the command has timed out.
Max Retry Time (ms)	Set the maximum retry times after the device fails to read data from RS485 terminal devices.
Modbus RS485 bridge LoRaWAN	If this mode is enabled, the device will transmit Modbus RTU commands from the network server to RS485 terminal devices transparently and send Modbus reply originally back to the network server.
	Port: Select from 2-84, 86-223.

3. Click  to add Modbus channels, then save configurations.

Channel Settings
Fetch All

Channel ID	Name	Slave ID	Address	Quantity	Type	Byte Order	Sign	Value		
1	1	1	0	1	Input Register(INT16)	AB	<input type="checkbox"/>		<input checked="" type="checkbox"/>	Fetch
2	test	255	535	2	Coil		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	Fetch

Save
Up to 16 channels

Parameters	Description																						
Channel ID	Select the channel ID you want to configure from 16 channels.																						
Name	Customize the name to identify every Modbus channel.																						
Slave ID	Set Modbus slave ID of a terminal device.																						
Address	The starting address for reading.																						
Quantity	Set read how many digits from starting address, it fixes to 1.																						
Type	Select the data type of Modbus channels.																						
Byte Order	Set the Modbus data reading order if you configure the type as Input register or holding register. INT32/Float: ABCD, CDBA, BADC, DCBA INT16: AB, BA																						
Sign	The tick indicates that the value has a plus or minus sign.																						
Fetch	After clicking, UC100 will send Modbus read command to test if it can read correct values. Example: as this setting, the device will send command: 01 03 00 00 00 01 84 0A <div><div>Channel Settings</div><table><tr><th>Channel ID</th><th>Name</th><th>Slave ID</th><th>Address</th><th>Quantity</th><th>Type</th><th>Byte Order</th><th>Sign</th><th>Value</th><th></th><th></th></tr><tr><td>1</td><td>temperature</td><td>1</td><td>0</td><td>1</td><td>Holding Register(INT16)</td><td>AB</td><td><input type="checkbox"/></td><td></td><td><input checked="" type="checkbox"/></td><td>Fetch</td></tr></table></div>	Channel ID	Name	Slave ID	Address	Quantity	Type	Byte Order	Sign	Value			1	temperature	1	0	1	Holding Register(INT16)	AB	<input type="checkbox"/>		<input checked="" type="checkbox"/>	Fetch
Channel ID	Name	Slave ID	Address	Quantity	Type	Byte Order	Sign	Value															
1	temperature	1	0	1	Holding Register(INT16)	AB	<input type="checkbox"/>		<input checked="" type="checkbox"/>	Fetch													

4. Click “Fetch” to check if UC100 can read correct data from terminal devices

Channel Settings

Channel ID	Name	Slave ID	Address	Quantity	Type	Byte Order	Sign	Value		
4	C	1	0	1	Input Register(INT16)	AB	<input type="checkbox"/>	21	<input checked="" type="checkbox"/>	Fetch

Note: Do not click “Fetch” frequently since the response time to reply is differ for every terminal device.

IF-THEN Command

UC100 supports configuring locally IF-THEN commands to do some actions automatically even without a network connection. One device can be added 16 commands at most.

1. Go to “Command” page, and click “Edit” to add commands.

Settings > Reboot

Save

ID	Configuration	Edit	Delete
1	If received a d2d control command containing 1234 . then send a modbus command via the rs485 interface and content is 1234 .		
2			
3			
4			
5			

2. Set an IF condition based on the terminal device data or UC100 device status.

Configuration for command NO.1

If

Channel

Alarm(2)

False

Is continued for

0


s

☐ Set lockout time

Condition	Description
Channel	When UC100 device gets certain response (False, True, Above, Below, Within) in certain RS485 channel (Channel Name + Channel ID), this command is triggered. Is continued for: the updated value should last for some time that is longer

	<p>than a sole reporting interval.</p> <p>Set lockout time: after the lockout time, UC100 will check if the latest RS485 response matches the condition still. 0 means this IF condition will only be detected once.</p>
Received a D2D control command	This only works with the LoRa D2D feature enabled. See details on chapter 4.5.

3. Set THEN action according to your request. You can add at most 3 actions

Then 

Content is

Action	Description
Send a LoRaWAN message	Send a custom message to the network server.
Restart the Device	Reboot the device.
Send a D2D control command	This only works with LoRa D2D feature enabled. See details on chapter 4.5.
Send a Modbus command via the RS485 interface	This only works with LoRa D2D feature enabled. See details on chapter 4.5.

LoRa D2D Settings

LoRa D2D protocol is developed by Milesight and used for setting up transmission among Milesight devices without a gateway. When the LoRa D2D setting is enabled, UC100 can work as a LoRa D2D controller to send control commands to other devices or work as a LoRa D2D agent to receive commands to trigger a reboot or message to the network server.

- Go to the “**General -> Basic**” page, enable LoRa D2D feature, and define a unique LoRaD2D key which is the same as LoRa D2D controller or agent devices. (Default LoRaD2DKey: 5572404C696E6B4C6F52613230313823)

Basic

RS485

Device ID

6468C15002130004

Reporting Interval(min)

20

LoRa D2D

☒

D2D Key

Change Password

☐

Save

- Go to **“LoRaWAN Settings -> Basic”** to configure the RX2 datarate and RX2 frequency. When UC100 works as LoRa D2D controller, it will send commands as RX2 settings.

LoRaWAN >

Basic

Channel

App EUI

24E124C0002A0001

Application Port

85

Join Type

OTAA

Class Type

Class C

Application Key

RX2 Date Rate

DR0 (SF12, 125 kHz)

RX2 Frequency

505300000

Spread Factor

SF10-DR2

Confirmed Mode

☐

- Go to **“Command”** page to set corresponding operations. When the RS485 channel triggers, UC100 can work as LoRa D2D controller to send a control command to control the LoRa D2D agent device. The command should be a 2-byte hexadecimal number.

Configuration for command NO.1

If

Channel

Alarm(2)

False

Is continued for

0

s

☐ Set lockout time



Then

Send a D2D control command



Content is

0001

When UC100 receives a LoRa D2D command, it can work as a LoRa D2D agent to reboot the device or send Modbus command to RS485 terminal devices.

Configuration for command NO.1

If

Received a D2D control command

Containing

0002

Then

Send a Modbus command via the RS485 interfa



Content is

010300000001840A

Maintenance

Upgrade

UC100 supports upgrade firmware locally via ToolBox software.

1. Download firmware from www.milesight-iot.com to your PC.
2. Go to **"Maintenance -> Upgrade"**, click "Browse" to import firmware and upgrade the device. You can also click "Up to Date" to search for the latest firmware of the device and upgrade.

Note: Any operation on ToolBox is not allowed during upgrading, otherwise the upgrading will be interrupted, or even the device will break down.

Maintenance >

The screenshot shows the 'Upgrade' tab selected in the 'Maintenance >' section. The interface displays the following information and controls:

Model:	UC100-915M
Firmware Version:	01.01
Hardware Version:	1.0
Domain:	Beijing Server
FOTA:	<button>Up to date</button>
Local Upgrade	<input type="text"/> <button>Browse</button> <button>Upgrade</button>

Backup

UC100 devices support configuration backup for easy and quick device configuration in bulk. Backup is allowed only for devices with the same model and LoRa frequency band.

1. Go to "Maintenance -> Backup and Reset", and click "Export" to save the current configuration as json format backup file.
2. Click "Browse" to select the backup file, then click "Import" to import the configurations.

Upgrade

Backup and Reset

Config Backup

Export

Config File

Browse

Import

Restore Factory Defaults

Reset

Reset to Factory Default

Please select one of following methods to reset device:

Via Hardware: Open the case of UC100, and hold the reset button for more than 10s until theLED blinks.

Via ToolBox Software: Go to "Maintenance -> Backup and Reset" to click "Reset".

Upgrade

Backup and Reset

Config Backup

Export

Config File

Browse

Import

Restore Factory Defaults

Reset

Device Payload

All data are based on the following format (HEX):

Channel1	Type1	Data1	Channel2	Type2	Data2	Channel 3	...
1 Byte	1 Byte	N Bytes	1 Byte	1 Byte	M Bytes	1 Byte	...

Among them, Data field are shown as little endian. For decoder examples, you can find them at <https://github.com/Milesight-IoT/SensorDecoders>.

Device Information

UC100 reports basic device information of device every time joining the network.

Channel	Type	Data Size/Byte	Description
ff	01 (Protocol Version)	1	01 => V1
	09 (Hardware Version)	2	01 20 => V1.2
	0a (Software Version)	2	01 01 => V1.1
	0b (Power event)	1	ff => powered on
	16 (Device SN	8	64 45 B4 34 11 30 00 01 => SN is 64 45 B4 34 11 30 00 01

Example:

ff0bff ff0101 ff166445b43411300001 ff090100 ff0a0101		
Channel	Type	Value
ff	0b (Power Event)	ff (powered on)
ff	01 (Protocol Version)	01 (V1)
ff	16 (Device SN)	64 45 B4 34 11 30 00 01
ff	09 (Hardware Version)	0100 (V1.0)
ff	0a (Software Version)	0101 (V1.1)

Sensor Data

UC100 reports RS485 sensor data according to reporting interval (20 mins by default).

Channel	Type	Byte	Description		
ff	19 (RS485)	Mutable (4-7)	Total: Byte 1+Byte 2+Byte 3+Value Byte 1: Channel ID		
			Byte 2: Data Size		
			Byte 3: Data Type		
				Code	Data Type
				00	Coil
				01	Discrete
				02	Input16
				03	Hold16
				04	Hold32
				05	Hold_float
				06	Input32
				07	Input_float
				08	Input_int32_with upper

					16 bits	
				09	Input_int32_with lower 16 bits	
				0a	Hold_int32_with upper 16 bits	
				0b	Hold_int32_with lower 16 bits	
ff	15 (Modbus collecting exception)	1	Channel ID of failed Modbus collection.			

Note: Channel ID can be configured in ToolBox.

Channel ID	Description
00	RS485 (Modbus Master) Channel 1
01	RS485 (Modbus Master) Channel 2
02	RS485 (Modbus Master) Channel 3
...	...
0f	RS485 (Modbus Master) Channel 16

Examples:

ff 19 07 02 03 15 00					
Channel	Type	Channel ID	Data Size	Data Type	Value
ff	19	07 =>	02 =>	03 => Hold	15 00 =>
	(RS485)	Channel 8	2 bytes	16	00 15 = 21

Note: When data type is holding register or input register, ToolBox can set different byte orders. Take below Modbus register response from RS485 sensors as example:





Register Address	Value (Hex)
0	00 15
1	00 20

When using different byte orders, you can use ToolBox to fetch different results, and the device will upload data with little endian order.

Data Type	Byte Order	Fetch Result	Uplink (HEX)
Holding/Input Register (INT16)	AB	21 (0x15)	15 00 (BA)
	BA	5376 (0x1500)	00 15 (AB)
Holding/Input Register (INT32)	ABCD	1376288 (0x00150020)	20 00 15 00 (DCBA)
	CDAB	2097173 (0x00200015)	15 00 20 00 (BADC)
	BADC	352329728 (0x15002000)	00 20 00 15 (CDAB)

	DCBA	536876288 (0x20001500)	00 15 00 20 (ABCD)
Holding/Input Register (INT32 with upper 16 bits)	/	21 (0x15)	15 00 00 00
Holding/Input Register (INT32 with lower 16 bits)	/	32 (0x20)	20 00 00 00

If UC100 fails to connect the Modbus data, it will send an error message.

Channel ID	Name	Slave ID	Address	Quantity	Type	Byte Order	Sign	Value
1	milesight	1	0	1	Holding Register(INT32)	CDAB	<input type="checkbox"/>	<input type="text"/>    

ff 15 00		
Channel	Type	Value
ff	15 (Poll Failed)	00 => Channel 1

Downlink Command

UC100 supports downlink commands to configure the device. The application port is 85 by default.

Channel	Type	Description
ff	03(Set Reporting Interval)	2 Bytes, unit: s
	10 (Reboot)	ff (Reserved)

Examples:


1. Reporting Interval

ff 03 b0 04		
Channel	Type	Value
ff	03 (Set Reporting Interval)	b0 04 => 04 b0 = 1200 s = 20 mins

2. Reboot the device

ff 10 ff		
Channel	Type	Reserved
ff	10 (Reboot)	ff

Documents / Resources

	<p>Milesight UC100 LoRaWAN IoT Controller [pdf] User Guide</p> <p>UC100, 2AYHY-UC100, 2AYHYUC100, UC100 LoRaWAN IoT Controller, LoRaWAN IoT Controller, IoT Controller, Controller</p>
---	--