

**Milesight**  
**VE0601-A**  
**VMS**  
**Enterprise**  
**Server**



# Milesight VE0601-A VMS Enterprise Server User Guide

[Home](#) » [Milesight](#) » Milesight VE0601-A VMS Enterprise Server User Guide 

## Contents

- [1 Milesight VE0601-A VMS Enterprise Server](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Packing List](#)
- [5 Hardware Introduction](#)
- [6 Interface](#)
- [7 Installation](#)
- [8 Device Connection Topology](#)
- [9 Specification](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)



## Milesight VE0601-A VMS Enterprise Server



## Product Information

The VE0601-A/VE0602-A is an Enterprise NVR (Network Video Recorder) designed for professional video surveillance applications. It features multiple interfaces for connectivity and supports up to 4\*2.5Gbps LAN for high-speed data transfer.

### Specifications:

- **Model:** VE0601-A/VE0602-A
- **Weight:** 200g + 80g
- **Dimensions:** 120x85mm
- **Model Number:** 43.005.000xx V3.0

## Product Usage Instructions

### 1. Packing List:

Ensure all the following items are included in the package:

- Enterprise NVR x1
- Quick Start Guide x1
- Warranty Card x1
- Power Cord x1
- HDD Screw x28
- Mounting Bracket x2
- Mounting Bracket Screw x8
- SATA Cable x6

### 2. Hardware Introduction:

The hardware includes USB ports, a power button, a DP port, USB 3.0 ports, a power LED, an HDMI port, a CLR CMOS button, LAN ports, an audio port, and power input.

### 3. Installation:

Use a cross screwdriver to remove the screws at the rear panel in an anticlockwise direction.

### FAQ:

- **Q: Where can I download software and files for the VE0601-A/VE0602-A?**

A: All software and files can be downloaded from [here](#).

- **Q: How many LAN ports does the NVR have?**

A: The NVR has 4\*2.5Gbps LAN ports for high-speed connectivity.

 
All software & files can be downloaded from <https://www.milesight.com/support/download/>.



## Packing List



Enterprise NVR  
x1



Quick Start Guide  
x1



Warranty Card  
x1



Power Cord  
x1



HDD Screw  
x28



Mounting Bracket  
x2




Mounting Bracket Screw  
x8




SATA Cable  
x6

## Hardware Introduction

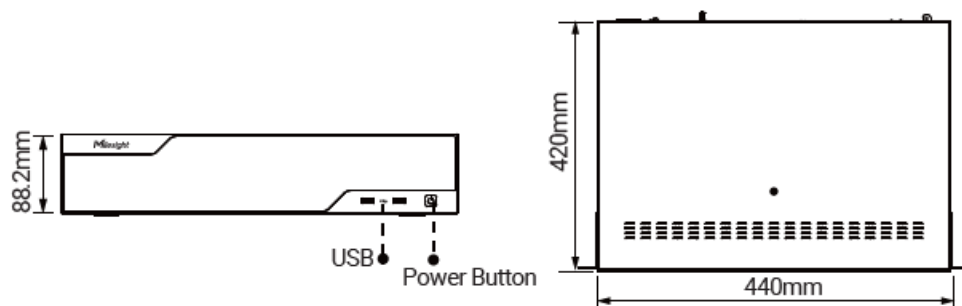

## Interface

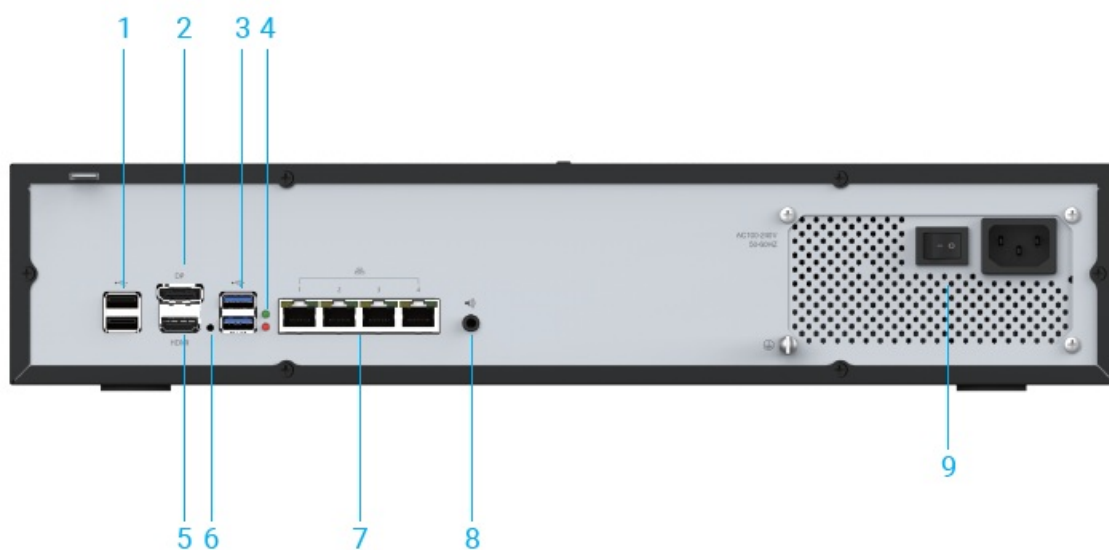


1. USB 2.0

2. DP Port
3. 2\*USB 3.0
4. Power LED
5. HDMI Port
6. CLRCMOS Button
7. 4\*2.5Gbps LAN
8. Audio
9. Power

## Installation


### Step 1:

Using a cross screwdriver to remove the screws at the rear panel in an anticlockwise direction.

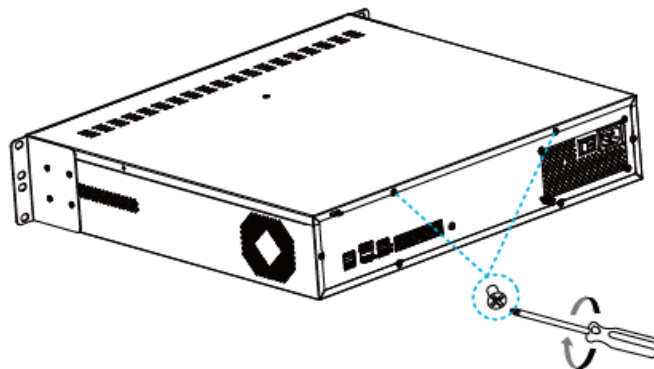


### Step 2:

Slide the upper casing to the right first and lift it up.

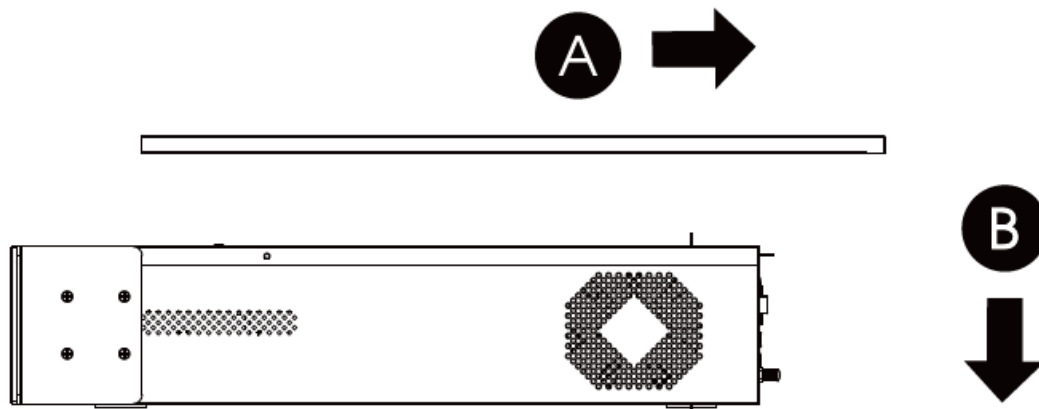


### Step 3:

Using the screwdriver to remove two screws in the middle of the HDD bracket in an anticlockwise direction.

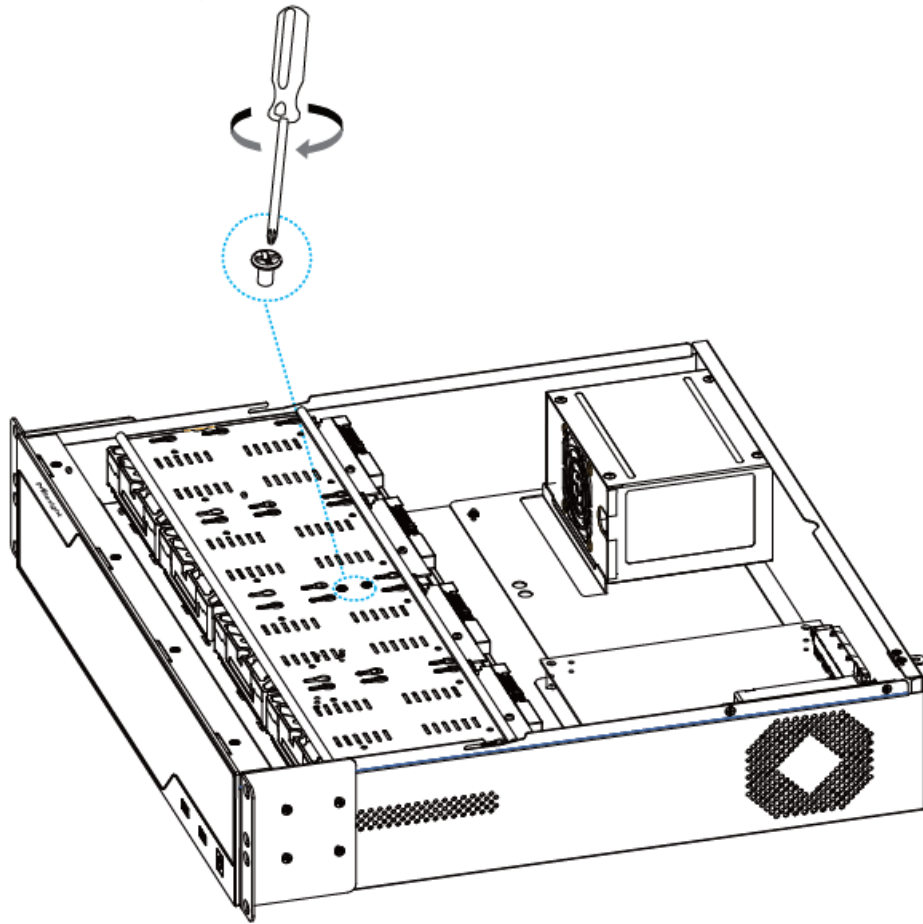


**Step 4:**

The HDD bracket is rotatable and can be taken down by pulling up and rotating one side of it.

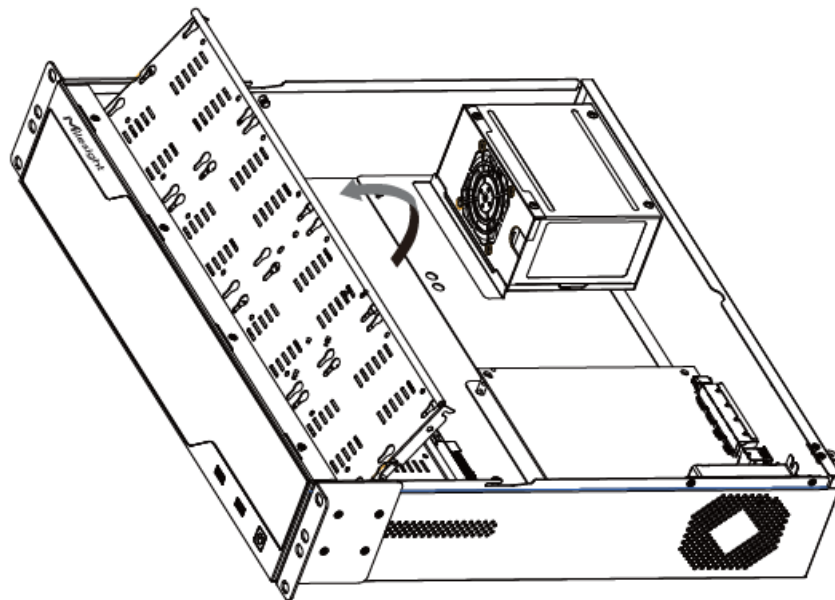


**Step 5:**

Secure the HDD with 4 screws. Don't screw tight and leave about 1mm distance at the side of each screw nut. As the enlarged drawing shows:

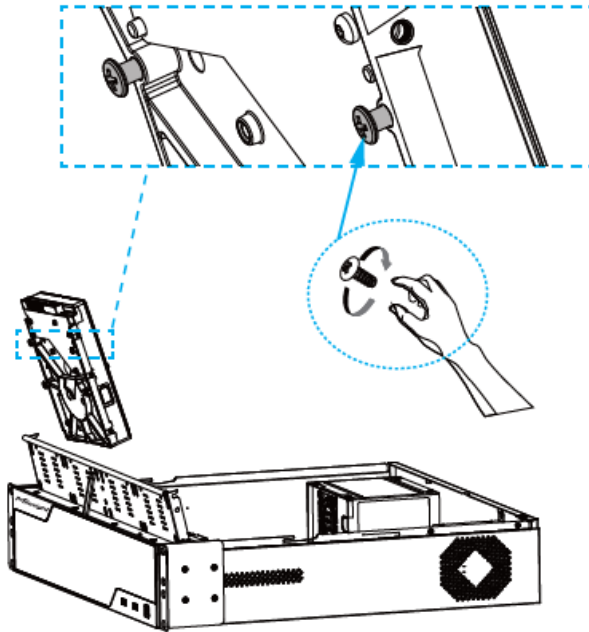


**Step 6:**

After securing each HDD with 4 screws, stuck the side with screw nuts in the bracket's slots and then slide down to fix the HDD in the bracket. Screw tight with screwdriver.

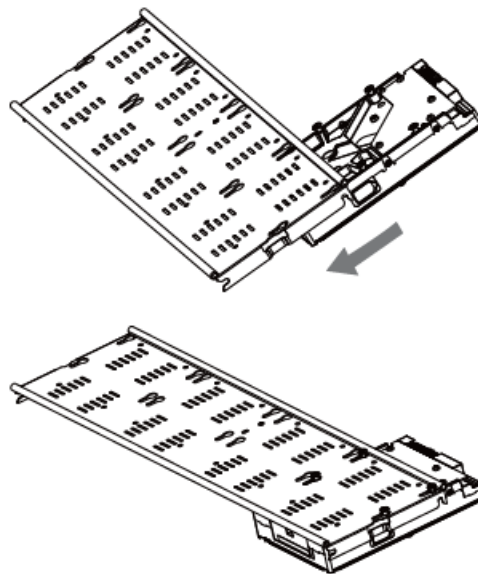


**Step 7:**

Repeat the above steps to install the HDD in the bracket. Remember to check if you have screwed tight.

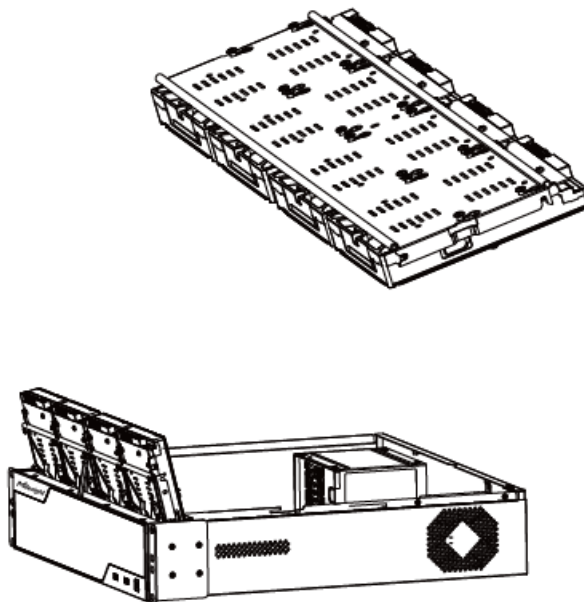


**Step 8:**

Secure the all screws in HDD and fix the bracket with a screw in the middle of it. Then connect the power cable and data cable to each HDD.

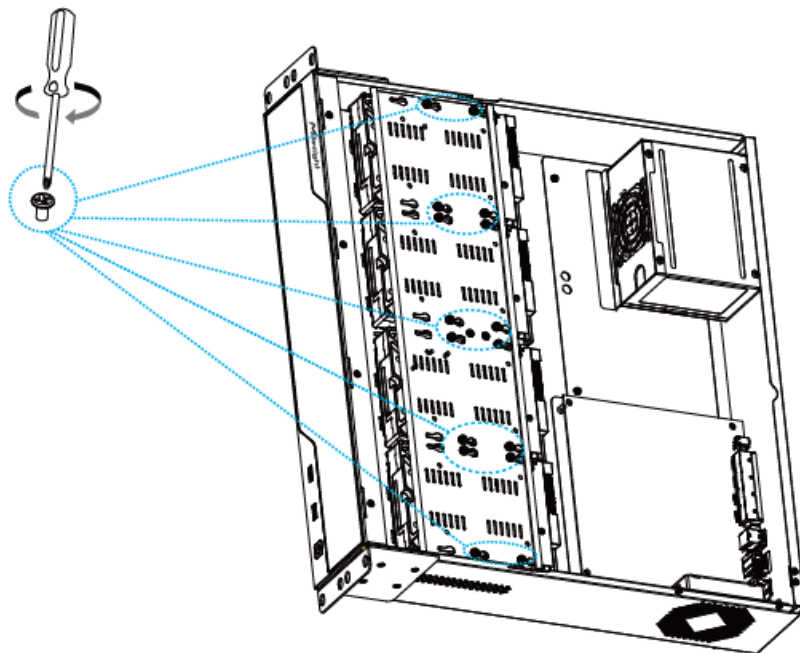


**Step 9:**


Pull down the upper casing and slide it to the left.

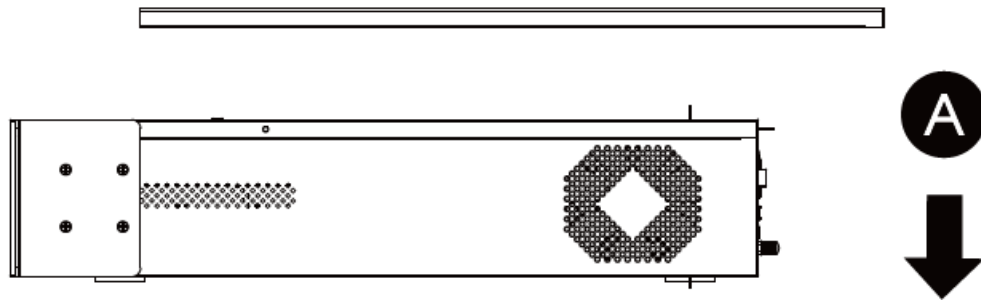

Step 10:

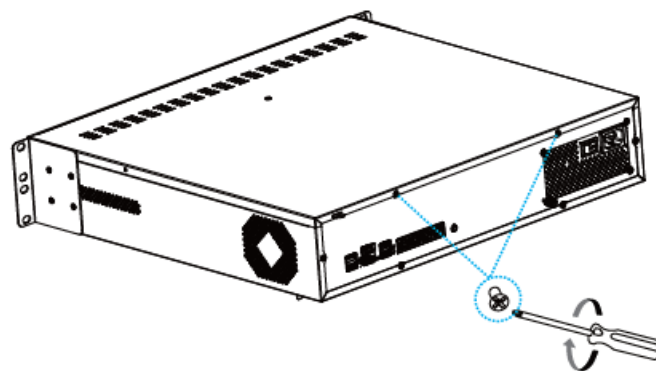

## Device Connection Topology

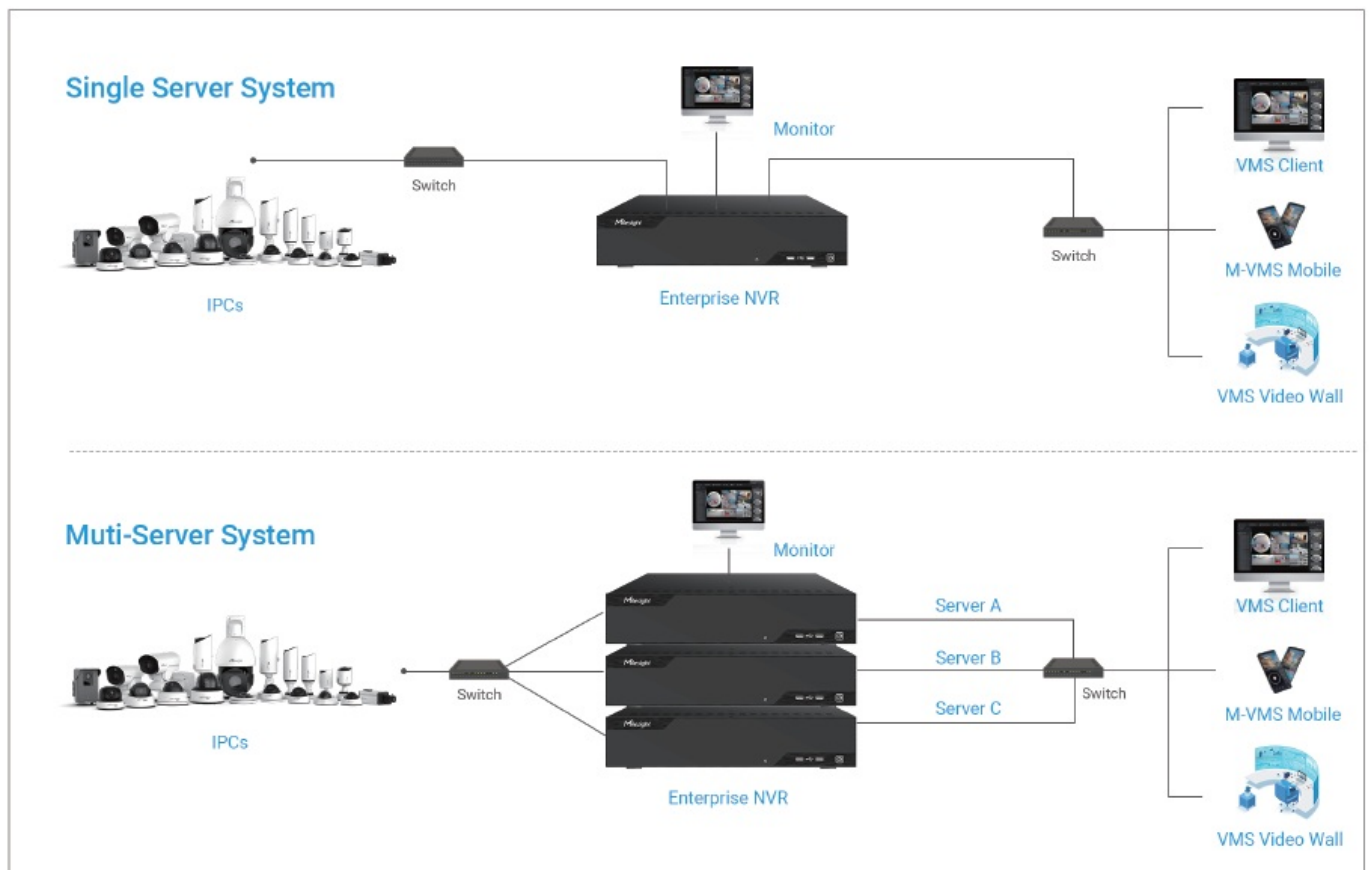



## Specification

### client


- Model VE0601-A/VE0602-A
- Material 200g coated paper +80g Double offset paper
- Size 120x85mm
- Craftsmanship Cover covered with matte film (page-turning version)
- Encoding 43.005.000xx
- Edition book V3.0

### Ready to Start

When the Machine is connected to a power source, it will power up automatically(Power-up recovery is enabled by default).

[www.milesight.com](http://www.milesight.com).

## Documents / Resources

	<p><a href="#">Milesight VE0601-A VMS Enterprise Server</a> [pdf] User Guide VE0601-A, VE0602-A, VE0601-A VMS Enterprise Server, VE0601-A, VMS Enterprise Server, Enterprise Server, Server</p>
--	---

## References

- [M Milesight | 5G, AI, IoT and LoRaWAN®](#)
- [M Download Center](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.