



milieulabs ZoneMate Wireless Temperature Sensor User Guide


[Home](#) » [milieulabs](#) » milieulabs ZoneMate Wireless Temperature Sensor User Guide 

Contents

- 1 milieulabs ZoneMate Wireless Temperature Sensor
- 2 Product Information
- 3 instructions
- 4 Troubleshooting tips
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts

Milieu Labs®

milieulabs ZoneMate Wireless Temperature Sensor

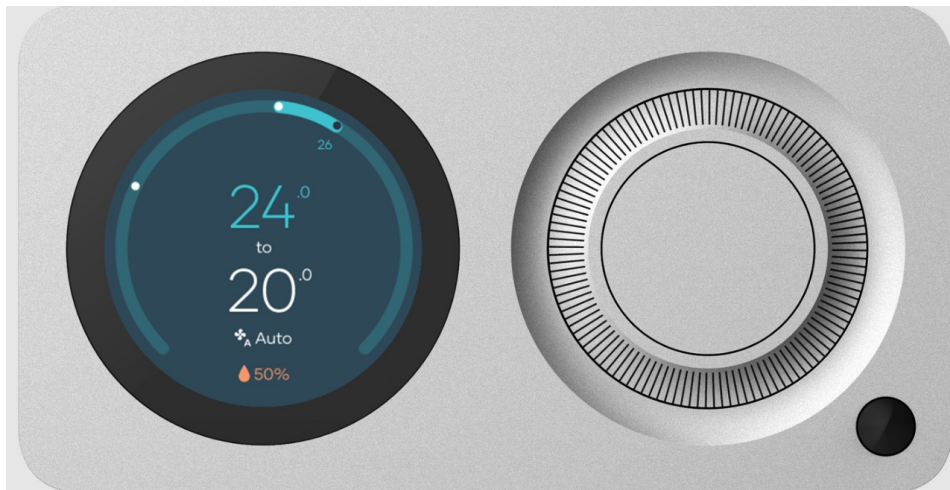

Product Information

The ZoneMate Wireless Sensor is a device that can be paired with the Milieu Climate system to control and

monitor zones in your home. It allows you to manually turn a zone on or off and provides LED indications for zone status. The sensor operates using a 3V CR2032 battery.

Pairing the Sensor during Initial Setup:

1. Follow the step-by-step instructions in the Milieu Climate setup wizard.
2. At step 5, Sensors, ensure you select the desired sensor number.
3. Remove the battery isolator from the wireless sensor and wait for the LED to flash green.
4. Select the sensor number you want to pair and follow the on-screen steps.
5. Press the sensor button — the LED light will flash blue, indicating it is trying to pair.
6. The LED light will turn solid blue for 2 seconds, indicating successful pairing.

Instructions

1. Follow the step-by-step instructions in the Milieu Climate setup wizard. At step 5, Sensors, ensure you select .
2. Remove the battery isolator from the wireless sensor and wait for the LED to be flashing green.
3. Select the sensor number that you would like to pair, and follow the steps shown on the screen.
4. Press the sensor button the LED light will flash blue indicating that it is trying to pair.
5. The LED light will turn solid blue for 2 seconds indicating that it is paired.

Adding a sensor after initial setup using the settings

1. Go to the menu screen and **select Settings → select Aircon Settings → select Zone Setup → select Sensor Pairing.**
2. Select the sensor number that you would like to pair.
3. Each sensor number corresponds to the same zone number.

Assigning a sensor to a different zone or to multiple zones

1. Go to the menu screen and select **Settings → select Aircon Settings → select Zone Setup → select Sensor Assignment.**
2. Select the zone that you would like to assign a sensor to.
3. Select the sensor number you would like to assign to the zone.

wireless sensor functionsZone switch

You can use the ZoneMate Wireless Sensor to manually turn your zone on or off by pressing the button on the bottom left of the sensor.

LED indication

- ZONE ON
- ZONE OFF

Flashing light during power up

- ZONEMATE THREAD NETWORK NOT DETECTED
- ZONEMATE THREAD NETWORK DETECTE

Flashing light during pairing

SENSOR IS SEARCHING FOR A ZONEMATE MODULE TO PAIR WITH

NOTE: If no LED light is showing, press the sensor button. If no light is visible after pressing the button, check the battery.

Advanced zone control

For advanced zone control go to the Milieu Climate hub.

From the settings menu you can name each zone and set the default damper position for each zone.

To optimise your comfort we recommend scheduling events for your zones.

1. Remove the Zone Mate Wireless Sensor cover.
2. Insert a small flathead screw driver into the cut out provided in the battery cover and pop out the cover.
3. With a small flathead screw driver push the battery inwards until the] lever ejects the battery.
4. Insert a new 3V CR2032 battery.

Unparing sensor

1. Press and hold the sensor button or 10 seconds until you see a blue light flashing followed by a solid red. Can take up to 30 seconds before it is displayed on the Hub.
2. Alternativley, go to Milieu Climate Hub menu screen and select **Settings** → select Aircon **Settings** → select Zone **Setup** → select Sensor **Pairing** → select Sensor **Number** → select Unpair **Sensor**.

Troubleshooting tips

Wireless Sensor is flashing a blue light and not pairing.

→ Repeat the pairing process from the Milieu Climate Hub.


NOTE: Pairing mode will timeout in 60 seconds if it doesn't pair with a Wireless Sensor.

Experiencing problems?

→ Reboot the Hub by pressing the button for 10 seconds and wait for 3 minutes before continuing.

- +61 2 9659 7438
- support@milieulabs.com.au
- milieulabs.com.au/support

Documents / Resources

	milieulabs ZoneMate Wireless Temperature Sensor [pdf] User Guide ZoneMate Wireless Temperature Sensor, ZoneMate, Wireless Temperature Sensor, Temperatu re Sensor, Sensor
---	---

References

-  [Milieu Climate](#)