

minarpof
LED BLE App
For Lighting



minarpof LED BLE App For Lighting User Manual

[Home](#) » [minarpof](#) » minarpof LED BLE App For Lighting User Manual 

Contents

- [1 minarpof LED BLE App For Lighting](#)
- [2 Specifications](#)
- [3 Troubleshooting](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

minarpof

minarpof LED BLE App For Lighting



Specifications

- Product: Light Engine Control App
- Compatibility: Android and Apple mobile phones
- Function: Control light engines with Bluetooth connectivity


Connection of the APP to the Light Engine

 
1. Download the Application “LED LAMP” in Google Play for Android mobile phones or in the Apple Store for Apple mobile phones. The APP could also be downloaded by scanning the following QR code:



2. Turn on your phone's Bluetooth function.
3. Open the APP and grant the appropriate permissions.
4. Turn on the light engine which has APP control function, and wait for the light engine to work.
5. Repeatedly pull down the App's home page to refresh till the icon of “LED BLE” shows on the home page.



6. Click the icon “ LED BLE ” to enter the light engine control interface and the App will search for and connect the light engines automatically. The number below the  icon on the top left indicates the number of light engines that are under APP control.

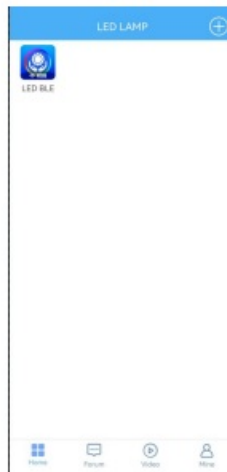



Remarks



1. IMPORTANT: Do not manually try to connect Bluetooth to the light engine in your mobile Settings.
2. One mobile phone can connect and control multiple light engines, but one light engine can only be connected to and controlled by one mobile phone at a time.
3. Click the icon “” on the top left to enter the Bluetooth connection interface.
4. By clicking the icon “” on the top left, the APP will turn off the connection and refresh the search and connection. The icon “” is also served to refresh the search and connection.

IMPORTANT: Repeatedly clicking on the icon “” will cause the APP fail to restore the Bluetooth connection to light engines. If this happens,

 - a. Exit the application and reopen it. Click the icon “” to resume the connection.
- b. If the connection is still not restored and there is no number beneath “” click “” to refresh the connection.

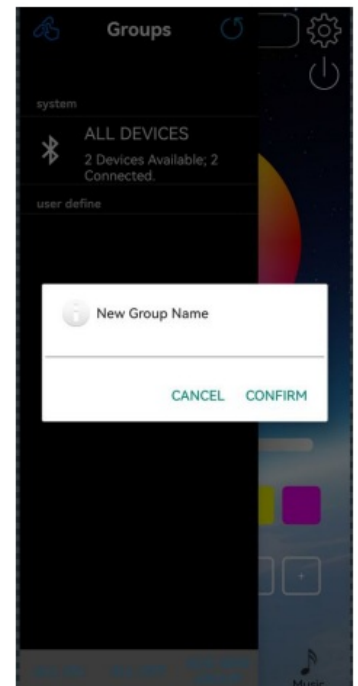


5. To check the list of light engines connected or to group them, click “user define” and then click “ADD NEW GROUP” at the bottom of the interface. Enter the new group name, for example, “Test”, and press “CONFIRM”. There will be a “Test” group added. Click “Test” Group and then click “Add Device” at the bottom of the interface to enter the light engine list.
6. The code number of the connected light engines will show in the interface. Press the line of the code there will be a “” mark at the end. Press “CONFIRM” at the bottom, this light engine will be chosen in the Test” Group.
7. More groups could be created if needed.
8. Press “Test”, and press “Control”, the following operation of the App will work on the light engines in this group only. In the case of “ALL DEVICES”, the operation will work on all the light engines connected.

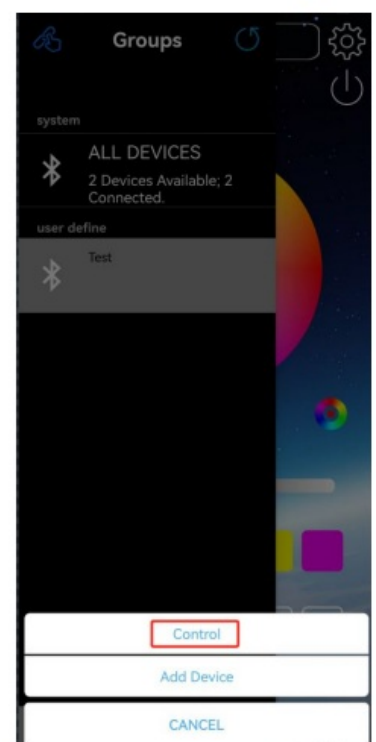 
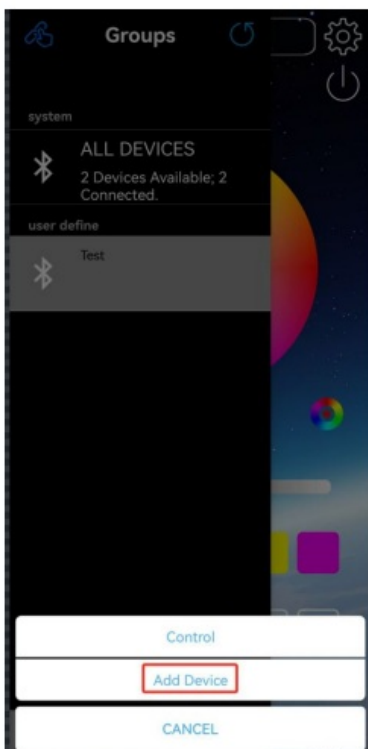 


1. Static colors mode



- **RGB Interface:**

  - For colorful static colors, operate on the “RING” interface; For the pure white color (the white LED in RGBW), operate on DIM interface.
- On the “Ring” interface, the colors can be selected in the color ring, the RGB value or the preset colors. The bottom two rows of the colors are for a quick section. A long press will delete the color.
- The brightness could be adjusted.
- The icon “” will turn off the light.

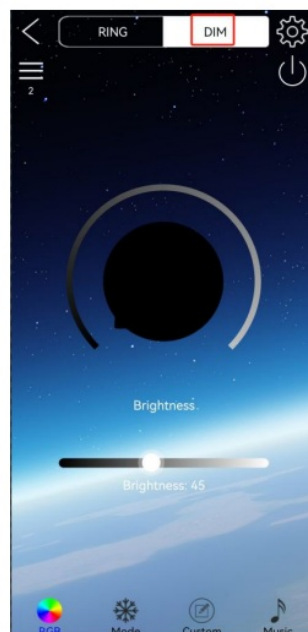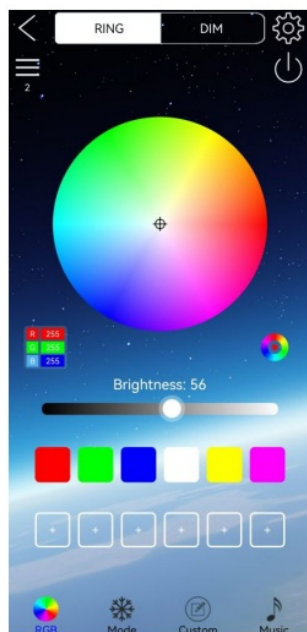


2. Preset programs




Mode Interface:

 - Choose the preset programs from the scrolling list.
- To recycle a few preset programs, click the icon “+” on top of the interface to choose an individual program.

Each icon “+” could have one program. When finished, click the icon “” to run those programs in turn.

 - A long press of the “+” icon will delete the chosen program.

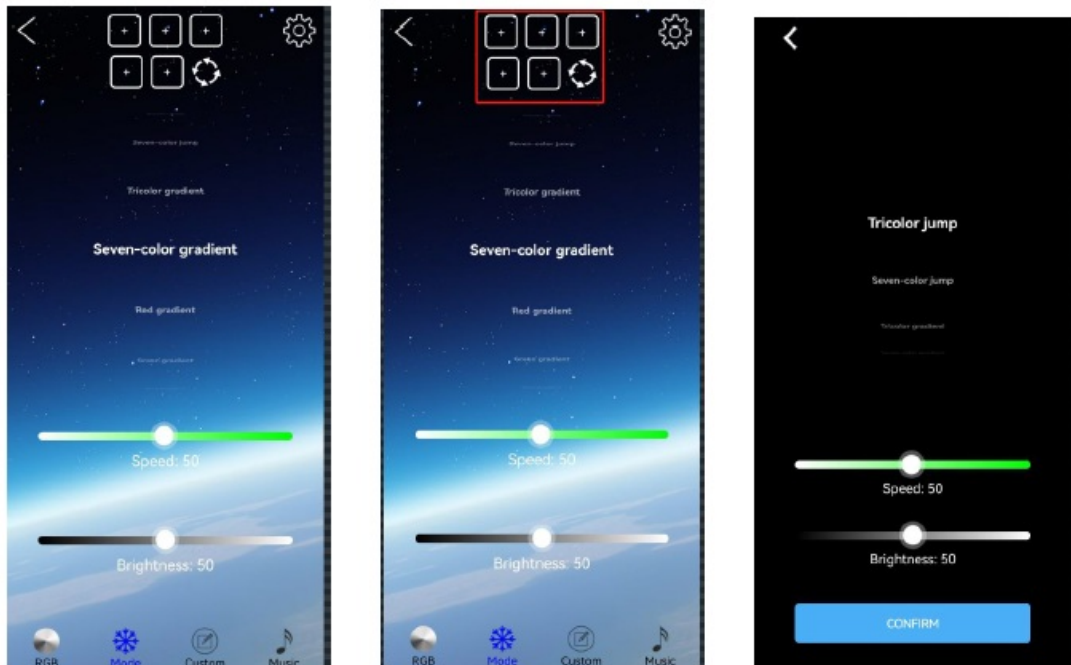


3. Customized effect




Custom Interface:

 - Edit cycling colors with four effects.
- “Change” and “Cycle” have the same effect of cycling colors.
- A single click to choose the color, and long press will delete the chosen color.
- After the colors are chosen, choose one of the four effects. Click “Change” or “Cycle” and the colors will cycle with the particular effect.

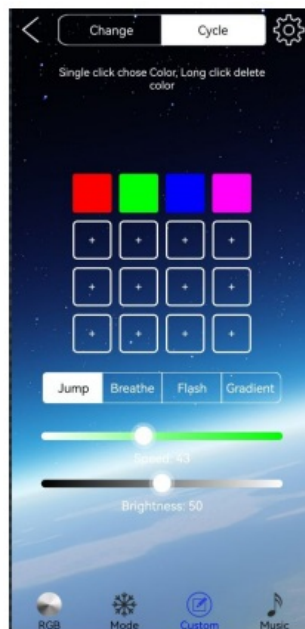

4. Music control




- Music Interface:
- The light engine will change the effect according to the sound and/or music.
- Choose the color and one of the four effects, then click the icon “” to start.
- A single click to choose the color, and a long press will delete the chosen color.
- Sensitivity: the speed with which a light engine responds to the sound rhythm.

- Music: The built-in music player which plays music stored inside the phone.




5. Twinkle disc speed

- If the light engine has a twinkle disc, click the icon “” on the top right on any of the above four interfaces to choose the disc speed.
- The “Timer” does not work.
- Choose “K1”, “K2”, or “K3” to set the twinkle disc speed. If “K3” is chosen, the disc will stop.
- Click the main interface to get back.



6. Other Information

At the home interface, there are other three icons: “Forum”, “Video” and “Mine”. About the “Mine”,

1. Click the icon “Mine” to enter your account if needed.
2. Click the icon “” at top right on the “Mine” interface to set up the account and choose the language if needed.
3. Check the version of the APP by clicking “About us” on this setting-up interface.

Troubleshooting

When the APP fails to connect the light engine:

1. Are the Bluetooth and location functions of the mobile phone system enabled?
IMPORTANT: Do not select to connect Bluetooth devices in the phone settings.
2. Is there any other phone nearby that is already connected to the light engine? If so, please disconnect that mobile.
3. Bluetooth has been turned on, but no device has been found. Exit the app and reopen it. If a message prompts you to turn on Bluetooth, enable the Bluetooth function in the mobile system.
4. Is there a Bluetooth device connected to the phone system settings? If so, please disconnect the Bluetooth device, Exit the APP, and reopen the app again.
5. The connection still does not work after the above operation, turn off the light engine and turn it back on. Then exit the APP and reopen it.
6. If the connection still does not work, uninstall the App and download and install it again. Try again.

FAQS

Q: Can one mobile phone control multiple light engines simultaneously?

A: Yes, one mobile phone can connect and control multiple light engines at once.


Q: What should I do if the Bluetooth connection fails?

A: If the connection fails, exit the app and reopen it. Click the refresh icon to resume the connection. If issues persist, check the Bluetooth settings on your phone.

Q: How to create groups for light engines?

A: Click on 'User Define,' then 'Add New Group,' enter a group name, confirm, and add devices to the group.

Documents / Resources

	<p>minarpof LED BLE App For Lighting [pdf] User Manual LED BLE App For Lighting, App For Lighting, Lighting</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.