



MINDEO ES4610+ Embedded Image Scanner Instructions

[Home](#) » [MINDEO](#) » MINDEO ES4610+ Embedded Image Scanner Instructions

MINDEO

Contents [[hide](#)]

- [1 MINDEO ES4610+ Embedded Image Scanner Instructions](#)
- [2 Parts of the scanner](#)
- [3 Reading techniques](#)
- [4 Programming instruction and example](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)


MINDEO ES4610+ Embedded Image Scanner Instructions



Notice

- A standard packing includes a scanner, a USB cable and a CD (or a user manual).
- Use a piece of dry and soft cloth when cleaning the scanner is in need.

Parts of the scanner

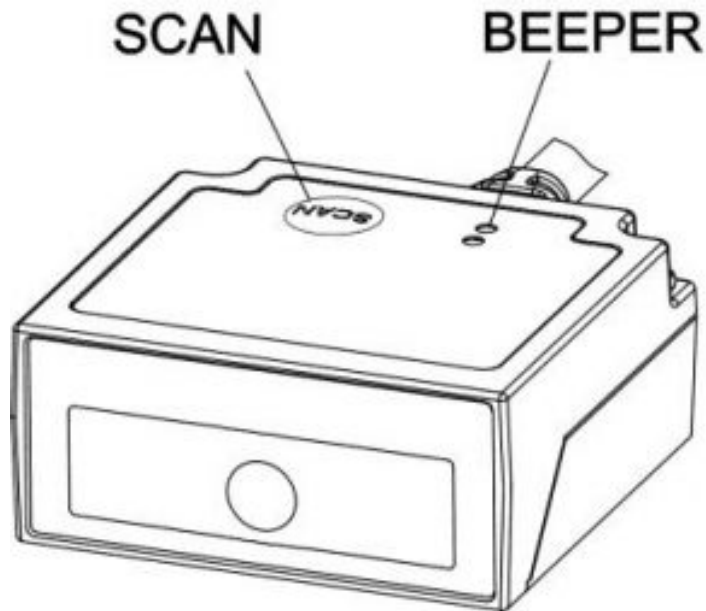

Reading techniques

1. Press and hold the SCAN, the scanner projects a green LED square which allows positioning the barcode within its field of view, and turns on the white LED for illumination.
2. When reading a barcode, the green LED square will be smaller when the scanner is closer to the barcode and larger when it is farther from the barcode. Please hold the scanner at an appropriate distance from the barcode, and center the green LED square on the barcode.
3. On a successful barcode reading, the scanner will beep once, and the green LED square and white LED will be turned off. Then the scanner transmits barcode message to the host.



Return default parameters and version information



Default value initialization



Firmware version list

 
Programming instruction and example

Two programming modes have been provided as bellows:

➤ Single-scan setting

Scan the appropriate


Single-scan setting



%0001003%

Example: to set Flow control to be XON/XOFF.

➤ Multiple-scan setting

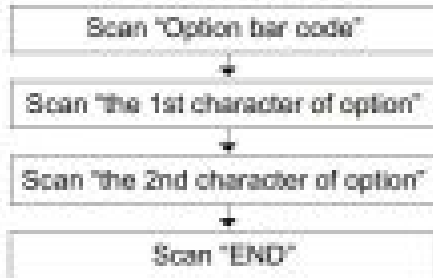

%0301M%

%0301M%



%END%

Example: to set Flow control to be XON/XOFF.

Note:

1. More details refer to User Manual.
2. For better readability, please print this document with laser printer.

Read More About This Manual & Download PDF:

Documents / Resources

	MINDEO ES4610+ Embedded Image Scanner [pdf] Instructions ES4610 Embedded Image Scanner
--	---