

MINDSCOPE Animat3D Multicolored Fawny Instruction Manual

Home » MINDSCOPE » MINDSCOPE Animat3D Multicolored Fawny Instruction Manual



Contents

- 1 MINDSCOPE Animat3D Multicolored Fawny
- 2 Still Mode:
- **3 READ BEFORE USE**
- 4 Documents / Resources
- **5 Related Posts**



MINDSCOPE Animat3D Multicolored Fawny




- 1. Power adapter not included, all USB power adapters are compatible (ie: mobile phone charger).
- 2. Please do not open Fawny in order to avoid damaging the unit.
- 3. Maintain adequate ventilation, do not cover the Fawny with objects such as cloth or other materials.
- 4. Please keep Fawny away from direct rain, water or snow, covered porch outdoor setting is OK.
- 5. Please disconnect/remove power source (USB cable) when not using for extended periods of time.
- 6. Please do not disconnect the USB cable when Fawny is ON. Switch OFF and then disconnect the USB cable.
- 7. Do NOT drop or shake the unit.
- 8. Please ensure that Fawny is placed in temperatures within 20°F 100°F

Still Mode:

Give Fawny a decorative look by entering into still mode. Jack will not run any animation but instead will maintain a still face. Press and hold the+ &- buttons simultaneously for 3 seconds to enter into still mode. To exit press any button to resume animations.

*Note: 30 minutes of video will continue on a loop until turned off manually, there is no timer on Fawny.

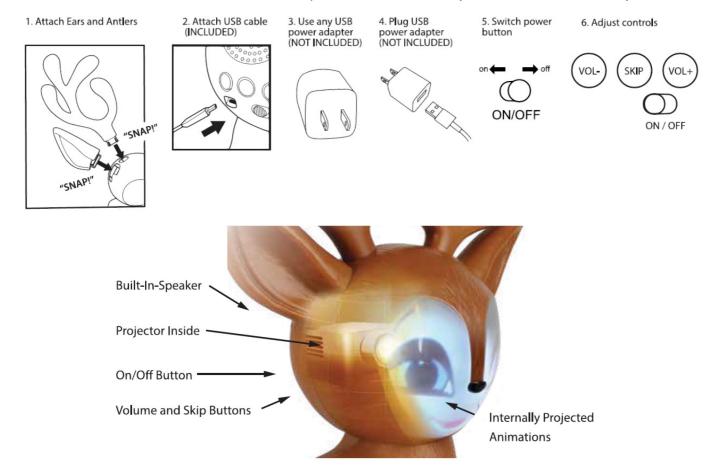


Connect with us:

- @pinterest.com/mindscape
- I] <u>facebook.com/mindscapeproducts</u>
- You(g <u>youtube.com/mindscape</u>
- @Instagram.com/mindscapeproducts

READ BEFORE USE

IF UNIT DOES NOT WORK USING STANDARD ADAPTER PLEASE USE 2A (AMP) ADAPTER.

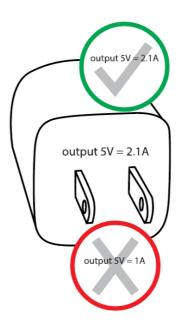

PLEASE EMAIL QA@MINDSCOPEPRODUCTS.COM

WITH ANY QUESTIONS

Documents / Resources



MINDSCOPE Animat3D Multicolored Fawny [pdf] Instruction Manual Animat3D Multicolored Fawny, Animat3D, Multicolored Fawny, Fawny

Manuals+,