



Minecraft MIN4045AC Touch Screen Interactive Smartwatch User Guide

[Home](#) » [MINECRAFT](#) » Minecraft MIN4045AC Touch Screen Interactive Smartwatch User Guide 



INTERACTIVE WATCH USER GUIDE



Contents

- 1 MIN4045AC Touch Screen Interactive Smartwatch
- 2 Games
- 3 Camera
- 4 Videos
- 5 Pedometer:
- 6 Documents / Resources
 - 6.1 References

MIN4045AC Touch Screen Interactive Smartwatch

Charge 30-40 minutes before first use. Notice screen may be blank white charging for 30 minutes. timing: Do not tea your watch charging undotted for more than 3 hours It may weaken the life of your bolts”.

1.1 Power On and Power Off

- Power on: Press and hold the power button to turn on.
- Power off. Press and hold the power button to turn of.
- Home menu: Press the power button once to display.



1.2 Clock Face

- Press and hold the center of the clock to change the



swipe in any direct from the to proceed to the main menu.

1.3 Status Bar Icons



1.4) Battery Recharging:

“Note: Adult operation is suggested

- Gently pull out the cover of the Micro-USB port on the right side of the watch.
- Insert the included Micro-USB cable (small end) into the Micro-USB port on the watch.
- Insert the large end of the Micro-USB cable on your computer or to a standard USB power outlet adapter.
- Once the connection is successful, you will see battery-charging symbol appear on the watch screen.
- When the battery is fully charged, the charging icon will stop animating and the battery symbol on the screen will show full
- When the battery is fully charged, disconnect the charger from the power outlet first, then disconnect the watch from the charger cable.
- The battery strength icon on the status bar will scroll until the device is fully charged.

Note: Please charge your watch before you use it It takes approximately * hour to fully charge the battery

Battery Notice:

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the following precautions:

- Do not disassemble the battery
- Do not crush and do not expose the battery to any shock or force such as homering, dropping, or stepping on it
- Do not expose to high temperatures or place near a heat source
- Do not leave in direct sunlight
- Do not dispose of in o fire
- Do not handle damaged or leaking batteries
- Keep the battery out of the reach children
- Keep the battery dry.

Splash Proof for Everyday Play:

- Do not put the watch under running water.
- Do not submerge under water. Not suitable for showering, bathing, or swimming
- Keep the cover of the Micro-USB port closed tightly while it is not in use in order to prevent any water getting in the watch

Games

- ALPHABET EDUCATION
- MATH TEST
- SUDOKU
- NUBMER GRID
- HAND WASHING CONTEST
- TIME MASTER



Camera

- Top the camera icon in the main menu to enter co.



- Top the shutter icon 10 toke polo.



- Top the save or trash bin icon to save or delete you.

Videos

- Top the video icon in the main menu to enter video.
- Tap the record icon to begin recording video.
- When you ore finished, tap the same icon.
- Tap the save icon to save your last video.



Pedometer:

This is a basic pedometer to count your movements, The work warm on for greatest occupancy.

- Top the start icon to start the pedometer and you: stop icon to stop it from counting any further.
- Tap the reset icon to reset the counter back to zerc.
- On the pedometer screen you can check the doctorand calories burned .

Documents / Resources

	Minecraft MIN4045AC Touch Screen Interactive Smartwatch [pdf] User Guide MIN4045AC Touch Screen Interactive Smartwatch, MIN4045AC, Touch Screen Interactive Smartwatch, Screen Interactive Smartwatch, Interactive Smartwatch, Smartwatch
---	--

References

- [User Manual](#)