




MINELAB MDS-10T Dual Sensor Detector User Manual

[Home](#) » [MINELAB](#) » MINELAB MDS-10T Dual Sensor Detector User Manual 

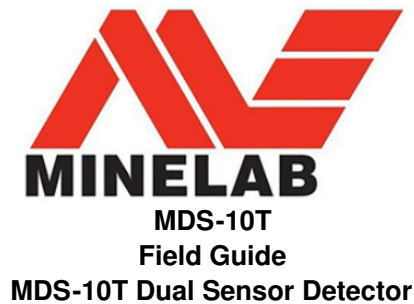


Contents


- [1 MDS-10T Unfolding Procedure](#)
- [2 Attach Battery](#)
- [3 Factory Reset](#)
- [4 Quick Start](#)
- [5 Documents / Resources](#)

MDS-10T Unfolding Procedure


1. Extend the Lower Shaft

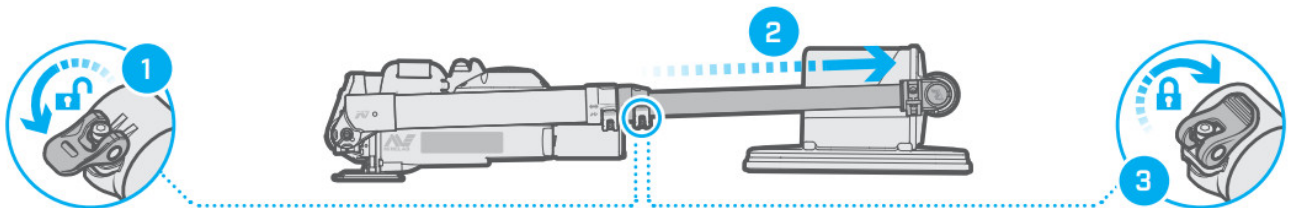


2. Unfold the Detector

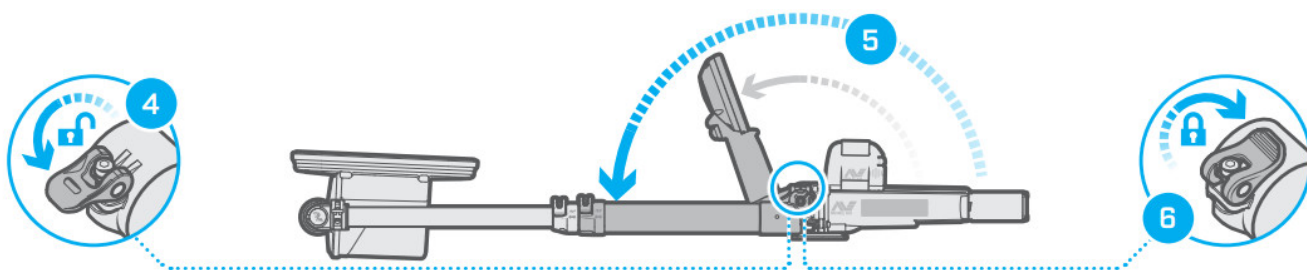


3. Unfold the Sensor Head

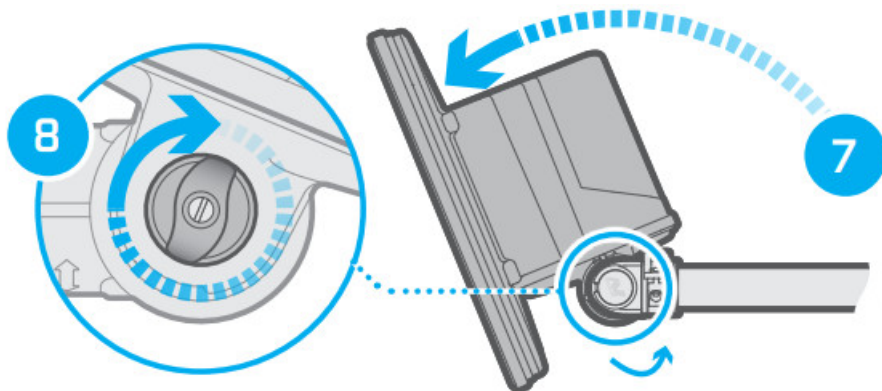


4. Position the Armrest

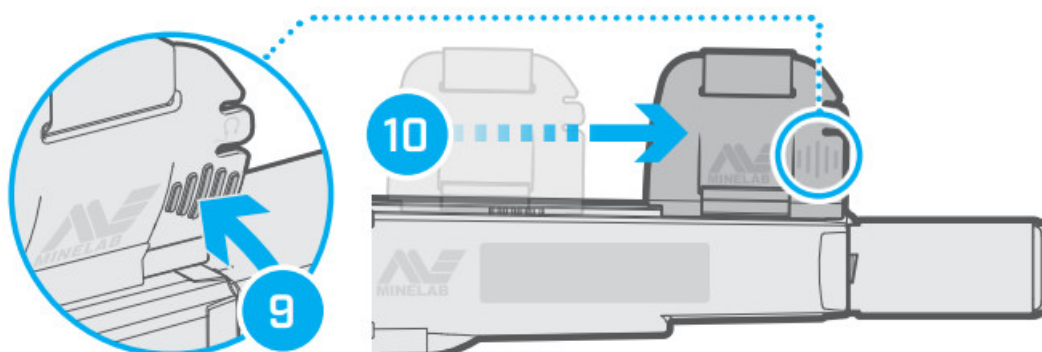


5. Extend the Middle Shaft

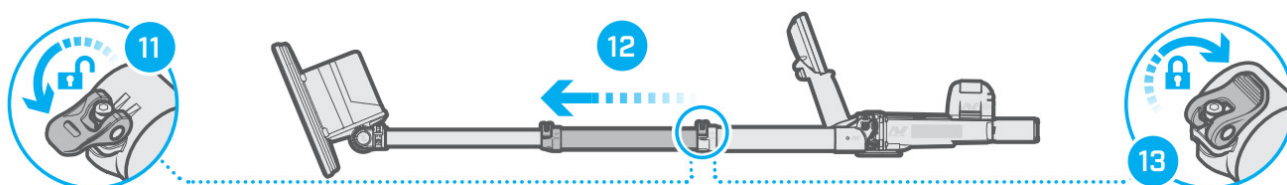

Attach Battery

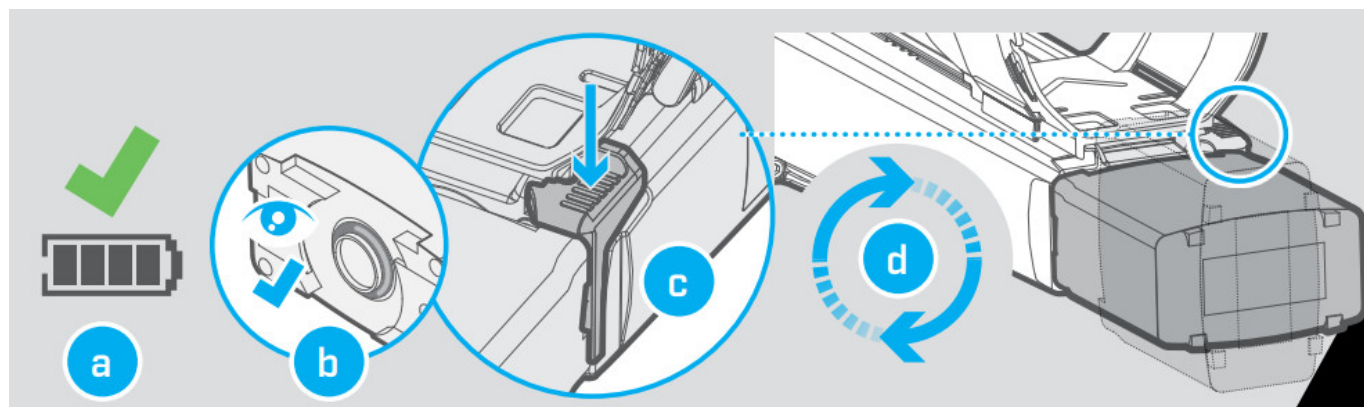


Factory Reset

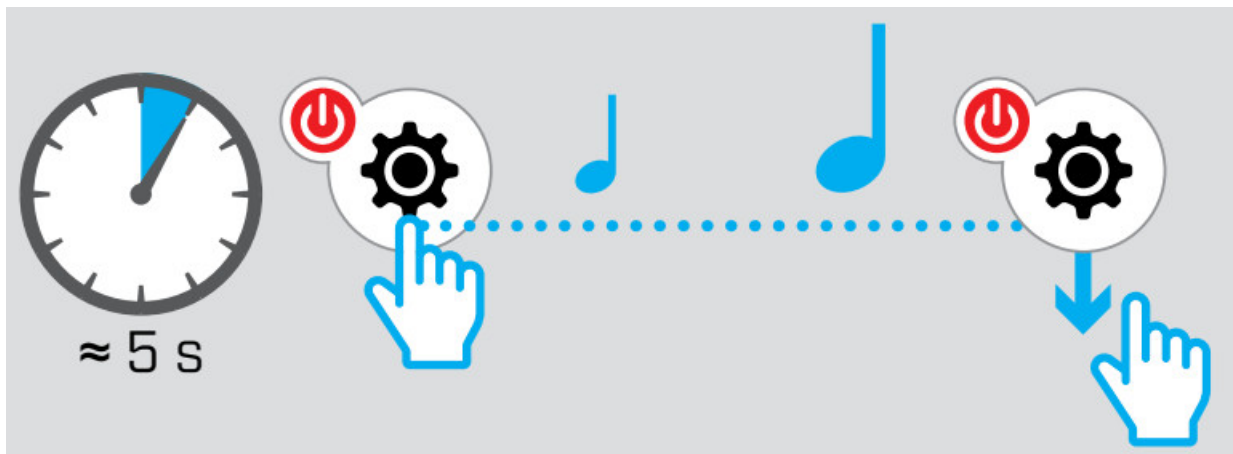


Quick Start


1. Turn On

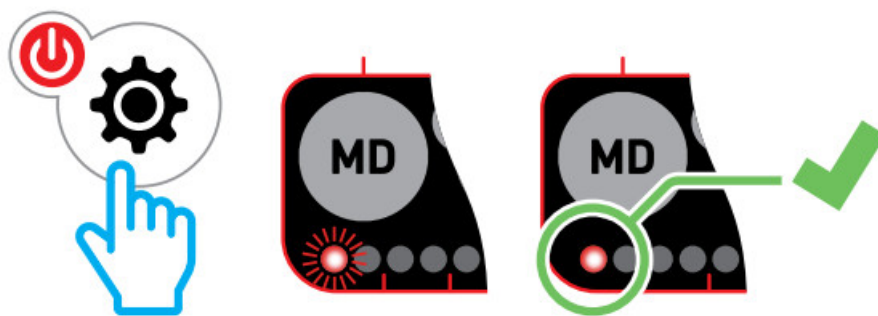


2. MD Ground Balance

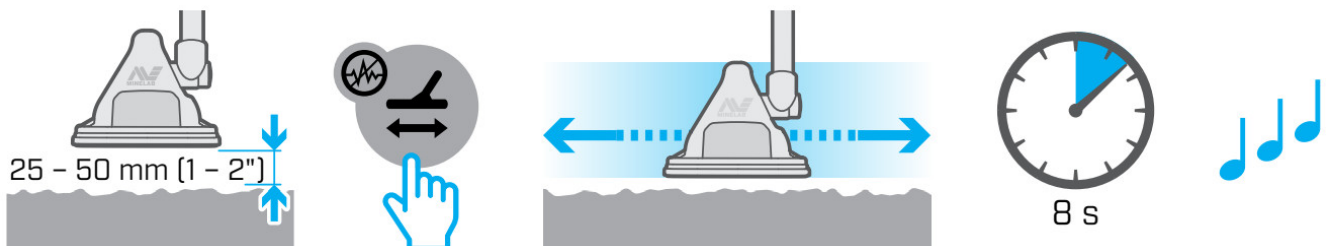

3. MD Test Piece

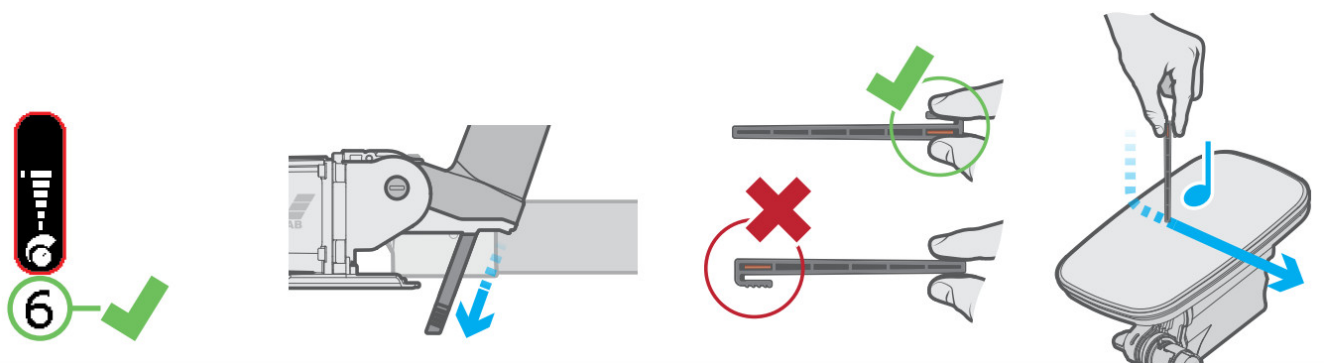



4. GPR Skyshot

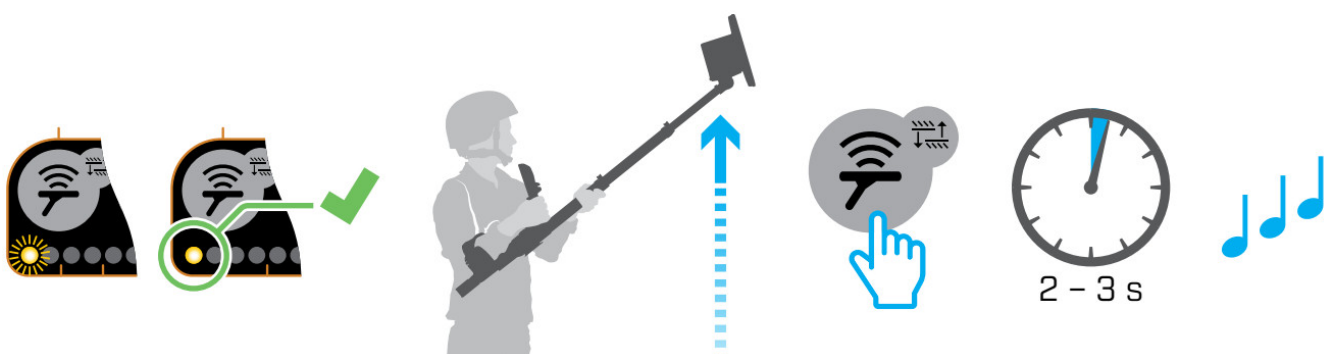

5. GPR Test Target



6. Begin Detecting

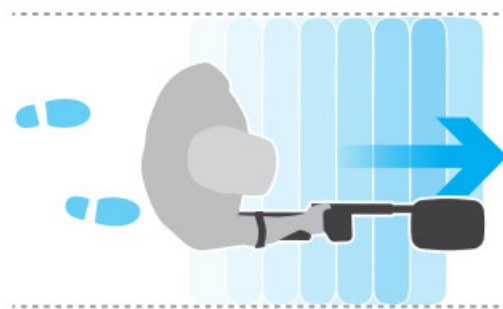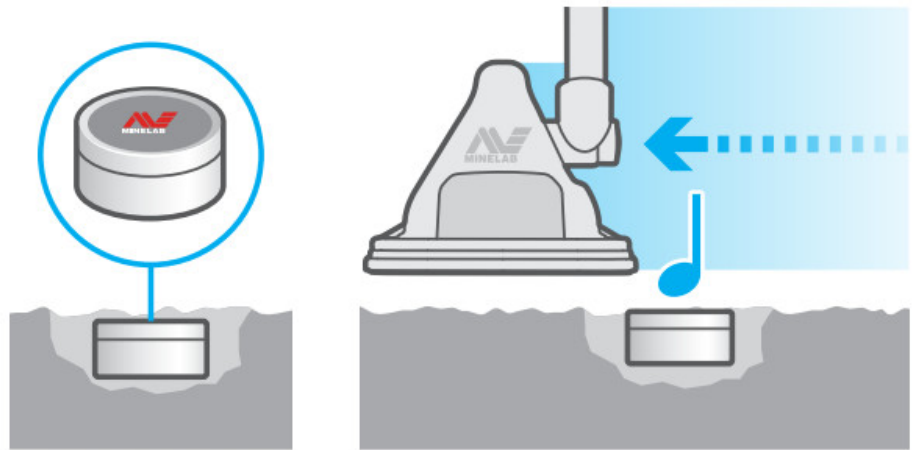

Documents / Resources

	MINELAB MDS-10T Dual Sensor Detector [pdf] User Manual MDS-10T, MDS-10T Dual Sensor Detector, MDS-10T Detector, Dual Sensor Detector, Detector
--	---