



MINELAB PRO-FUND 40 Pinpointer User Guide

[Home](#) » [MINELAB](#) » MINELAB PRO-FUND 40 Pinpointer User Guide 

Contents


- [1 MINELAB PRO-FUND 40 Pinpointer](#)
- [2 PARTS](#)
- [3 MAINTENANCE](#)
- [4 Operating Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



MINELAB PRO-FUND 40 Pinpointer



PARTS

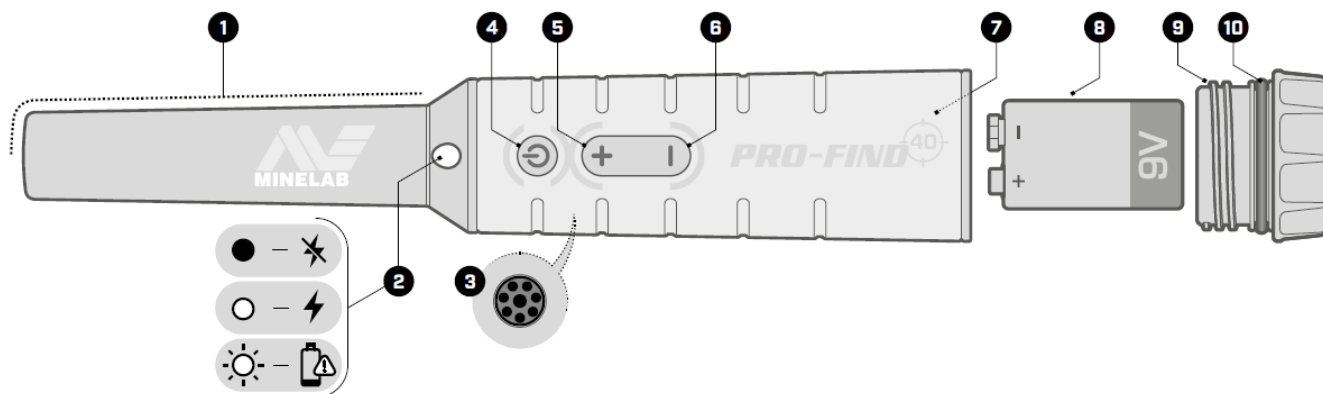


1. Detection Area
2. LED Flashlight
3. Speaker
4. Power Button
5. Plus (+) Button

MAINTENANCE


- Keep the Battery Cap screw threads and O-ring clean.
- Periodically lubricate the O-ring with silicone grease.

Operating Instructions


TURN ON

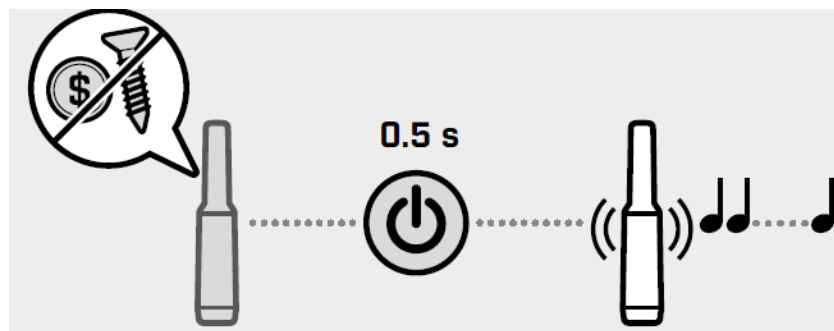

ENABLE AUDIO

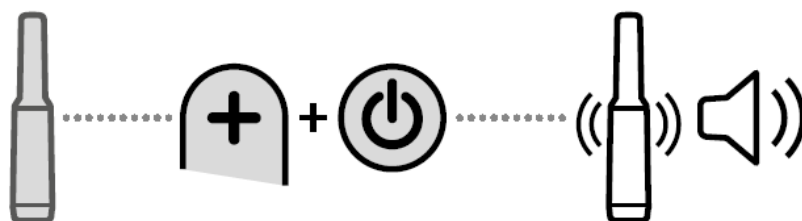


ENABLE FERROUS AUDIO

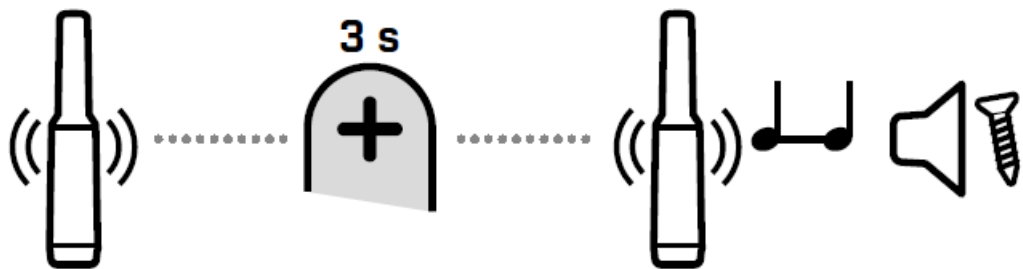


TURN OFF




DISABLE AUDIO

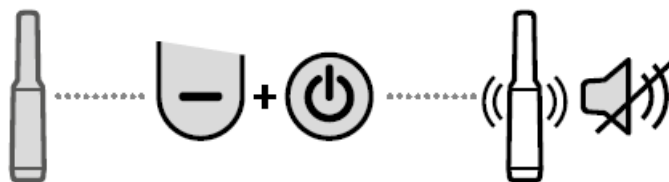


DISABLE FERROUS AUDIO

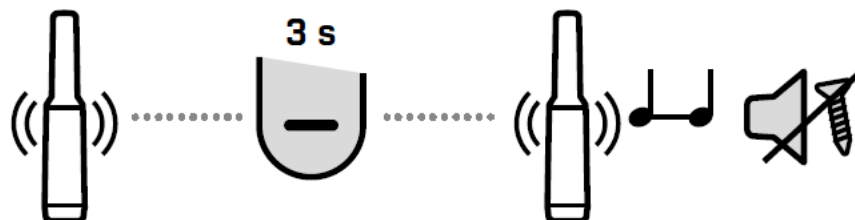


ADJUST SENSITIVITY (5 LEVELS)

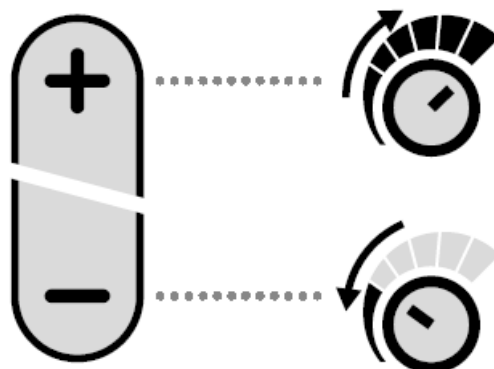

TARGET AUDIO

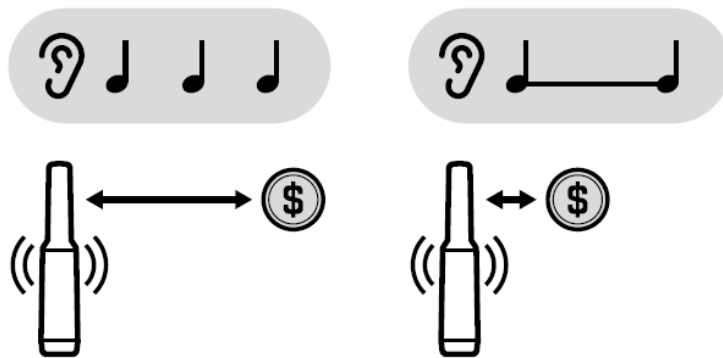


FERROUS AUDIO

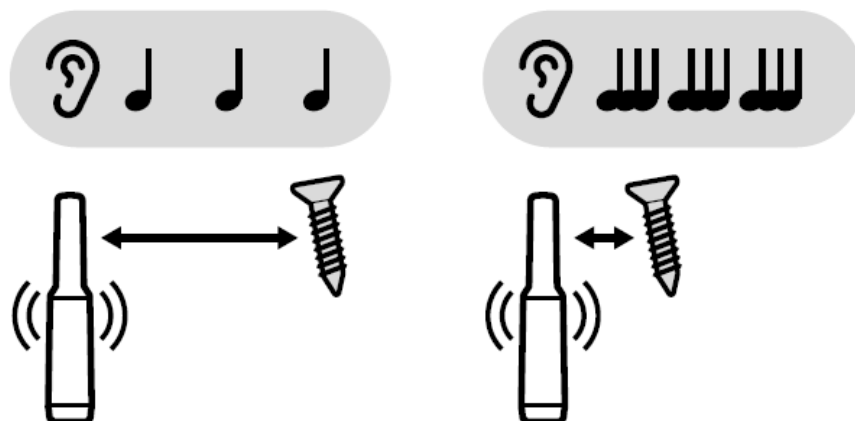


RAPID RE-TUNE




INACTIVE ALARM

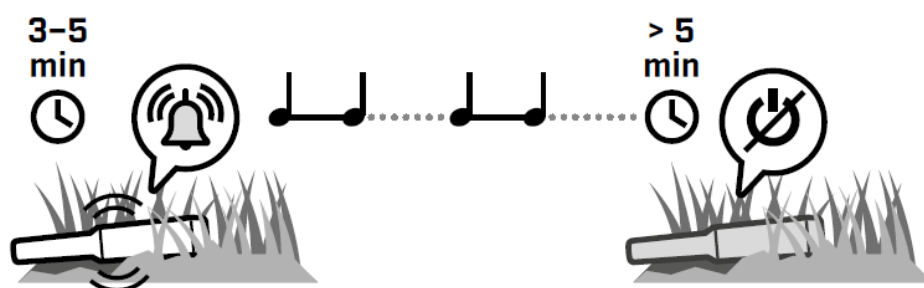

FACTORY RESET

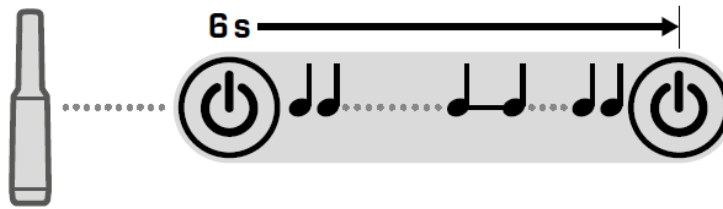

Documents / Resources

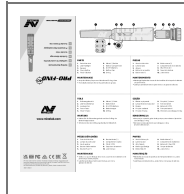

[MINELAB PRO-FUND 40 Pinpointer](#) [pdf] User Guide
4901-0485-1, PRO-FUND 40, PRO-FUND 40 Pinpointer, Pinpointer

References

-  [StackPath](#)

[Manuals+](#).