



MINISO A18 Wireless Speaker User Manual

[Home](#) » [MINISO](#) » MINISO A18 Wireless Speaker User Manual

Contents [[hide](#)]

- [1 MINISO A18 Wireless Speaker](#)
- [2 Specification](#)
- [3 Accessories](#)
- [4 Instructions](#)
- [5 Troubleshoot](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

MINISO

MINISO A18 Wireless Speaker



Specification

- BT version: V5.0
- BT Modulation: A2DP,AVRCP,HFP,HSP

- Distance: 10m
- Play Hme: 10H-12.5H
- Call time: 15H-22H
- Standby time: more than 15 days
- Charging time: 2.5H
- LED: Red& Blue
- Battery: 3.7V 2200mAh
- Pairing password: No need
- Pairing: MINISO-A18


NO	Function	Status	Action	Sound
1	Turn on	Turned off	Rotate the Volume knob to the right until it is turned on	Voice prompt
2	Receive call	Incoming call	Press once to answer	No
3	Hang up	During call	Press once to hang up	No
4	Redial last number	Standby/ listening to music	Press twice to redial	No
5	Reject	Incoming call	Long press	Prompt
6	Increase volume	During call/ listening to music	Rotate the Volume knob to the right	Max. volume prompt
7	Decrease volume	During call/ listening to music	Volume knob to the left	No
8	Play/pause	Standby/ listening to music	Press Play/ Pause button	No
9	Previous song	Listening to music	Short press "Previous Song" button	No
10	Next song	Listening to music	Short press "Next Song" button	No
11	Turn off	Standby/ listening to music	Rotate the Volume knob to the left until it is turned off	No
12	Change mode	Standby/ listening to music	Short press Mode button	
13	Disconnect BT	Standby/ listening to music	Long press Play/ Pause button	

Accessories

- 1x Wireless speaker,
- 1x user Manual.
- 1x charging cable,
- 1x audio cable

Instructions

1. Media button: Short press to change between BT, TF card, and USB mode.
2. Previous song: Short press for the previous song
3. Next song: Short press for next song
4. Play/Pause button: press once to play music, press once again to pause.
5. Receive call button: Short press to answer the call. Press once again to hang up. Long press to reject. Double press to redial the last number.
6. Turning on/off & Volume control: Rotate the Volume knob to the right until it is turned on; Rotate the Volume knob to the left until it is turned off, Rotate the volume knob to the right to increase the volume; Rotate the volume knob to the left to decrease the volume;
7. USB port: Can be connected with other devices and play the music content from that device
8. TF card port: Compatible with TF cards and can play the music content from cards.
9. AUX port: Connect (1)3.5mm plug of the audio cable for audio signal
10. Charging light indicator: When charging, the red indicator light will be turned on. After being fully charged, the light will turn off.
11. DC 5V: insert charge cable into power interface with electrical power to charge the machine.

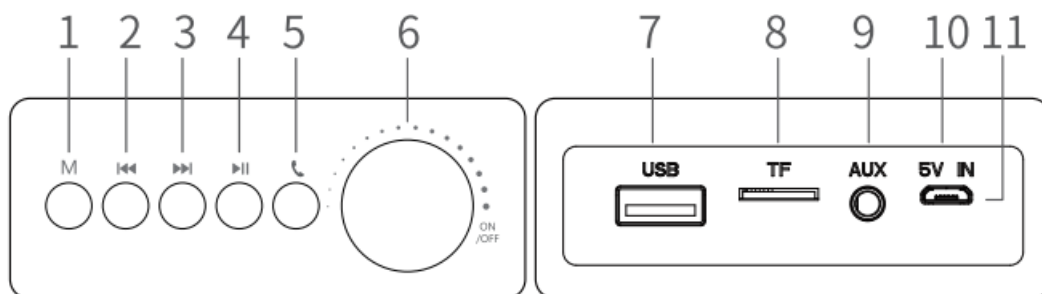

Troubleshoot

The volume is too low- Rotate the Volume knob to the right to increase the volume; Rotate the Volume knob to the left to decrease the volume;

How long should it be charged? For about 2.5 hours. (Until indicator light dim-out).

Some are interrupted when playing – Not enough power, charge the product. Or the distance is too big.

Avoid placing close to interference sources such as wireless routers.

cannot connect successfully- 1. Make sure that speaker has enough power 2. Open the BT on your phone and place close to the speaker. 3. Turn the speaker on, and search for MINISO-A18 on your cellphone and connect. If it is connected through the cable/ TF card but does not play the music- Make sure that there is enough power. Make sure AUX cable is properly connected (usually green port). Rotate the Volume knob, change the mode between BT -cable-card

Documents / Resources



[MINISO A18 Wireless Speaker](#) [pdf] User Manual
A18, 2AYYT-A18, 2AYYTA18, A18, Wireless Speaker