



MINISO A66 Colorful Wireless Speaker with Heavy Bass User Manual

[Home](#) » [MINISO](#) » MINISO A66 Colorful Wireless Speaker with Heavy Bass User Manual

MINISO

Colorful Wireless Speaker with Heavy Bass
User Manual

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT PROPERLY
MODEL: A66

Contents [[hide](#)]

- [1 A66 Colorful Wireless Speaker with Heavy Bass](#)
- [2 CAUTIONS](#)
- [3 PRODUCT PARAMETERS](#)
- [4 PRODUCT OVERVIEW](#)
- [5 ACCESSORIES](#)
- [6 FUNCTIONS](#)
- [7 TROUBLESHOOTING](#)
- [8 FCC Warning:](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

A66 Colorful Wireless Speaker with Heavy Bass


Dear customer,

Thank you for using Miniso Wireless Speaker. Please read this manual carefully before use. Using it properly for best product performance. MINISO Wireless Speaker has stylish appearance, true-to-life sound and multiple functions. The whole series have the patent of appearance design. The system adopting the industry-leading technology enables you to enjoy the excellent sound effects anytime at home, outdoors, during a trip or during work. It provides perfect experience when you play music on your laptops, digital music players and other audio-visual players, leading you to a better life with beautiful music!


CAUTIONS

- 1. Store and use it at room temperature.
- 2. Do not expose it to rain or moisture.
- 3. Do not throw the product to avoid damage caused by dropping.
- 4. Do not disassemble, modify or repair the product yourself.
- 5. This product is equipped with an irreplaceable built-in lithium battery. Do not discard it or toss in fire to avoid danger.
- 6. To prevent its performance from being interfered, keep it away from strong magnetic objects.
- 7. If you are not going to use it for a long time, charge the speaker once every 3 months to extend the lifespan of battery.

PRODUCT PARAMETERS

BLUETOOTH	V5.1	BLUETOOTH PAIRING NAME	MINISO-A66
CHARGING INPUT	5V  500mA	BATTERY	3.7V,1200mAh
FREQUENCY RANGE	49Hz ~ 20KHz	CHARGING PORT	Typc-C
TRANSMISSION DISTANCE	AROUND 10M	MUSIC PLAY TIME	AROUND 3H (70% VOLUME)
CHARGING TIME	AROUND 1.5H		

PRODUCT OVERVIEW

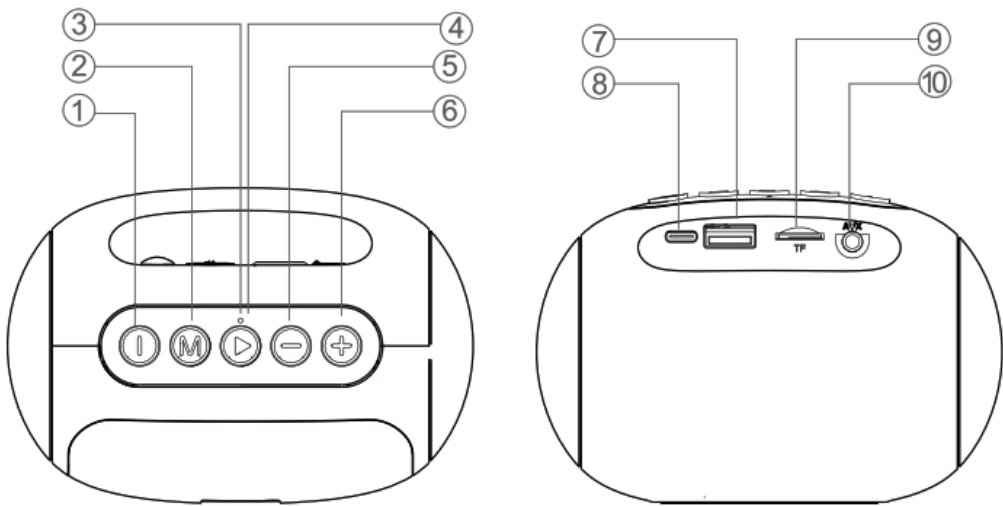

- 1. Power/TWS: Long press to turn on and off, double press for TWS pairing.
- 2. Function: Short press to switch between Bluetooth, TF, USB modes.
- 3. Indicator Light: After turning on the light blinks slowly, red light is on when charging, the light goes off after the charging is complete.
- 4. Play/Pause: Press to play or pause.
- 5. Volume -/Previous: long press to go to previous track, Short press to lower the volume.
- 6. Volume +/Next: long press to go to next track, Short press to raise the volume.
- 7. Charging Port: Plug charging cable in to charge the device.

8. USB Port: For the external connection with USB devices to play audio files.
9. TF Card: Insert TF card to play the audio files inside.
10. AUX: To plug 3.5mm audio jack of external device.

ACCESSORIES

Speaker, Charging Cable, User Manual

FUNCTIONS

Function	Instruction
Turn on/off	Long press Power button for 3 seconds to turn on or off. Double press for TWS pairing
Play/Pause	Long press Play/Pause button to disconnect bluetooth, short press to play or pause
Next Track	Long press “+” button
Previous Track	Long press “-” button
Volume up	Short press “+” button
Volume down	Short press “-” button
TF Card	Insert TF card and the TF card mode will be switched to automatically

TROUBLESHOOTING

1. The wireless speaker is unable to be paired with the cell phone.
Solution: Confirm if the wireless speaker is in pairing mode, and if the Bluetooth on your phone is toggled on. Then delete the product in the list, pair it with your phone again according to the User Manual.
2. The wireless speaker is unable to be turned on.
Solution: Confirm the battery level. Charge the speaker if it is needed.
3. Can the battery of the wireless speaker be replaced?
Solution: No, this is lithium polymer battery, which is irreplaceable.
4. Can I use the wireless speaker at a high volume for a long time?
Solution: To extend the lifespan of the wireless speaker, it is not recommended to play it at a high volume for a long time.
5. The link between the wireless speaker and the cell phone has been disconnected within 10 meters.
Solution: Bluetooth is wireless so that it is very sensitive to objects between the speaker and the connected device. Check if there are any metal or other objects that may affect connection within the effective distance.
6. Cannot hear audio playing when the speaker is connected to the computer or phone.
Solution: Check whether the computer's audio output is already connected to wireless device and whether the Bluetooth in the computer supports A2DP protocol. Make sure the volume is up on your phone or computer.
7. Can I operate the Apps of my phone through the speaker after pairing the wireless speaker with the phone?
Answer: Some apps may not support being operated through the speaker due to their settings.

FCC Warning:

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: –Reorient or relocate the receiving antenna. –Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. –Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Documents / Resources

	<p>MINISO A66 Colorful Wireless Speaker with Heavy Bass [pdf] User Manual</p> <p>A66, 2AYYT-A66, 2AYYTA66, A66 Colorful Wireless Speaker with Heavy Bass, Colorful Wirele ss Speaker with Heavy Bass, Wireless Speaker with Heavy Bass, Speaker with Heavy Bass</p>
---	---