



## MINISO EBS3-21229 Portable Wireless Speaker User Manual


[Home](#) » [MINISO](#) » MINISO EBS3-21229 Portable Wireless Speaker User Manual 

### MINISO EBS3-21229 Portable Wireless Speaker User Manual

#### Contents

- [1 PRODUCT OVERVIEW](#)
- [2 PRODUCT PARAMETERS](#)
- [3 OPERATION INSTRUCTIONS](#)
- [4 CAUTIONS](#)
- [5 TROUBLESHOOTING](#)
- [6 ACCESSORIES](#)
- [7 FCC STATEMENTS](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

### PRODUCT OVERVIEW

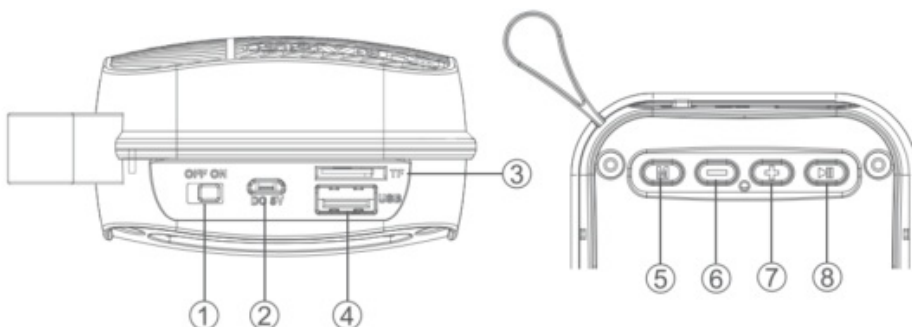

- 1. Power Button
- 2. Charging Port
- 3. TF Card Slot
- 4. USB Port
- 5. M Button
- 6. Volume down

7. Volume up
8. Play/Pause Button

## Description

1. Power Button: Push to ON to turn on, to OFF to turn off.
2. Charging Port
3. TF Card Slot: Insert TF card in to play the TF card music.
4. USB Port: Insert USB flash drive in to play the USB flash drive music.
5. M Button: Short press to switch music playing mode, long press to enter TWS mode.
6. Volume down: Short press for previous track, long press to turn the volume down.
7. Volume up: Short press for next track, long press to turn the volume up.
8. Play/Pause Button: Short press to play the music; press again to pause.

## PRODUCT PARAMETERS

BLUETOOTH VERSION	V5.0	BLUETOOTH PAIRING NAME	MINISO-EBS3-21229
BLUETOOTH PROTOCOL	A2DP, AVRCP, HFP, HSP	INPUT	DC 5V, 500mA
BATTERY	DC 3.7V, 500mAh	FREQUENCY RESPONSE	100Hz — 18KHz
SOUND POWER	3W	CHARGING PORT	Micro USB
TRANSMISSION DISTANCE	About 10m	MUSIC TIME	About 2h
CHARGING TIME	About 2h		

## OPERATION INSTRUCTIONS

Function	Instruction
Turn on/off	Push the Power Button to ON to turn on, a voice prompt will follow; push to OFF to turn off.
Play/Pause the Music	When the music is playing, short press the Play /Pause button.
Next Track	Short press Volume up button.
Previous Track	Short press Volume down button.
Volume up	Long press Volume up button.
Volume down	Long press Volume down button.
TWS Mode	Long press M button.

## CAUTIONS

1. Store and use the product at room temperature.
2. Do not expose the product to rain or moisture.
3. Do not throw the product to avoid damage caused by dropping.
4. Do not disassemble, repair or modify the product yourself.
5. The product has a built-in lithium battery, which is not replaceable. Do not discard it or toss it in fire to avoid danger.
6. To prevent its performance from being affected, keep it away from strong magnetic objects.
7. When not in use for a long time, charge the speaker every 3 months to extend the battery life.

## TROUBLESHOOTING

1. The wireless speaker is unable to pair with the cell phone.  
**Solution:** Confirm if the wireless speaker is in pairing mode, and if the Bluetooth on your phone is toggled on. Then delete the product in the list, pair it with your phone again according to the User Manual.
2. The wireless speaker is unable to be turned on.  
**Solution:** Confirm the battery level. Charge the speaker if it is needed.
3. Can the battery of the wireless speaker be replaced?

**Solution:** No, this is lithium polymer battery, which is irreplaceable.

4. Can I use the wireless speaker at a high volume for a long time?

**Solution:** To extend the lifespan of the wireless speaker, it is not recommended to play it at a high volume for a long time.

5. The link between the wireless speaker and the mobile has been disconnected within 10 meters.

**Solution:** Bluetooth is wireless so that it is very sensitive to objects between the speaker and the connected device. Check if there are any metal or other objects that may affect connection within the effective distance.

6. Cannot hear audio playing when the speaker is connected to the computer or phone.

**Solution:** Check whether the computer's audio output is already connected to wireless device and whether the Bluetooth in the computer supports A2DP protocol. Make sure the volume is up on your phone or computer.

7. Can I operate the Apps of my phone through the speaker after pairing the wireless speaker with the phone?

**Answer:** Some apps may not support being operated through the speaker due to their settings.

## ACCESSORIES

The Product x 1  
Charging Cable x 1  
User Manual x 1

## FCC STATEMENTS

### FCC Warning:

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.**

## Documents / Resources



**[MINISO EBS3-21229 Portable Wireless Speaker](#)** [pdf] User Manual  
EBS3-21229, EBS321229, 2A3ZO-EBS3-21229, 2A3ZOEBS321229, EBS3-21229 Portable Wireless Speaker, Portable Wireless Speaker