



MINISO MG35 Ice Brick Series Clear Game Controller User Manual

[Home](#) » [MINISO](#) » MINISO MG35 Ice Brick Series Clear Game Controller User Manual 

MINISO

USER MANUAL

PLEASE READ THIS MANUAL CAREFUL Y BEFORE USING THE
PRODUCT AND KEEP IT PROPER Y

Contents

- [1 MG35 Ice Brick Series Clear Game Controller](#)
- [2 WARNING](#)
- [3 STRUCTURE DU PRODUIT](#)
- [4 PARAMETERS](#)
- [5 ADAPTIVE MODEL](#)
- [6 FUNCTION OPERATION INTRODUCTION](#)
- [7 TROUBLESHOOTING](#)
- [8 FCC WARNING](#)
- [9 IC WARNING](#)
- [10 WEEEWARNING](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

MG35 Ice Brick Series Clear Game Controller

DEAR CUSTOMER


Thank you very much for using the “Little Ice Brick series transparent game controller MG35”. Please read this manual carefully before use, operate it correctly, and better utilize the superior performance of this product. The game controller is stylish and colorful in design, rich in functions, and compatible with multiple platforms, allowing you to enjoy the fun of gaming anytime and anywhere when using it at home, traveling outdoors, and gathering with friends.

WARNING

Precautions

1. This product is not a toy and is not suitable for use by people under the age of 16.
2. Do not disassemble or repair by yourself.
3. Do not use in damp environments.
4. The product contains rechargeable batteries, please do not put them into fire to avoid explosion hazards,
5. If not used for a long time, please charge this product every three months to avoid excessive discharge and damage to the battery.
6. It is recommended to use a brand manufacturer, certified charger with an output voltage of 5V to charge this product. Please avoid using fast charging chargers with an output voltage exceeding 5V to avoid damaging the product due to excessive voltage charging!

STRUCTURE DU PRODUIT

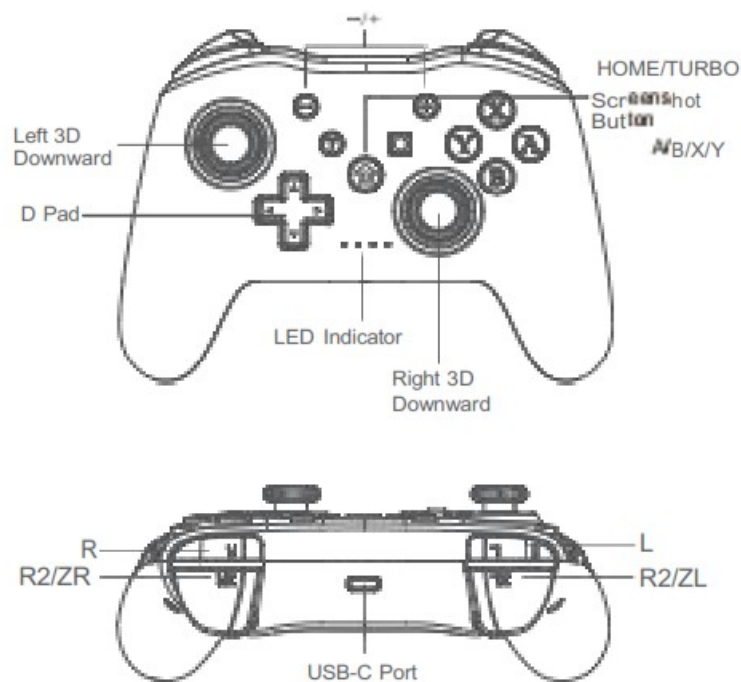

PARAMETERS

1. Product size: L152*W109*H61mm
2. Input voltage/current: DC5V 500mA
3. Normal working voltage/current: DC3.7V/20mA
4. Duration: >8H
5. Charging time: about 2 hours:
6. V5.0,transmission distance :≤8 meters
7. Battery capacity: 600mAh
8. Standby time: 50 days on full charge
9. USB-C cableX1 : 800mm ALLACCESSORIES
USB-C data cable X1, instruction manual X1 2.4G Receiver

ADAPTIVE MODEL

1. Support Bluetooth connection, suitable for operating Android system /iOS (below 13.4) system /PC(Win7/8/10)/Switch host /PS4 host/PS3 console/Tesla Car System/Smart TV/TV box and other platforms;
2. Support Turbo- key continuous hair function, free hands, make the game more simple; .
3. Support double motor super vibration, according to the game scene feedback vibration effect, give you immersive experience;
4. Four signal channel indicators accurately indicate the connection status and power status of the handle; .
5. The left and right joystick can be operated 360* accurately to help players achieve fine-tuning, aiming and other difficult operations;
6. Carefully designed D-Pad can be operated in eight directions, rubbing smooth non-stick keys; .
7. Lightweight key layout, key life can reach millions of times, high quality, durable:
8. Built-in high-capacity polymer lithium battery, with short circuit, overvoltage protection, low power consumption and high endurance;
9. Ergonomic design, comfortable grip, lightweight structure makes it comfortable to use for a long time;
10. Support 7 color magic charm lamp effect. Players can set their own lighting effects according to their preferences.

FUNCTION OPERATION INTRODUCTION

1. Android V3 Bluetooth mode

- ① Search, download and install Shooting Plus V3 App: search and download in each mobile phone Android market in China, search and download in Google Play Store overseas;
- ② Hold down the B+HOME button for 2 seconds at the same time, then the LED1 indicator blinks quickly;
- ③ Turn on Bluetooth on the Android device, select the device named "Gamepad Plus V3" to pair, the connection is successful, and the LED1 indicator is steady on;
- ④ Adjust the keys using the Shooting Plus V3 App tool to play more games
 - a. Connect the handle and open the Shooting Plus V3 App and push it to the background.
 - b. After directly launching the game, click the "V3" levitating ball icon on the screen or press the "START" key on the gamepad to enter the key changing interface of the App;
 - c. Drag the key icon in the key changing interface to the desired operation position on the game. (Click the key icon to select key properties);
 - d. Click "Save" on the menu bar, and then "confirm" to save;
 - e. Click "Close" on the menu bar or press the "START" key again (or click the "V3" floating ball icon again) to exit the key changing interface;
 - f. In the game, you can press the "SELECT" key on the gamepad to bring up the set key prompt;
- ⑤ Mediatek (MTK) mobile phone, please press and hold Y+HOME button (LED3 flash) to enter standard Android mode, mobile phone search Bluetooth name A "Gamepad Plus V3" device to play games on arcade platforms (such as steam);

2. IOS Apple V3 Bluetooth mode

- ① Search, download and install Shooting Plus V3 App: Go to the App Store and search for Shooting Plus V3.
 - ② Press and hold the X+HOME button for 2 seconds at the same time, then the LED1+LED2 indicator will blink quickly;
- Turn on the Bluetooth function of the Apple device, select the device named "Gamepad Plus V3" to pair, the

connection is successful, and the LED1+LED2 indicator is steady on;

④ Support iPhone or iPad tablet device iOS13.3.8 system;

⑤ Use the ShootingPlus V3 App tool to adjust the keys to play more games

a. Connect the handle and open the ShootingPlus V3 App and push it to the background.

b. Launch the game and take a screenshot of the game in the game (using the iPhone's own key combination to take a screenshot).

c. Open the Shooting Plus V3 App. Tap the hover ball "V3" or press "START" on the handle to enter the App key changing screen.

d. Press and hold a blank area to load the game screenshot. Click Select Image to select a screenshot of the game (b. Screenshot of the operation).

(In the process of selecting pictures, there will be a reminder to access the album, please allow access)

e. Drag the key icon in the key changing interface to the desired operation position on the game. (Click the key icon to select the key properties)

f. Click Save on the menu bar and then confirm to save.

g. Click Close on the menu bar or press START again to exit the key changing screen.

⑥ For devices with iOS13.4 or higher, press and hold down the A+HOME button (LED2+LED3 flash) to enter the IOS MFi mode, and search for the Bluetooth name on the mobile phone For the "DUALSHOCK 4 Wireless Controller" device, play games in the ShanWan MFi APP arcade platform;

3. NSwitch Bluetooth mode

① Connect to the host for the first time: click "Controller" → "Change grip/sequence" on the main menu of NSwitch to enter the controller pairing mode;

② Hold down the ZR+HOME button for 2 seconds at the same time, then the LED2 indicator will flash quickly, and the controller will automatically pair with the host. After the connection is successful, the corresponding LED light will be on!

③ has been successfully connected, you can directly press the HOME button, LED2 slow flash, automatic back connection!

4. P4/P3 host Bluetooth operation

① Connect one end of the TYPEC data cable to the handle, and insert one end into the USB interface of the corresponding host;

② Press the HOME button to pair, unplug the data cable after successful connection, at this time LED2+LED3 indicator light is on!

③ has been successfully connected, you can directly press the HOME button, LED2+LED3 slow flash, automatic back connection!

5. Note this computer Bluetooth mode

① Press and hold the R+HOME button for 2 seconds at the same time, then the LED1+LED3 indicator will blink quickly;

② Turn on Bluetooth on the PC, select the device named "Xbox Wireless Controller", the connection is successful, and the LED1+LED3 indicator light is on;

③ It is recommended to play games on Steam platform, pay attention to the "Steam- Settings – controller – common controller Settings" check the support options;

6. Wireless 2.4G mode (optional function, only applicable to MG35Z model, need to adapt to our receiver)

① 2.4G wireless receiver support: PC device/Tesla vehicle system /Switch host dock/Smart TV/TV box /PS3 host;

② Insert the 2.4G wireless receiver into the USB interface of the corresponding device above;

- ③ Press L+HOME button on the controller for 2 seconds at the same time, the controller enters wireless pairing mode, and the LED1+LED2+LED3 indicator blinks quickly;
- ④ After the wireless connection is successful, the LED1+LED2+LED3 indicator light is long on, you can start to operate the game;
- ⑤ When connecting the NSwitch host base, make sure that the “wired connection of Pro handle” is enabled in the system Settings of the NSwitch host;

7. Wired mode

- ① Cable support: PC device /Switch host dock /PS3 host/smart TV;
- ② PC cable connection Use a USB cable to connect the controller to the computer. After the connection, the controller LED1 lights up, and the default mode is X-INPUT.
Press and hold the HOME button for 5 seconds to switch to D-INPUT mode. At this time, the controller LED2 lights up; It is recommended to play games on Steam platform, pay attention to the “Steam- Settings – controller – common controller Settings” check the support options;
- ③ NSwitch cable connection When connecting the NSwitch base, make sure that the “Wired connection for Pro handle” is enabled in the system Settings of the NSwitch host. Use the provided TypeC wire to connect the handle and the NSwitch base. After the connection is successful, the corresponding LED light will be on;
- ④ PS3 host/Smart TV cable connection: Plug in the USB cable to connect the PS3 host/smart TV. After the connection, the corresponding LED light on the handle will be steady on;

8. Control of the magic light strip

- ① Turn on the magic light bar default to the left and right color breathing change;
- ② Press and hold down the two rockers at the same time to control the light effect switch: left and right color change – left and right color unchanged -Turn off the light effect.

9. Control of ambient lights

The atmosphere light is on by default. Press the Turbo+Right joystick to turn on/off the atmosphere light.

10. The TURBO function

- ① Action keys include (A/B/X/Y/LZL/R/ZR)8 keys, all of which can manually set the TURBO function;
- ② Setting mode: Press and hold down the action key, then tap the TURBO key to enable the TURBO function, hold down the action key, and tap the CLEAR key to disable the Turbo function.
- ③ After the product is hibernated, shut down and restarted, the TURBO function is automatically cleared. If TURBO is enabled, the turbo function is automatically cleared Function, must be reset;

11. Handle charging/sleep/wake up/shutdown functions:

- ① Handle charging function;
 - a. When the battery is low, the LED4 indicator blinks quickly.
 - b. When charging, LED4 indicator light blinks slowly;
 - c. When fully charged, the LED4 indicator light is long on.
- ② Handle sleep/wake up/shutdown function:
 - a. If no button is pressed within 5 minutes, white motion sleep is performed;
 - b. When you need to use again, press the HOME key to wake up the handle for 1 second, and you can connect back;
 - c. In the startup state, long press the HOME button for 5 seconds, the product is shut down, and all LED indicators are off;

TROUBLESHOOTING

1. When there are small scratches on the appearance, do not worry, because the injection molding does not affect the function, you can continue to use with confidence.
2. When the charging light is not displayed, please replace the wire for charging. If it is solved, the wire is damaged, please replace the wire; If there is still no response to replacing the wire, please contact the dealer for replacement or repair.
3. If there is no response, make sure that the handle corresponds to the single cable of the host. If there is no response, press the home button down for 3-5 seconds, and then press the home button again after the handle is turned off. If there is still no response, restart the corresponding host and reconnect. If the connection fails, contact the dealer for further troubleshooting or handling.
4. When using the receiver for connection, please make sure that the host is not connected to other handles. If the connection is disconnected, please check whether there is interference from other devices around the use environment, and make sure that the use distance of the connection is within 10 meters of the effective distance
5. When there is Bluetooth function delay, disconnection, failure, etc., please charge in time, if there is still this phenomenon, please contact the dealer to replace and repair.

FCC WARNING

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC WARNING

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WEEEWARNING

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available. If electrical appliances are disposed o in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



Documents / Resources

	<p>MINISO MG35 Ice Brick Series Clear Game Controller [pdf] User Manual MG35 Ice Brick Series Clear Game Controller, MG35, Ice Brick Series Clear Game Controller, Clear Game Controller, Game Controller, Controller</p>
--	---

References

- [MINISO](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.