

MINISO SW-MC3000 Chargeable Wireless Keyboard User **Manual**

Home » MINISO » MINISO SW-MC3000 Chargeable Wireless Keyboard User Manual



Contents

- 1 MINISO SW-MC3000 Chargeable Wireless
- **Keyboard**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Frequently Asked Questions**
- **5 Product parameters**
- **6 Function operation introduction**
- 7 FCC Warning
- **8 Certification**
- 9 Documents / Resources
 - 9.1 References

MINISO

MINISO SW-MC3000 Chargeable Wireless Keyboard



Product Information

Specifications

Model: SW-MC3000
Rated Voltage: 5V
Rated Current: 150mA

• Battery Type & Capacity: Lithium battery, 150mAh

• Pairing Name: MINISO-SW-MC3000

• Connection: 2.4G Wireless

Product Usage Instructions

System Connection

- 1. Turn the power button to the ON position.
- 2. Select the corresponding keyboard name on your computer or iPad: MINISO-SW-MC3000.
- 3. Once connected successfully, the blue light will automatically turn off.
- 4. The product has a memory function and will default to the last mode used when turned on.

System Switch

- Press fn+q to switch to the Android system.
- Press fn+w to switch to the Windows system.
- Press fn+e to switch to the iOS system.

Troubleshooting

- 1. Check if the USB head is properly plugged into the port.
- 2. Verify the settings on the computer.
- 3. Ensure the product or receiver is directly connected to the computer without external devices like hubs.
- 4. If issues persist, restart the computer.

Frequently Asked Questions

- · Q: What should I do if the product is not working properly?
 - A: Follow these steps Check the USB connection, verify computer settings, connect directly, and restart the computer.
- · Q: How do I switch between different operating systems?
 - **A:** Use the following shortcuts fn+q for Android, fn+w for Windows, and fn+e for iOS.

Life is for Fun series rechargeable BT wireless keyboard model: SW-MC3000

Product parameters

middle:

• Rated voltage: 5V

• Rated current: 150mA

• Battery type quantity: Lithium battery 150mAh

• Pairing name: MINISO-SW-MC3000

Function operation introduction

middle:

2.4G connection	Turn the power button to the ON position.
	Select the corresponding name of the keyboard on the computer/IPAD: MINISO-SW-MC300
	After the connection is successful, the blue light will automatically turn off.
	The product has a memory function. When it is turned on, it will default to the last mode used.
System Switch	fn+q switches to the Android system fn+w switches to the Windows system fn+e switches to the ios system

Cautions

- 1. Do not use it in a damp place.
- 2. Avoid breaking or dropping the product to prevent damage or malfunction.
- 3. Do not disassemble or repair the product by yourself.
- 4. To prevent leakage and damage, remove the battery from the product if you won't be using it for a long time.
- 5. Electrical and electronic equipment should not be disposed of with household waste. Please recycle or reuse these products to protect our environment.
- 6. It is recommended to replace the battery periodically to avoid low power, which may influence the user experience.

FCC Warning

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference,
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



WEEE Warning:

- Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Certification



Documents / Resources



MINISO SW-MC3000 Chargeable Wireless Keyboard [pdf] User Manual

SW-MC3000 Chargeable Wireless Keyboard, SW-MC3000, Chargeable Wireless Keyboard, Wireless Keyboard, Keyboard

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.