



MINISO TM-053 CD Patterned Wireless Headphones User Manual

[Home](#) » [MINISO](#) » MINISO TM-053 CD Patterned Wireless Headphones User Manual 

Contents


- [1 MINISO TM-053 CD Patterned Wireless Headphones](#)
- [2 PRODUCT AND ACCESSORIES](#)
- [3 SPECIFICATIONS](#)
- [4 USAGE INSTRUCTIONS](#)
- [5 OPERATION INSTRUCTION OF WIRELESS USE](#)
- [6 USAGE INSTRUCTIONS](#)
- [7 ENVIRONMENT-FRIENDLY DISPOSAL](#)
- [8 FCC WARNING](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



MINISO TM-053 CD Patterned Wireless Headphones



PRODUCT AND ACCESSORIES

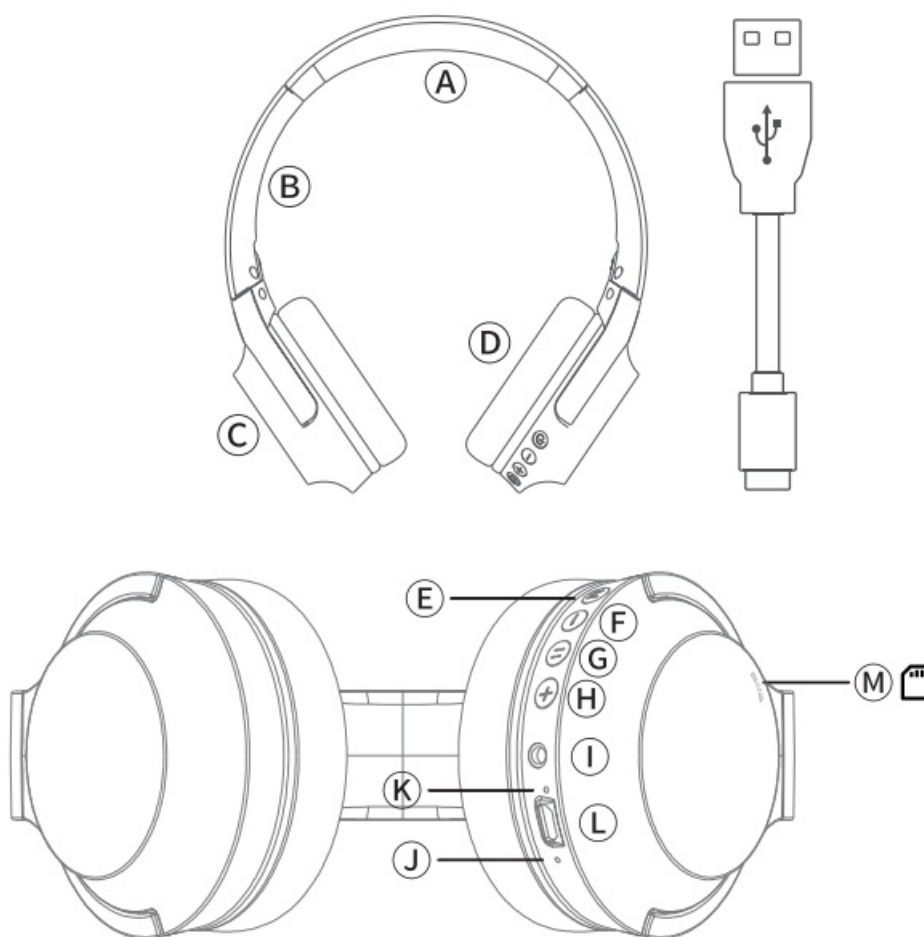

1. Head beam
2. Stretchable lever
3. Outer shell
4. Earpads Cover
5. Power switch/Mode
6. Volume-/previous
7. Play pause/answer and hang up ® Volume+/next
8. 3.5MM audio input
9. MIC
10. Indicator light
11. MICRO USB port
12. TF card socket

SPECIFICATIONS

- **BT version:** v5.a
- **BT pairing name:** MINISO-TM-053
- **Transmission distance:** 10m
- **Use time:** 4h
- **Charging time:** within 2hrs
- **Standby time:** 300h

- **Battery:** 200mAh chargeable lithium battery
- **FM frequency:** 87.5-108MHz
- **Wireless frequency:** 2.402-2.480GHz
- **Output power:** 0.2mW
- **SNR:** 88Db
- **Loudspeaker:** 040mm Sensitivity: 110±3dB S.P.L at 1 KHZ Impedance: 320
- **Frequency response:** 20Hz-20 KHz
- **Rated power:** 5mWX2
- **Music time:** 5h

USAGE INSTRUCTIONS

INSTRUCTIONS OF BUTTON OPERATION

- Hold E button for 3 seconds to turn on/off the headphones.
- If there is an incoming call when BT is connected, short press G button to answer the call, hold it to reject the call, or click twice to redial.
- When BT is connected, short press G button to play or pause music. When TF card is inserted for music play, short press G button to play or pause music.
- In FM mode, short press G button to auto search radio set.
- When BT is connected, short press H button to increase volume, hold it to next.
- In MP3 mode, short press H button to increase volume, hold it to next.
- In FM mode, short press H button to increase volume, hold it to next radio frequency point.

M

- Short press to switch mode BT/MP3/M
- When BT is connected, short press F button to turn down the volume, hold it to previous.
- In MP3 mode, short press F button to turn down the volume, hold it to previous.
- In FM mode, short press F button to turn down the volume, hold it to previous radio frequency point.

INDICATOR LIGHT

- When BT is connected, red and blue lights will flash quickly when pairing. Blue light will flash slowly after successful pairing.
- In MP3 mode, the blue light flashes slowly when play music.
- In M status, the blue light stays on when listening to the radio and the blue light flashes quickly when searching radio sets.
- When charging, the red light stays on and dims out when charging is completed.

OPERATION INSTRUCTION OF WIRELESS USE

1. long press the E key for 3 seconds to power on, and boot the default wireless state.
2. flashing red and blue lights, enter pairing state wirelessly.

3. search for this product wirelessly with the wireless name of MINISO-TM-053 on your mobile phone.
4. when the phone searches for the MINISO-TM-053 device name, click to connect. If prompted for a password, the password is 0000.
5. when the wireless connection is successful, the blue light flashes slowly.
6. Open the mobile music player to play music, this product can control wireless. Up and down music, play and pause music and call answer, redial and other functions.

INSTRUCTIONS FOR USING MP3

1. long press E key for 3 seconds to power on.
2. play TF memory card to enter MP3 song playback state or press E key to switch to MP3 play state.
3. short press G key for MP3 play / pause.
4. long press+ or-for MP3 up and down control.
5. short press + or-for MP3 volume control.

INSTRUCTIONS FOR USING FM

1. long press E key for 3 seconds to power on.
2. short press E key to FM mode.
3. FM status short press G key to automatically search all stations that can be received at one time.
4. long press+ or-to select the radio station that has been searched.
5. short press + or-for FM volume control.

LINE EXTERNAL AUDIO INPUT OPERATION INSTRUCTIONS

1. Power on, plug in audio cable, enter AUX LINE IN mode.
2. support external audio input such as mobile phone / MP4/MP3/CD notebook.

USAGE INSTRUCTIONS

1. Rechargeable battery may not be disassembled.
2. Do not use headset when driving to avoid traffic accident.
3. The packaging must be retained since it contains important information.

ENVIRONMENT-FRIENDLY DISPOSAL

You can help protect the environment!

Correct Disposal of Product

This mark indicates the product should not be disposed of in the same way as other household wastes in EU regions. The product should be recycled to ensure sustainable reuse of resources and to prevent potential harm for the environment and human health caused by non-control of waste management. To recycle the used appliance, apply the recycling system or contact the franchiser to recycle the product according to the environmental protection requirements.

FCC WARNING

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Documents / Resources

| | |
|---|---|
|  | <p>MINISO TM-053 CD Patterned Wireless Headphones [pdf] User Manual TM-053, TM053, 2ART4-TM-053, 2ART4TM053, TM-053 CD Patterned Wireless Headphones, Wireless Headphones, Headphones</p> |
|---|---|