

MINISO X30 Bluetooth Earbud



MINISO X30 Bluetooth Earbud Owner's Manual

[Home](#) » [MINISO](#) » MINISO X30 Bluetooth Earbud Owner's Manual 

Contents

 
- [1 MINISO X30 Bluetooth Earbud](#)
- [2 How to wear headphones correctly](#)
- [3 Product Description](#)
- [4 Specification of Product](#)
- [5 Touch Operation](#)
- [6 Indicator Light Description](#)
- [7 Icon Introduction](#)
- [8 Battery status](#)
- [9 Item list](#)
- [10 Warranty Statement](#)
- [11 Important safety tips](#)
- [12 FCC STATEMENT](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

 
MINISO

MINISO X30 Bluetooth Earbud





How to wear headphones correctly

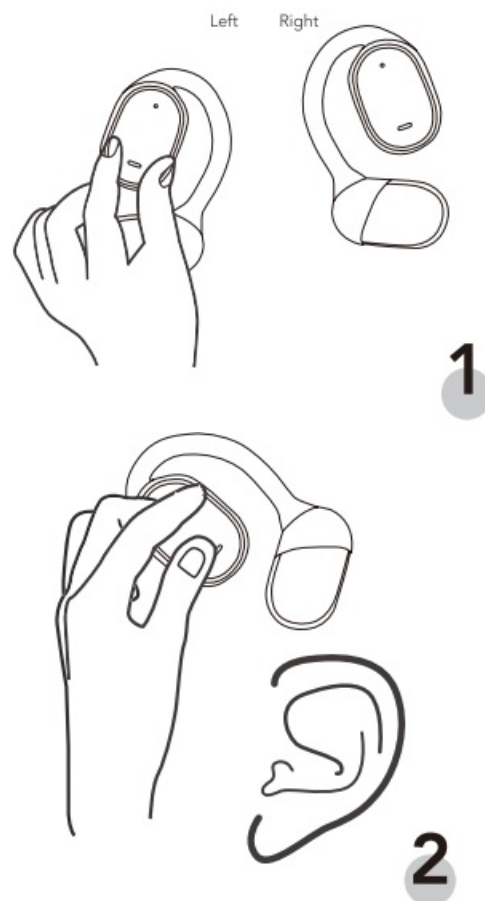

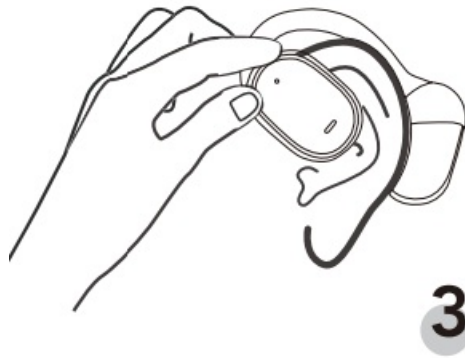

4

  Product Description

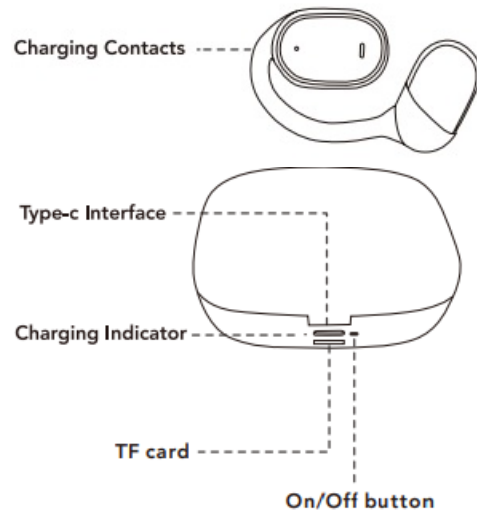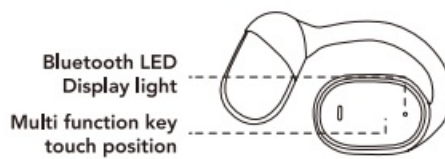

Specification of Product

- **Model of Product:** X30
- **Version:** V5.4
Effective Distance: Approx. 10m
- **Speaker Diameter:** @ 16mm
- **Impedance:** 329

- **Frequency Response:** 20Hz-20KHz
- **Microphone Sensitivity:** -42dB÷3dB
- **Earphone Input:** 5V = 50mA
- **Charging Case Input:** 5V-: 400mA
- **Charging Case Output:** 5V 100mA
- Earphone Battery Capacity: 50mAh
- Charging Case Battery Capacity: 400mAh
- **Duration:** Approx. 6H (Earphone)
- **Earphone Charging Time:** Approx. 1.5 H
- **Charging Time of the Charging Case:** Approx. 2 H

Touch Operation

Connect with Bluetooth device



- Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name to pair.

Indicator Light Description

 


- When the headset is turned on: the white light and the ice blue light flash alternately

- When the headset is turned off: the white light flashes 3 times quickly and then goes out
- Pairing status: white light and ice blue light flash alternately
- Connection successful: no light



- Headphone charging: The charging case indicator light is always white, and the white indicator light for the headphones is always on. After the earphones are fully charged, they turn off, and the charging case indicator light also goes off.
- Charging of the charging case: The charged, the red indicator light on the charging case remains on.

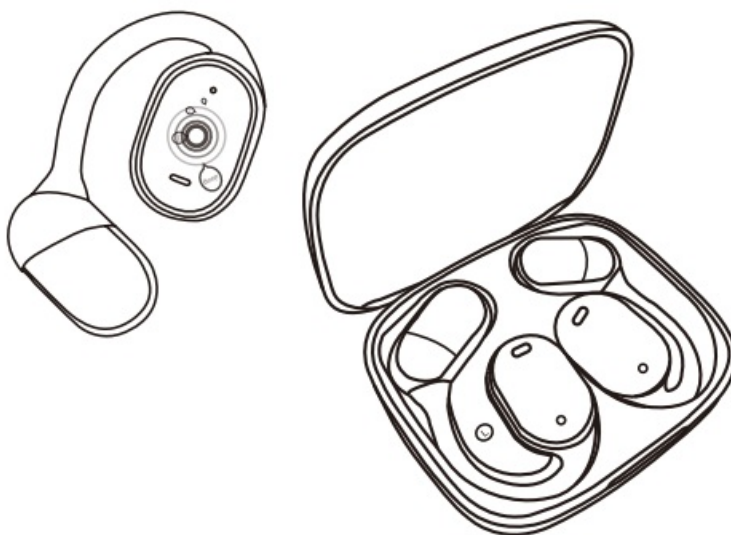

Power On

 
Automatic power on: The earphones are in the charging case, open the charging case cover, and the Earphones will be powered on, with the prompt sound of “Du”. Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of “Du”.

Power Off

Auto power off: Put the Earphones in the charging case, and close the charging case cover, the Earphones will be powered off, with the prompt sound of “Du”. Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of “Du”.

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; If it is not connected to a Bluetooth device after 3 minutes, it will automatically power off after 3 minutes, with the prompt sound et “on” ”

Once Press

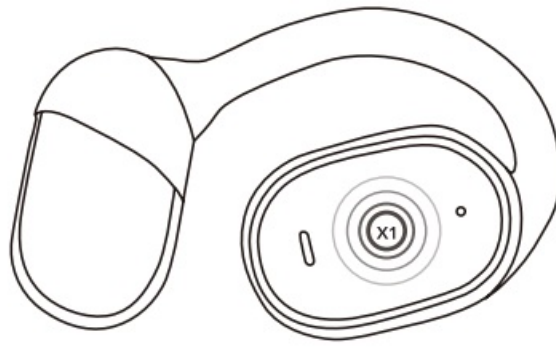

Music mode



 
Play/Pause

Phone mode



Call Answer/End

Double Press

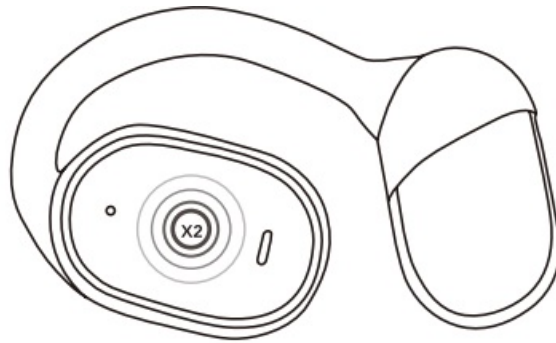

Music mode

 


Double press the right ear:
Volume up



Double press the left ear:
Volume decreases


Long Press

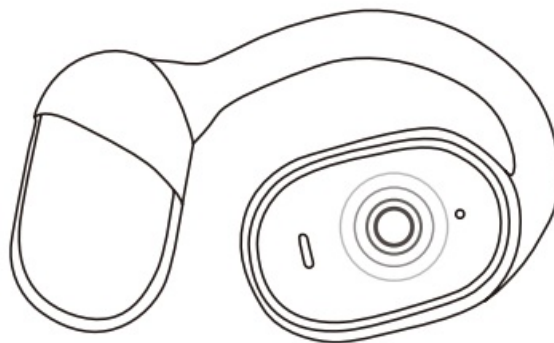

Wake up voice assistant

 


When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice sit-on so naive are one press and

Phone mode 

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

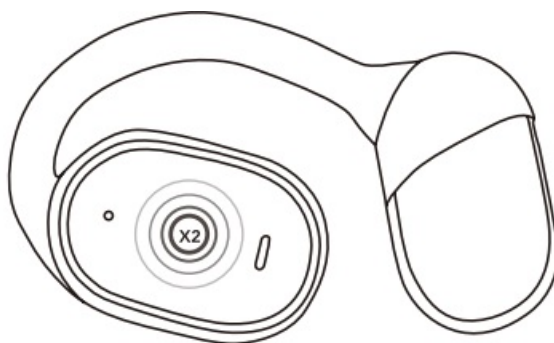

Music mode



 
Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

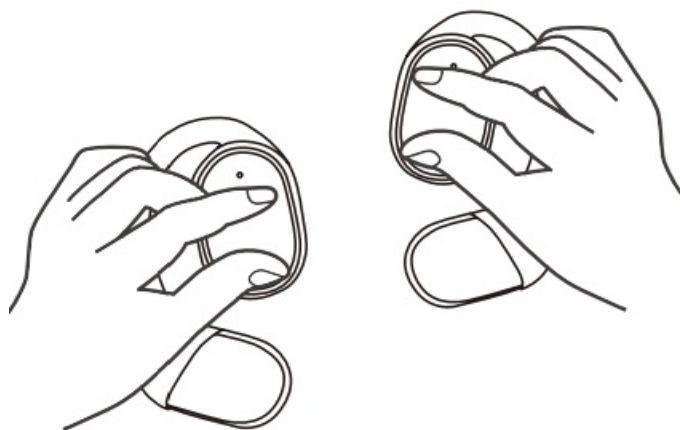

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, thereon. After successful pairing, there Will be to beep aro
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound “beep”

 Switch between game mode and music mode (Binaural operation)

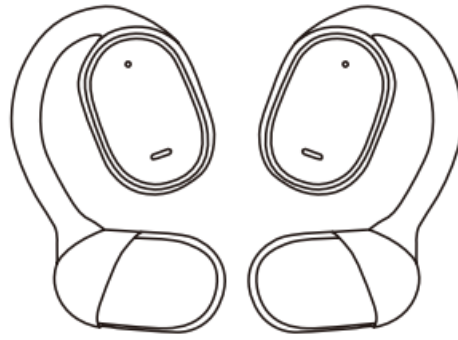

Game mode



Press and hold the multi-function button on the right ear for 2 seconds

Music mode



Press and hold again for 2 seconds

- **Note 1:** When using one earphone, you cannot switch between game mode and music mode.
- **Note 2:** The factory setting defaults to music mode

Icon Introduction



 
Bluetooth status

White status: The charging compartment is not connected to the headphones


Green status: The charging compartment is connected to the earphones, but the earphones are not connected to the phone

Blue status: The charging compartment is connected to the headphones, and the headphones are connected to the phone.

connection from

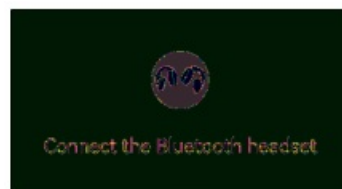

①

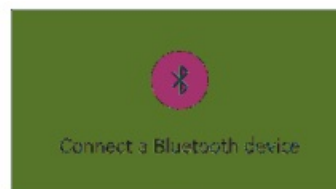 

②

- No. 1: This interface represents the use of this function, which requires the charging compartment to be connected to the headphones.
- No. 2: This interface represents the use of this feature, which requires headphones to be connected to Bluetooth devices on the phone or computer.

Battery status



Charging status indicator icon for the charging compartment

- Green: Charging in progress

- Blue: fully charged
- Red: Low battery
- White: Normal battery level, not charging

Heard he enchanting status indices charging compartment **L** **R**

 
- Blue: fully charged
- White: The headphones are not charging

Lock screen interface

Unlock: Slide to the right to unlock the screen




Phone Music interface

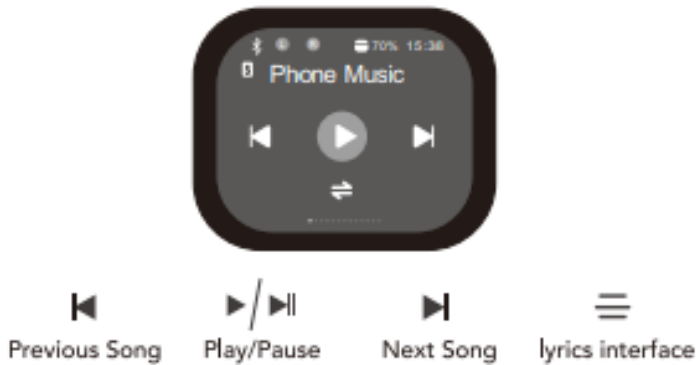


Volume adjustment interface



 Spatial sound interface

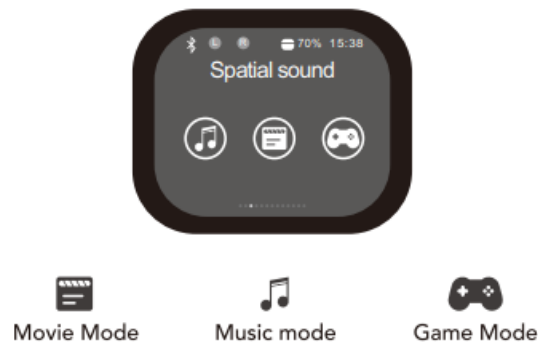

Equalizer interface

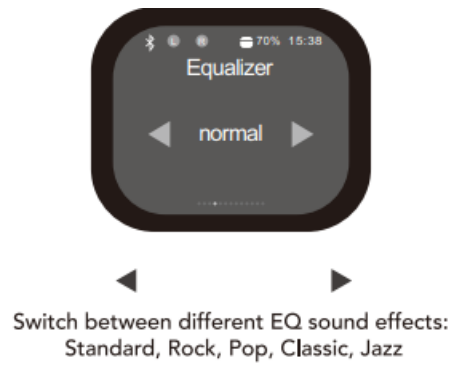 


Switch between different EQ sound effects:
Standard, Rock, Pop, Classic, Jazz

Alarm clock interface



Switching requires setting the alarm time:
5 minutes, 10 minutes, 30 minutes, 60 minutes

 Light Level interface

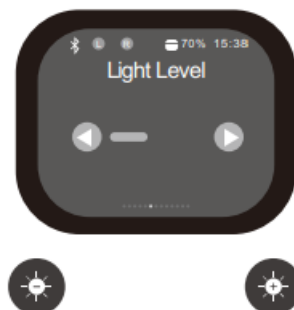

- Click the left button to decrease the screen brightness;
- Click the button on the right to increase screen brightness

Language Switch interface



Click to switch languages from different countries

Screen lock interface



Click to switch between different lock screen wallpapers, the current screen is the selected lock screen wallpaper

Find My Earphone interface



Click the UR button, and the number 3 screen will appear

Time setting interface



Automatic update: When the charging compartment, headphones, and phone are connected, the time on the phone will be automatically updated to the charging compartment Manual update: Click the button to enter manual setting

Like interface



Photograph interface

 


Click the button to turn on the flashlight, the entire screen turns white and the brightness of the screen increases

Item list



Headphones *1

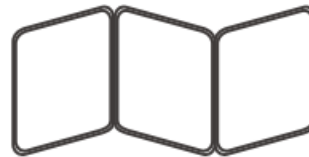

Instruction *1



Charging case *1



Charging cable *1

Warranty Statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying material are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies. Service supervision hotline: 400-812-010 MINISO Product service policy If you encounter a problem, please contact our customer service to solve it. After-sales email: 7@hifi-earphone.com

Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period") and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date. If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

- Electromagnetic interference:
- Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.
- Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

Safety matters:

- Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.
- Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type, battery usage.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery to be damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

FCC STATEMENT

FCC ID: 2A83K-X30

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction.

Documents / Resources

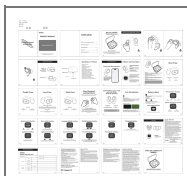

[MINISO X30 Bluetooth Earbud](#) [pdf] Owner's Manual
X30 Bluetooth Earbud, X30, Bluetooth Earbud, Earbud

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.