



MINISO YF-2305BT Minimalist Headset User Manual

[Home](#) » [MINISO](#) » MINISO YF-2305BT Minimalist Headset User Manual

Contents [[hide](#)]

- [1 MINISO YF-2305BT Minimalist Headset](#)
- [2 Product Parts](#)
- [3 Product Parameters](#)
- [4 Functions](#)
 - [4.1 Cautions](#)
- [5 Troubleshooting](#)
- [6 FCC Warning](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)


MINISO

MINISO YF-2305BT Minimalist Headset



PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT PROPERLY

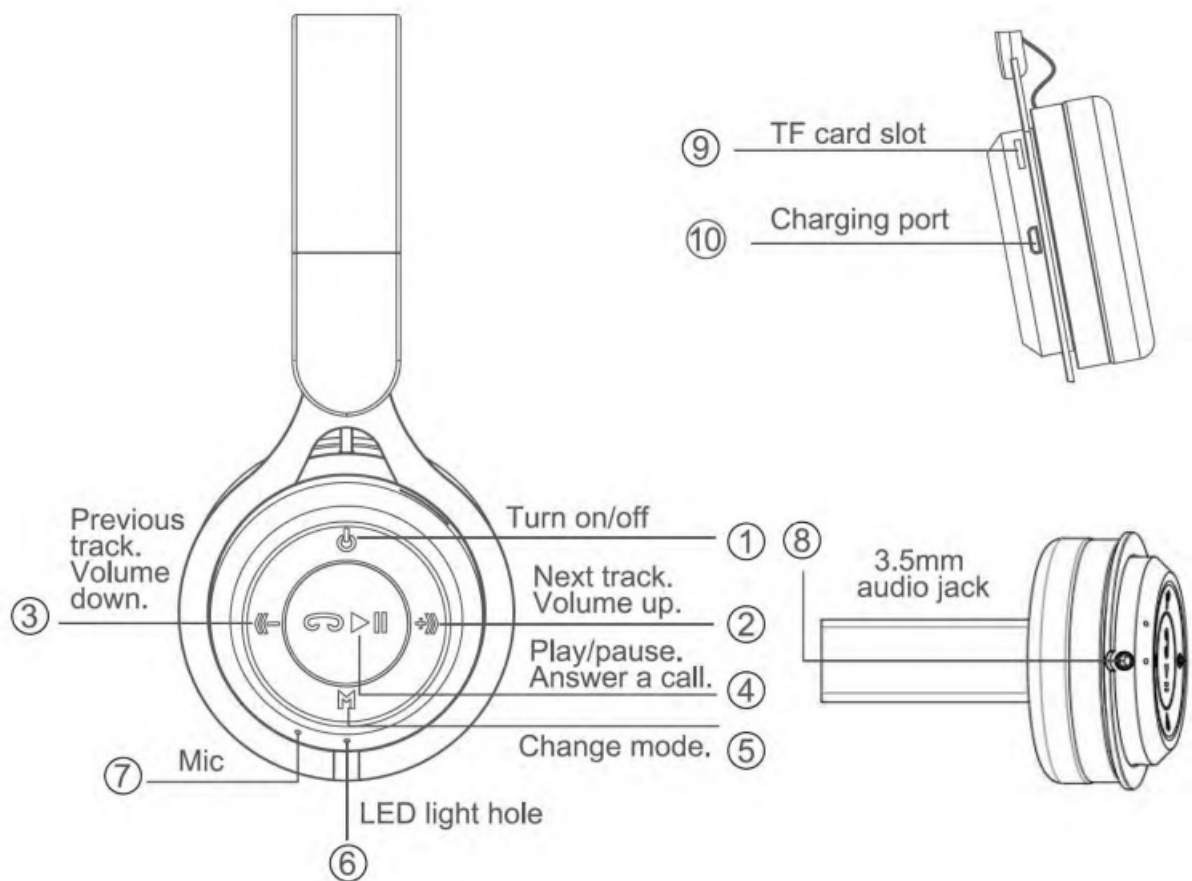

Product Parts





Product Parameters

BT version	V5.1	Frequency range	20Hz-20KHz
Name of bluetooth device	MINISO YF-2305BT	Sensitivity	105±3
Function	Media player, phone call.	Charging port	Micro USB Port
Input	DC 5V	Transmission distance	≤10M
Battery capacity	200mAh	Charging time	2h
Music playback time	12h	Talk time	6h
Standby time	18h	Impedance	32Ω

Functions

Functions	Instructions
Turn on	 Long press power button for 3s.
Turn off	 Long press power button for 3s.
Pairing mode	The indicator light blinks in red and blue fast during pairing. When pairing is successful, the light blinks slowly in blue.
Previous track/ Volume down	⏮ ① BT/MP3 mode: Long press the button for previous track, short press to lower the volume. ② FM mode: short press for previous radio station, long press to lower the volume.
Play/Pause	▶⏮ When the music is playing, short press to play/pause the music.

Functions	Instructions
Turn on	 Long press power button for 3s.
Turn off	 Long press power button for 3s.
Pairing mode	The indicator light blinks in red and blue fast during pairing. When pairing is successful, the light blinks slowly in blue.
Previous track/ Volume down	⏮ ① BT/MP3 mode: Long press the button for previous track, short press to lower the volume. ② FM mode: short press for previous radio station, long press to lower the volume.
Play/Pause	▶⏮ When the music is playing, short press to play/pause the music.

Line in jack	Ⓢ With audio cable plugged in, the headset will enter AUX LINE IN mode directly. In that case, the buttons on headset are all disabled.
--------------	---

Cautions

1. Hearing damage risk. LDo not listen at nign volume levels TOr long periods.
2. For your safety, do not use it in potentially hazardous condition.
3. Do not listen to music, call up or answer the phone while driving to avoid danger caused by distraction.

4. Keep it out of reach of children to avoid danger caused by improper use.
5. Do not throw it to avoid damage caused by dropping.
6. Do not store or use it under -20°C or above 45°C to avoid shortening the lifespan of earphones and battery.
7. Do not modify, disassemble or repair the product.
8. Irreplaceable battery. It should be disposed of according to local rules & regulations or be recycled by professional institute. Do not throw away or toss it into fire.
9. When not in use for a long time, charge the earphones every 3 months to extend its service life.
10. Avoid contact with water and other liquids to prevent them from penetrating into the product.
11. When the volume has been raised to 85dB, the wireless earphones will warn you with three consecutive beeps.
12. Risk of explosion if the battery is replaced by an incorrect type disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Troubleshooting

1. Fail to pair the wireless earphones with your cell phone.
Solution: Check if the earphones are in pairing mode, and whether the phone has BT function on. Check the list on your phone, remove the earphones from the list, follow the instructions of user manual to pair the earphones with your phone again.
2. Cannot turn on the wireless earphones.
Solution: Check the battery to see if it is low.
3. Can the battery of the wireless earphones be replaced?
Answer: No. The lithium polymer battery in the earphones is irreplaceable.
4. The wireless earphones got disconnected with the phone within 10 meters.
Solution: BT is wireless so that it is very sensitive to objects between the earphones and the connected device. Check if there are any metal or other objects that may affect the connection within the effective distance.
5. Cannot hear audio playing when the earphones are connected to the computer or phone.
Solution: Check whether the computer's audio output is already connected to wireless device and whether the Bluetooth in the computer supports A2DP protocol. Make sure the volume is up on your phone or computer.
6. Can I operate the Apps of my phone through the earphone connecting the wireless earphones to the phone?
Answer: Some apps may not support being operated through the earphones due to their settings.

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED Warning


This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

www.miniso.com

Documents / Resources

	MINISO YF-2305BT Minimalist Headset [pdf] User Manual YF-2305BT Minimalist Headset, YF-2305BT, Minimalist Headset, Headset
---	---