



Mircom MP-3500W-R Solenoid EOL Module User Manual

[Home](#) » [Mircom](#) » Mircom MP-3500W-R Solenoid EOL Module User Manual 



Contents

- [1 Mircom MP-3500W-R Solenoid EOL Module](#)
- [2 Parts List](#)
- [3 Wiring](#)
- [4 Mounting](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mircom MP-3500W-R Solenoid EOL Module




Parts List

- Qty 1... MP-3500W/R Solenoid EOL Module (white or red)
- Qty 2... #6-32 1" screw

Wiring

WARNING!

DISCONNECT POWER TO ALL RELEASING DEVICES BEFORE SERVICING THE PANEL

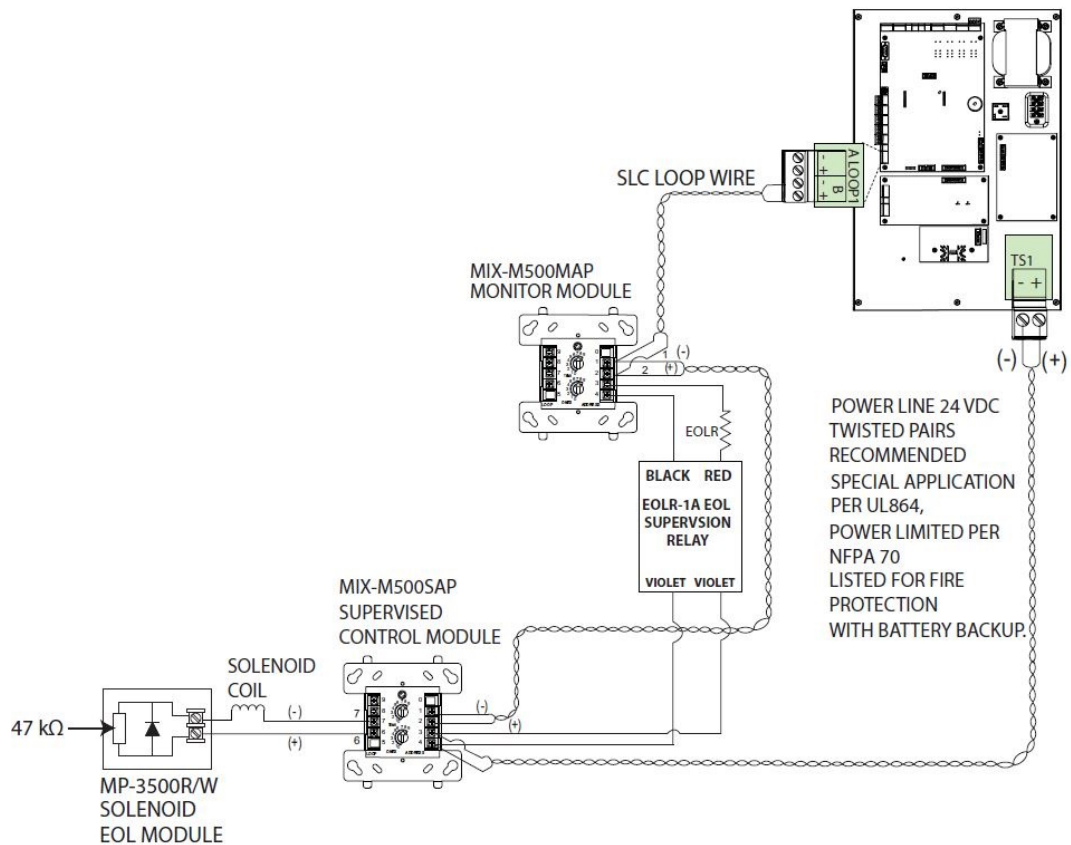


ALL WIRING SHOWN IS SUPERVISED AND POWER LIMITED

Mounting

Mount the MP-3500W/R to a 4" gang box with the 2 included screws.

firealarmresources.com

Documents / Resources

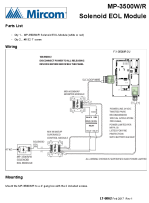	Mircom MP-3500W-R Solenoid EOL Module [pdf] User Manual MP-3500W-R Solenoid EOL Module, MP-3500W-R, Solenoid EOL Module, EOL Module, Modul e
---	---

References

-  [Fire Alarm Resources | Download fire alarm documents](#)