

Contents [[hide](#)]

- [1 MISIRUN s1 Kids Print Camera](#)
- [2 Key and interface function introduction](#)
- [3 Product Description](#)
- [4 Basic operating instructions](#)
- [5 FCC Declaration](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

MISIRUN

MISIRUN s1 Kids Print Camera



Specifications

- Product Name: Kids Print Camera
- Interface: Type-C
- Power Source: External power or battery

Instruction Manual

- Please read the instruction manual carefully before using this product.
- The instruction manual is for reference only. The specific operation shall be subject to the actual product.

Key and interface function introduction

Power button

Long press to turn on/off;

Shutter release button

1. Confirmation key;
2. Tap this button under the photo/video mode interface to take photos or videos; long-press to switch the front and rear lenses;
3. Music Interface Tap to play/pause music;
4. Tap to play/pause the video when playing the video in the album interface.

Print key

1. Under the photo interface, tap to turn on/off printing; (under charging status, not printable)
2. Music Interface Tap to open/close the music list.
3. In video mode, tap to switch filters;
4. Music Interface Tap to switch to the next song.

Photo Album Key

Under the main interface, video/photo interface, tap to quickly enter the album interface.

Menu key


1. Under the photo interface, tap to turn on the flash/fill light mode;
2. Under the video recording interface, tap to turn on/off the fill light mode;
3. Under the album and music interface, tap to tap out the delete file function;

4. Under the main interface, tap to quickly enter the menu settings.

Product mix

Product Description

1. Print exit/paper bin
2. Rear lens
3. Back button
4. Right button
5. Left button
6. Shutter button
7. Charging port
8. Reset hole
9. Fill light/flash
10. Front lens
11. Print button
12. Menu button
13. Album button
14. Power button
15. TF card slot

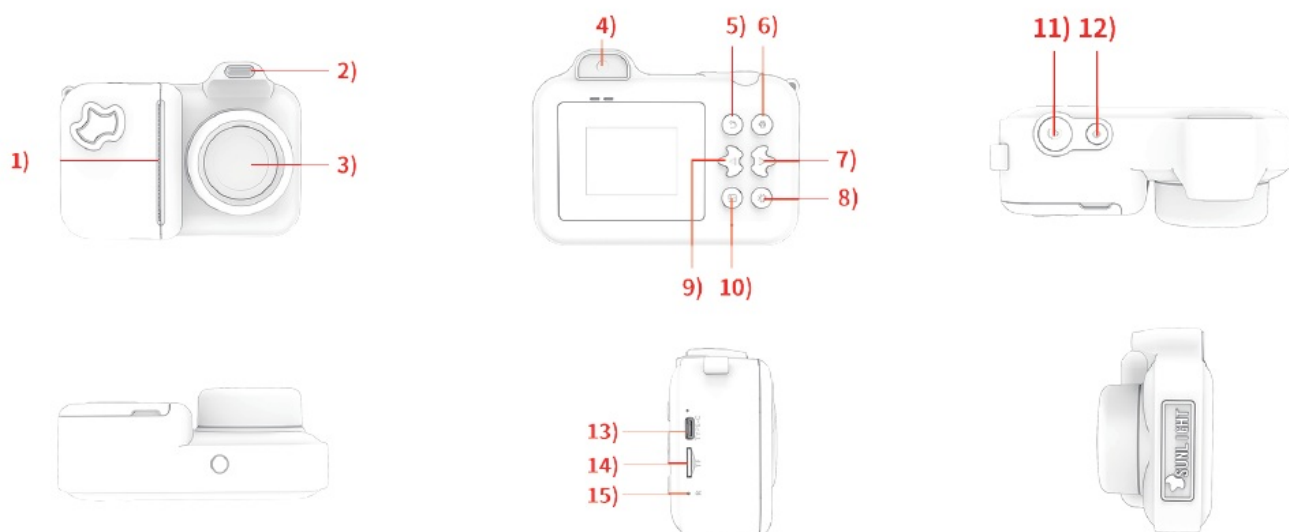

Return key

Tap to return to the previous level.

Left click

1. Selection keys to the left/up;
2. Under the photo interface, tap to switch between continuous shooting, timer, timer 5+ continuous shooting, filter/effects/photo frame; long press to zoom in focus;
3. Under the video recording interface, short press to switch filters;
4. Music Interface Tap to switch to the previous song.

Right click

1. Right/down selection keys;
2. Under the photo interface, tap to switch between continuous shooting, timer, timer 5+ continuous shooting, filter/effects/photo frame; long press to narrow the focus.

Charging port

1. Interface type: Type-C;
2. Used to connect to an external power source to charge the battery or provide working power;
3. Used to connect to PC; when there is a memory card inside the device, you can view the files on PC; when the device is not inserted, the device is used as a PC camera.

Reset button

When the machine has a splash screen, abnormal dead, etc., a short poke with a pinhole-like object can force the machine to shut down.

Print exit/paper bin

1. Print photo thermal paper outlet;
2. Print paper placement.

Tip: When replacing the printing paper, do not use brute force to avoid breaking the machine;




Basic operating instructions

Power on and off









Press and hold the 'power button' for 2 seconds to turn the unit on or off.



Camera mode

(flash on , fill flash on , fill flash off ,). 6) Tap the 'Return Key' to return to the previous level.

Note: Tap 'Left/Right Key' function introduction (you need to turn off printing first to call up the following functions):



1. The   icon appears as a continuous '3/5 shot'
2. The    icon appears as a countdown to take a photo '3/5/10 seconds';
3. The  icon appears for 'black and white sketch' effect; the glycol  appears for 'color sketch' effect;
4. Appears Is  icon is 'Countdown 5 seconds to 3 consecutive shots'

Put the downloaded 'mp3' format songs into the MP3 folder of the TF card, insert the TF card into the card slot when finished, move the cursor to and tap the 'shutter button' to enter the music mode;

NAME	MODIFIED DATE	TYPE
 MP3	2022/6/9 12:04	Folder
 PHOTO	2022/6/9 12:04	Folder
 VIDEO	2022/6/9 12:04	Folder

1. Tap 'Shutter button' to play/pause music.
2. Tap 'Left/Right Button' to switch songs, long press to increase/decrease volume.
3. Tap the 'Print button' to open/close the song list.
4. Tap the 'Menu Key' to bring up the Delete setting.
5. Tap the 'Back button' to return to the previous level.

Move the cursor to and press the 'shutter button' to enter photo mode;

1. Tap the 'shutter button' to take a picture, the indicator light blinks once when taking a picture to indicate that the photo is complete; long press to switch the front and rear lenses;
2. Print photos: Tap and press the 'Print button'  when the icon  will appear on the upper right button, then press the 'Shutter button' briefly to print the photos (under charging status, it can not be printed).
3. Tap 'Left/Right Button' to switch between photo frames, effects, filters; long press to zoom in/out focus.
4. Tap the 'Album button' to quickly enter the album interface.
5. Tap the 'menu button' to open the flash/fill light.



Video Mode

Move the cursor to point and press the 'shutter button' to enter the video recording mode;

1. Tap the 'shutter button' to record, the indicator light starts flashing when recording, indicating that the video is working, tap again to stop recording and save; long press to switch the front and rear lenses.
2. Tap 'left/right button' to switch filters.
3. Tap the 'Album button' to quickly enter the album interface.
4. Tap the 'menu button' to turn on/off the fill light.
5. Tap the "Back button" to return to the previous level.



Music Mode



Album Mode

Move the cursor to the point and press the 'shutter button' to enter playback mode;

1. Tap 'left/right button' to toggle the file view.
2. Tap the 'Shutter button' to play/pause the video file.
3. Tap the 'Menu Key' to bring up the delete settings.



4. Photo files first tap the 'Print button' upper right button will appear when the icon, then tap the 'Shutter button' to print photos. (Not available when charging).
5. Tap the 'Back button' to return to the main interface.

Note: Unplugging the card is prohibited during video/photo/ music/playback mode operation!



Game Mode

Move the cursor to and press the 'shutter button' to enter game mode;

1. Tap the 'left/right button' to toggle the game, then tap the 'shutter button' to enter.
2. Move left/right by 'left/right key'; move up/down by 'album key/menu key'.
3. Tap the 'Back button' to exit the game.



Menu Mode

Move the cursor to Tap and press the 'shutter button' to enter menu mode;

1. Tap the 'Left/Right button' to toggle up and down to select the setup menu options.
2. Tap the 'Shutter Button' to select Confirm Settings and save changes.

FCC Declaration

FCC Declaration for Children's Camera

Printer

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Tests and Measurements

The tests and measurements have been

USB Mode

1. Device 'without card' connected to the computer, the device appears as Figure (1-1). At this time the device is 'PC camera' select this mode will be used as a computer camera.



Figure 1-1



Figure 1-2

2. Device 'plug card' connected to the computer, the device appears as shown in Figure (1-2). At this time the device is 'Memory' Select this mode to read and access video files/photo files/MP3 files; performed in accordance with the applicable FCC standards and procedures to demonstrate compliance with the FCC regulations.

Labeling and Markings

The device is labeled with the FCC Identifier and other relevant information as required by the FCC rules.


Responsibility

The manufacturer is responsible for ensuring that the device complies with the FCC requirements. If modifications are made to the device that affect its compliance, it is the responsibility of the modifier to ensure that the device continues to comply with the FCC regulations.

FAQ

- **Q: How do I switch between front and rear lenses?**
 - A: Long-press the ‘Shutter Release’ button to switch between front and rear lenses.
- **Q: How do I access different shooting modes?**
 - A: Use the ‘Left Click’ or ‘Right Click’ buttons under the photo interface to select between continuous shooting, timer, and filters.
- **Q: Can I view files on a PC using the camera?**
 - A: Yes, you can connect the camera to a PC using the Type-C port to view files when a memory card is inserted.

Documents / Resources

 <p>KIDS PRINT CAMERA</p> <p>Please read the instruction manual carefully before using this product.</p>	<p>MISIRUN s1 Kids Print Camera [pdf] Owner's Manual</p> <p>B0DKF89WD9, B0DHP4MH6N, B0DHP47WRV, B0DF5JY74T, B0DF5LQ2T1, B0DHP94M8Q, B0DF5K94YB, s1 Kids Print Camera, s1, Kids Print Camera, Print Camera, Camera</p>
--	---

References

- [User Manual](#)

■ MISIRUN

◆ B0DF5JY74T, B0DF5K94YB, B0DF5LQ2T1, B0DHP47WRV, B0DHP4MH6N, B0DHP94M8Q, B0DKF89WD9, camera, Kids Print Camera, MISIRUN, Print Camera, S1, s1 Kids Print Camera

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.