

miuoo Linux Games User Manual

Home » miuoo » miuoo Linux Games User Manual



Contents

- 1 miuoo Linux Games
- **2 Product Information**
- **3 Product Usage**
- **Instructions**
- **4 OVERVIEW**
- 5 Start using
- 6 How to install games
- 7 MODE
- 8 HOW TO USE
- 9 Indicator light
- 10 Documents / Resources
 - 10.1 References



miuoo Linux Games



Product Information

Specifications:

- Volume Adjustment
- MENU Arrow keys
- Indicator light power button
- 5 buttons: Y, X, A, B, START
- Select button
- Horn
- 3.5mm audio port
- TF card slot
- TypeC charging port
- · Battery compartment

Product Usage Instructions

Start using:

- 1. Insert the TF card that has been installed with the game into the TF card slot.
- 2. Charge the equipment to ensure normal startup.
- 3. Start-Up: Press the power key for 1 second.

How to install games:

- 1. Take the TF card out of the machine.
- 2. Insert the card reader to connect it to the computer.
- 3. Copy the Game ROM to the folder of the corresponding game type in the TF card.
- 4. Insert the TF card into the TF card slot.

- 5. Press [MENU] to open the MENU.
- 6. Select Refresh ROM.

On-off:

- Boot: Long press the power supply for 1 second.
- Shutdown: Press the power supply for 3 seconds to open the shutdown menu, and press [A] to shut down.

Idle mode, sleep mode, and wake-up:

- After 60 seconds of no operation, the device enters idle mode, and the screen becomes dark.
- In idle mode, press any button to wake up.
- If there is no operation for 5 minutes or a short press of the power key, the device enters sleep mode. In sleep
 mode, the screen and sound are closed. The device automatically shuts down after 10 minutes without
 operation. You can set the sleep time or disable sleep in the settings options.
 In sleep mode, press the power key to wake up.


Firmware Upgrade:

- 1. Shutdown status
- 2. Place the Mirror file in the root directory of the TF card.
- 3. Insert the TF card into the TF card slot.
- 4. Connect the charging line to enter the charging mode.
- 5. The device will automatically start up and upgrade.

FAQ:

- · Q: How do I adjust the volume?
 - A: Use the Volume Adjustment feature on the device.
- Q: Where is the power button located?
 - A: The power button is indicated by a light and can be found on the device.
- Q: How do I exit a game?
 - A: Press the [GB] button.
- Q: What is the purpose of the TF card slot?
 - A: The TF card slot is used to insert a TF card with game ROMs for playing games on the device.
- Q: Can I charge the device using a TypeC charging port?
 - A: Yes, the device can be charged using the TypeC charging port.

OVERVIEW

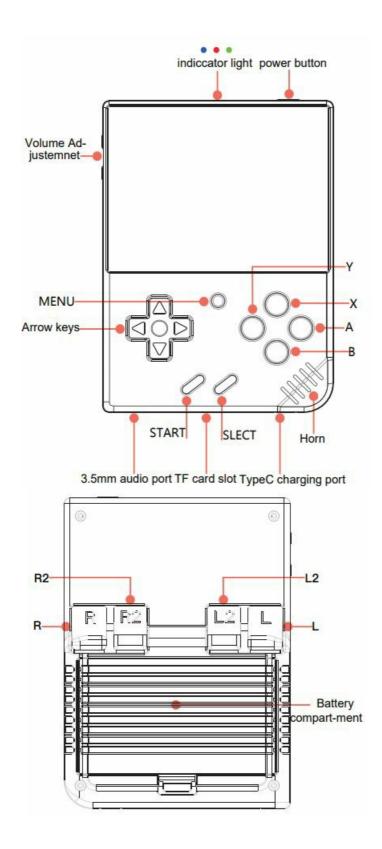

Start using

- 1. Insert the TF card that has been installed with the game into the TF card slot;
- 2. Charge the equipment to ensure normal startup;
- 3. Start-Up: press the power key for 1 seconds.

How to install games

1. Take the TF card out of the machine, insert the card reader to connect to the computer, and copy the "Game ROM" to the folder of the corresponding game type in the TF card;

2. Insert the TF card into the TF card slot, Press [MENU] to open the MENU, and select "Refresh ROM".

On-off

- Boot: long press the power supply for 1 seconds
- Shutdown: press the power supply for 3 seconds to open the shutdown menu, and press [A] to shut down.

MODE

Idle mode, sleep mode, and wake-up

- 60 seconds no operation enters the idle mode, and the screen becomes dark;
- In idle mode, press any button to wake up;
- No operation for 5 minutes or short press the power key to enter the sleep mode, close the screen and sound, and automatically shut down after 10 minutes without operation after entering the sleep mode, You can set the sleep time or disable sleep in the settings options;
- In sleep mode, press the power key to wake up.

Firmware Upgrade

- Shutdown status
- Place the Mirror file in the root directory of the TF card,
- Insert the TF card slot and connect the charging line to enter the charging mode, and the automatically start up and upgrade.


HOW TO USE

Start using



• In the game catalog, select a game and press[A]] Start the game.

Exit the game

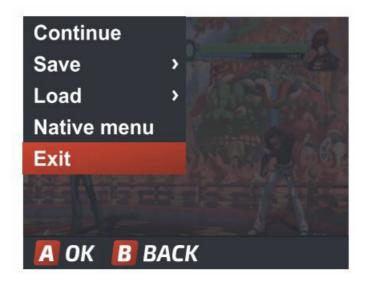

• In the game, Press [MENU] to open the MENU, select the "Exit" option, and press [A] to Exit the game.


Save or read game progress



• In the game, Press [MENU] to open the MENU, select the "Save" or "Load" option, press the direction key [LEFT, RIGHT] to select the recording position, press [A] to save or read the current progress.

A maximum of 10 records can be saved.

Set

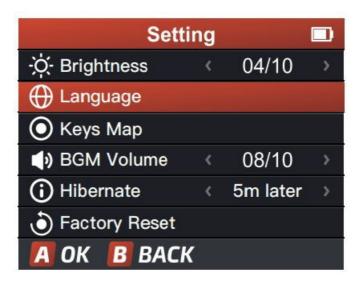

- Press the arrow key [UP, DOWN] to select the setting items: screen brightness, volume, sleep time, which can be modified by the direction key [LEFT, RIGHT];
- Select setting items: Language, key mapping, System Restore, etc., and press [A] to enter the corresponding setting page.

Indicator light

Greenlight Always On: enabled

Red light Always On: charging

• Blue light Always On: charging completed

Headset

You can connect the earphone through a 3.5mm audio port.

Pay attention to the following security precautions when using it:

- to avoid damage caused by liquid entering the machine;
- Do not modify, repair or disassemble the product;
- Do not use any diluent or volatile liquid to clean this product;
- Avoid exposure to high temperature or direct contact with flame.

Documents / Resources



References

User Manual

Manuals+, Privacy Policy