

MIYOTA JP21 Multi Function Chronograph Instruction Manual

Home » MIYOTA » MIYOTA JP21 Multi Function Chronograph Instruction Manual




Contents

- 1 MIYOTA JP21 Multi Function
- Chronograph
- **2 DISPLAYS AND BUTTONS**
- **3 SETTING THE DAY**
- 4 Documents / Resources
- **5 Related Posts**




MIYOTA JP21 Multi Function Chronograph

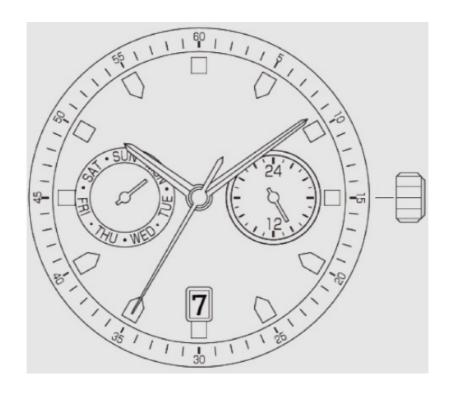


DISPLAYS AND BUTTONS

JP21

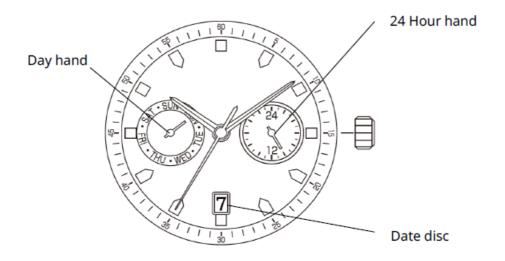

JP27

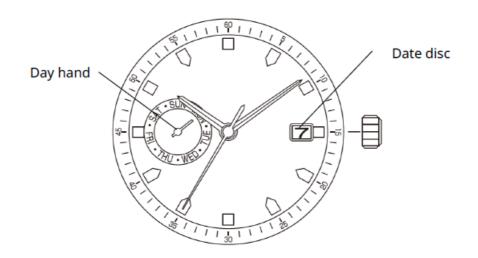

SETTING THE DAY

- 1. Pull the crown out to the 2nd Click Position.
- 2. Turn the crown clockwise to set the day.
- 3. After the day has been set, push the crown back to the Normal position.
 - The day is changed during the period from 0AM to 5AM.

SETTING THE DATE

 
- 1. Pull the crown out to the 1st Click Position.
- 2. Turn the crown clockwise to set the date.
 - If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
- 3. After the date has been set, push the crown back to the Normal position.

SETTING THE TIME

- 1. Pull the crown out to the 2nd Click Position.
- 2. Turn the crown clockwise to set hour and minute hands.
- 3. After the time has been set, push the crown back to the Normal position.

These specifications might be changed without prior notice.

Documents / Resources



MIYOTA JP21 Multi Function Chronograph [pdf] Instruction Manual JP27, JP21 Multi Function Chronograph, JP21, Multi Function Chronograph, Chronograph

Manuals+,