



mLabs 9819 Digital Anemometer User Manual

[Home](#) » [mLabs](#) » mLabs 9819 Digital Anemometer User Manual 

Contents

- [1 mLabs 9819 Digital Anemometer](#)
- [2 Meter Description](#)
- [3 Operation](#)
- [4 Air Flow Measurements \(CMM / CFM\)](#)
- [5 Battery Replacement](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



mLabs 9819 Digital Anemometer



Introduction

Congratulations on your purchase of the Thermo-Anemometer. This instrument measures Air Velocity, Air Flow (volume) and Temperature. The large, easy-to-read backlit LCD includes primary and secondary displays plus numerous status indicators. The meter is shipped fully tested and calibrated and with proper use will provide years of reliable service


Meter Description



2. LCD Display 6Hff–
3. Power On/Off
4. AVG
5. UNIT
6. MAX/MIN
7. NEXT
8. HOLD
9. AREA


Keypad



- **AUTO POWER OFF** Press to turn the meter ON or OFF
- **MAX/MIN** Used to record and store the highest, lowest and average airflow or velocity readings. (LE FT) also serves as change decimal point button in AREA mode
- **UNITS** Press to select the mode of operation. In FLOW mode, the meter displays air volume. In VELOCITY mode, the meter displays air speed  UP) also serves as increase number button in AREA mode.
- **AVG** Used to Average multiple readings in FLOW or VELOCITY mode. Up to 20 readings can be averaged.
- **HOLD** Press to freeze the displayed reading. Press again to unlock display. This button also functions as the RIGHT scroll button in AREA mode and RECALL mode.
- **AREA** Press and hold to manually enter the area of a duct in CFM or CMM mode
- **NEXT** In AREA mode, used to select memory locations 1-8.
- **°C/°F** The button is behind of battery cover, it needs to open the battery cover that can set.
- **AUTO BACKLIGHT** The model will be full auto backlight when operation, it is more convenient.

Battery compartment located on the back of the instrument. The rubber protective jacket must be removed from the meter to access the compartment.

- **MAX (top of LCD):** Max Hold function engaged for the Air Temperature function
- **HOLD (top of LCD):** Data Hold function engaged for the Air Temperature function
- **VEL:** indicates that meter is in air velocity mode
- **FLOW:** indicates that meter is in air flow mode
- **MAX (bottom of LCD):** Max Hold for the IR Temperature and RH function
- **HOLD (bottom of LCD):** Data Hold for the IR Temperature function and RH function
- **°C/ °F:** Temperature units of measure
- **CFM/CMM:** airflow units of measure
- **Ft, m?:** units for area dimensions
- **m/s, ft/min, km/h, MPH, knots:** air velocity units of measure
- **X10, X100:** multipliers for air flow readings
- **AVbG:** air averaging mode
- **Record:** indicates that min/max function is running (top for temp , bottom for air) Large LCD digits at center of display for Relative Humidity and IR Temperature
- Smaller LCD digits at top, right of display for Probe Temperature


-  Low battery indicator

Operation


Connecting the Vane

1. The vane plug is inserted in the meter's sensor jack at the top of the meter. The plug and jack are keyed so that the plug can only fit in the jack one way.
2. Turn the plug carefully until it lines up with the jack and then firmly push the plug in place. Do not apply undue force or try to twist the plug side-to-side.
3. If the vane is not connected to the meter or if the sensor is defective, the LCD display will indicate OL in place of a Temperature reading.

Air Velocity Measurements (Single Point)

1. Turn on the meter using the ON/OFF  button.
2. Press UNITS button to select the desired unit of measure.
NOTE: At power up the meter will display the last unit of measure previously entered.
3. Place the sensor in the air stream. Ensure that the air enters the vane as indicated by the arrow sticker placed inside the vane.
4. View the readings on the LCD Display. The large main LCD display shows the Air Velocity reading. The upper right LCD sub-display shows the temperature reading.

Side view of Vane

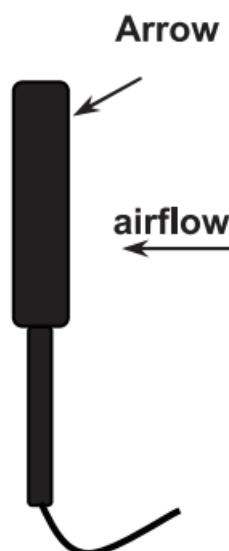

Air Velocity Averaging Mode


1. To enter 20 Point Averaging Mode, press and hold the AVG button until it beeps twice. The AVG icon will be displayed.


2. Take a measurement and press the AVG button. A single beep will sound and the HOLD icon will appear in the display.
3. The average reading will be displayed and number of readings measured will appear in the upper right hand corner of the display. After 5 seconds, the display will return to the current reading.
4. Repeat steps 2 – 3 until the desired number of points have been measured.
5. To return to standard velocity measuring mode press and hold AVG button until meter beeps twice.


Note: In the standard velocity measuring mode, press the AVG button once to recall the previous average. The average will be cleared when you enter the Averaging Mode again.

Air Flow Measurements (CMM / CFM)



1. Turn on the meter using the ON/OFF button
 2. Press the UNITS button to select the desired air flow units: CMM (cubic meters per minute) or CFM (cubic feet per minute).
- NOTE:** At power up the meter will display the last unit of measure previously entered.
3. To begin entering the area in m' or ft', press and hold the AREA button until it beeps twice. The leftmost digit of the bottom display will begin to flash.
 4. Use the  (UP) button to change the flashing digit After all of the digits are entered, press and hold the AREA button (until meter beeps twice) to save the area into memory and return to CFM or CMM measured mode.
 5. Place the sensor in the air stream. Ensure that the air enters the vane as indicated by the arrow sticker placed inside the vane. Refer to the diagram. The large main LCD display shows the Air Velocity reading. The upper right LCD sub-display shows the temperature reading. The meter has 16 memory locations (8 for CFM and 8 for CMM) that can be used to store commonly used area sizes that you can recall at anytime.
 6. Press the AREA button until meter beeps twice. A memory location number will appear in the top right of the display indicating the memory location.
 7. Push the NEXT button to scroll thru and select the desired cation. Once you have selected the desired memory

location enter your dimension Use the  (UP) button to change the flashing digit After all of the digits are entered, press and hold the AREA button (until it beeps twice to save the area into memory and return to CFM or CMM measuring mode. To select and use a previously stored dimension, press and hold the AREA button until it beeps twice. Press NEXT to scroll thru the 8 memory locations. Press and hold the AREA button until it beeps twice to return to CFM or CMM measuring mode.

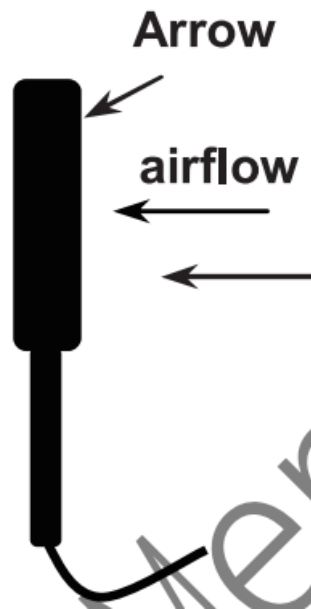

Data Hold (Air Velocity/Air Flow)

1. While taking measurements, press the HOLD button to freeze the air velocity/air flow reading.
2. The HOLD indicator will appear in the bottom of the LCD display. 3. Press HOLD again to return to normal operation.

MAX/MIN/AVG Record (Air Velocity/Air Flow)

This allows the user to record and view the highest (MAX), lowest (MIN) and average (AVG) readings.

1. Press the button MAX/MIN button. The MAX indicator and RECORD indicator along with the Max reading will appear on the LCD display and the meter will begin keeping track of the MAX, MIN and Average values.
2. Press the MAX/MIN button again to view the minimum reading. The MIN indicator along with the minimum reading will appear on the LCD display.
3. Press the MAX/MIN button again to view the average reading. The AVG indicator along with the average reading will appear on the LCD display.
4. Press the MAX/MIN button again to display current readings.

NOTE: the meter will keep recording MAX/MIN/AVG readings.


5. To clear and stop MAX/MIN/AVG recording and return to normal operation, press and hold the MAX/MIN button until the meter beeps twice.

Automatic Power OFF

To conserve battery life, the meter automatically turns off after 20 minutes. To defeat this feature:

1. Turn the meter OFF.
2. "dis APO" will appear in the display. The AUTO POWER OFF feature will now be disabled.
3. Note that AUTO POWER OFF is re-enabled each time the meter is turned on.
4. Also note that AUTO POWER OFF is disabled in CFM/CMM or Average mode.

Battery Replacement

When  appears on the LCD, the 9V battery must be replaced.

1. Disconnect the sensor.
2. Remove the meter's rubber protective jacket
3. Use a Phillips screwdriver to open the rear battery compartment
4. Replace the 9V battery
5. Close the battery compartment and replace the meter's protective jacket



- You, as the end user, are legally bound (Battery ordinance) to return all used batteries and accumulators; disposal in the household garbage is prohibited! You can hand over your used batteries / accumulators, gratuitously, at the collection points for our branches in your community or wherever batteries / accumulators are sold!

DISPOSAL



- Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle

WARNING: To avoid electric shock, do not operate the meter until the battery cover is in place and fastened securely.

NOTE:: If your meter does not work properly, check the fuses and batteries to make sure that they are still good and that they are properly inserted.

SPECIFICATION

Air Velocity	Range	Resolution	Accuracy
<i>mis</i> (meters per sec)	0.40 – 30.00 <i>mis</i>	0.01 <i>mis</i>	± (3% + 0.20 m/s)
km/h (kilometers/hour)	1.4 -108.0 km/h	0.1 km/h	± (3% + 0.8 km/hr)
ft/min (feet per minute)	80 – 5900 ft/min	1 !Vmin	± (3% + 40 ft/m)
mph (miles per hour)	0.9 – 67.0 mph	0.1 mph	± (3% + 0.4 MPH)
knots (nautical MPH)	0.8 to 58.0 knots	0.1 knots	± (3% + 0.4 knots)
Air Flow	Range	Resolution	Area
CMM (cubic meters/min)	0-9999 m ³ /min	0 to 9.999m ²	
CFM (cubic ft/min)	0-9999 ft ³ /min	0 to 9.999ft'	
Air Temperature	Range	Resolution	
	14-140°F(-10-60°C)	0.1°F/C	

- **Circuit**
 - Custom LSI microprocessor circuit
- **Display**
 - Dual `function 0.5" (13 mm) 4-digit LCD
- **Sampling rate**
 - 1 reading per second approx.
- **Sensors**
 - Air velocity/flow sensor: Conventional angled vane arms with low-friction ball bearing Temperature sensor: NTC-type precision thermistor
- **Automatic Power off**
 - Auto shut off after 20 minutes to preserve battery life
- **Operating Temperature**
 - 32°F to 122°F (0°C to 50°C)
- **Storage Temperature**
 - 14 to 140°F (-10 to 60°C)
- **Operating Humidity**
 - <80% RH
- **Storage Humidity**
 - <80% RH
- **Operating Altitude**
 - 2000 meters (7000ft) maximum
- **Battery**
 - One 9 volt (NEDA 1604) battery
- **Battery life**
 - 80 hours approx. (if the Backlight is used continuously, battery life will be reduced significantly)
- **Battery Current**
 - 8.3 mA DC approx.
- **Weight**

- 240g (only Host computer)

- **Dimensions**

- 200x 85 x 40mm (only Host computer)

Useful Equations and Conversions

- Area equation for rectangular or square ducts




Height (H)

Width (W)

$$\text{Area (A)} = \text{Width (W)} \times \text{Height (H)}$$

Area equation for circular ducts

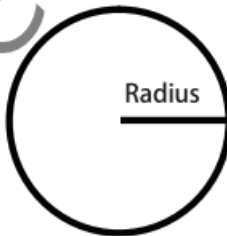

Radius

$$\text{Area (A)} = \pi \times r^2$$

$$\text{Where } \pi = 3.14 \times r^2 = 3.14 \times \text{radius} \times \text{radius}$$

Cubicequations

$$\text{CFM (ft}^3/\text{min)} = \text{Air Velocity (ft/min)} \times \text{Area (ft}^2\text{)}$$

$$\text{CMM (m}^3/\text{min)} = \text{Air Velocity (m/sec)} \times \text{Area (m}^2\text{)} \times 60$$

NOTE: Measurements made in inches must be converted to feet or meters before using the above formulae.

Unit of Measure Conversion Table

	mis	ft/min	knots	km/h	MPH
1m/s		196.87	1.944	3.6	2.24
1 ft/min	0.00508		0.00987	0.01829	0.01138
1 knot	0.5144	101.27		1.8519	1.1523
1 km/h	0.2778	54.69	0.54		0.6222
1 MPH	0.4464	87.89	0.8679	1.6071	



[mLabs 9819 Digital Anemometer](#) [pdf] User Manual
9819, 9819 Digital Anemometer, Digital Anemometer, Anemometer

References

- [User Manual](#)

Manuals+.