



Mmd Hong Kong Holding FW1 Wireless Subwoofer and Speaker User Manual

[Home](#) » [Mmd Hong Kong Holding](#) » Mmd Hong Kong Holding FW1 Wireless Subwoofer and Speaker User Manual 



Hong Kong Holding FW1
Wireless Subwoofer and Speaker
User Manual



Register your product and get support at www.philips.com/support

Contents

- 1 Important safety instructions
- 2 Safety
- 3 Risk of short circuit or fire!
- 4 Care for your product
- 5 Care for the environment
- 6 Help and support
- 7 FCC information
- 8 Your Subwoofer
- 9 What's in the box
- 10 Safety Information
- 11 Subwoofer
- 12 Connect
- 13 Connect to power
- 14 Wi-Fi Set up
- 15 Documents / Resources
 - 15.1 References
- 16 Related Posts

Important safety instructions

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Know these safety symbols

CAUTION



THE RISK OF ELECTRIC SHOCK DOES NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
This is CLASS II apparatus with double insulation, and no protective earth provided.



AC voltage



Follow the instructions in the user manual!



WARNING! Warning: Risk of electric shock!



The exclamatory mark is intended to alert the user to the presence of important operating instructions.

Risk of electric shock or fire!

- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.
- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.
- Use the product in tropical and/or moderate climates.

Risk of short circuit or fire!

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product.
- Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to this product!

- For wall mounting, this product must be securely attached to the wall in accordance with the installation instructions. Use only the supplied wall mount bracket (if available). Improper wall mounting may result in accident, injury or damage. If you have any queries, contact Consumer Care in your country.
- Never place the product or any objects on power cords or on other electrical equipment.

- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

- Never install this product in a coned space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Note

- The rating label is pasted on the bottom or back of the equipment.

Care for your product

Use only a microfiber cloth to clean the product.

Care for the environment

Disposal of your old product and battery



Your product is designed and manufactured with high-quality materials and components, which can be recycled and reused.



■ This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK(NI)
UK							

For 5G Wi-Fi Device

The device for operation in the band 51505350 MHz is only for indoor use to reduce the potential for harmful interference to cochannel mobile satellite systems.

Declaration of conformity

This product complies with the radio interference requirements of the European community. Hereby, MMD Hong

Kong Holding Limited declares that the product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.

Help and support

For extensive online support, visit www.philips.com/support to:

- download the user manual and the quick start guide
- watch video tutorials (available only for selected models)
- find answers to frequently answered questions (FAQs)
- email us a question
- chat with our support representative.

Follow the instructions on the website to select your language, and then enter your product model number. Alternatively, you can contact Consumer Care in your country. Before you contact, note down the model number and a serial number of your product. You can find this information on the back or bottom of your product.

Trademarks:



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, DTS Play- , Play, and the DTS Play- and Play- logos are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



The Wi-Fi CERTIFIED™ Logo is a registered trademark of Wi-Fi Alliance®.

FCC information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC&IC Warning:

- This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC-Canada: CAN ICES-003(B)/NMB003(B)

This device contains license-exempt transmitter(s) / receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

 
Your Subwoofer

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your subwoofer at www.philips.com/support.


What's in the box

Check and identify the items in the package:

Power Cord * x1

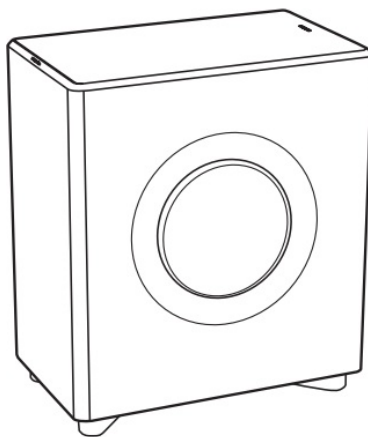

Subwoofer x1

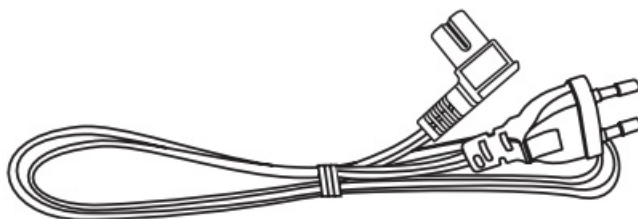 

Quick Start Guide x1



Warranty Card x1



Safety Sheet x1




Safety Information

- Power cord quantity and plug type vary by region.
- Images, illustrations, and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

CCC	BSMI	UL	VDEBS	VDEBS SAA
for China	for Taiwan	for US/Canada	for Europe/UK	for Asia
FW1/93	FW1/96	FW1/37	FW1/10	FW1/98

Subwoofer

 This section includes an overview of the wireless subwoofer.

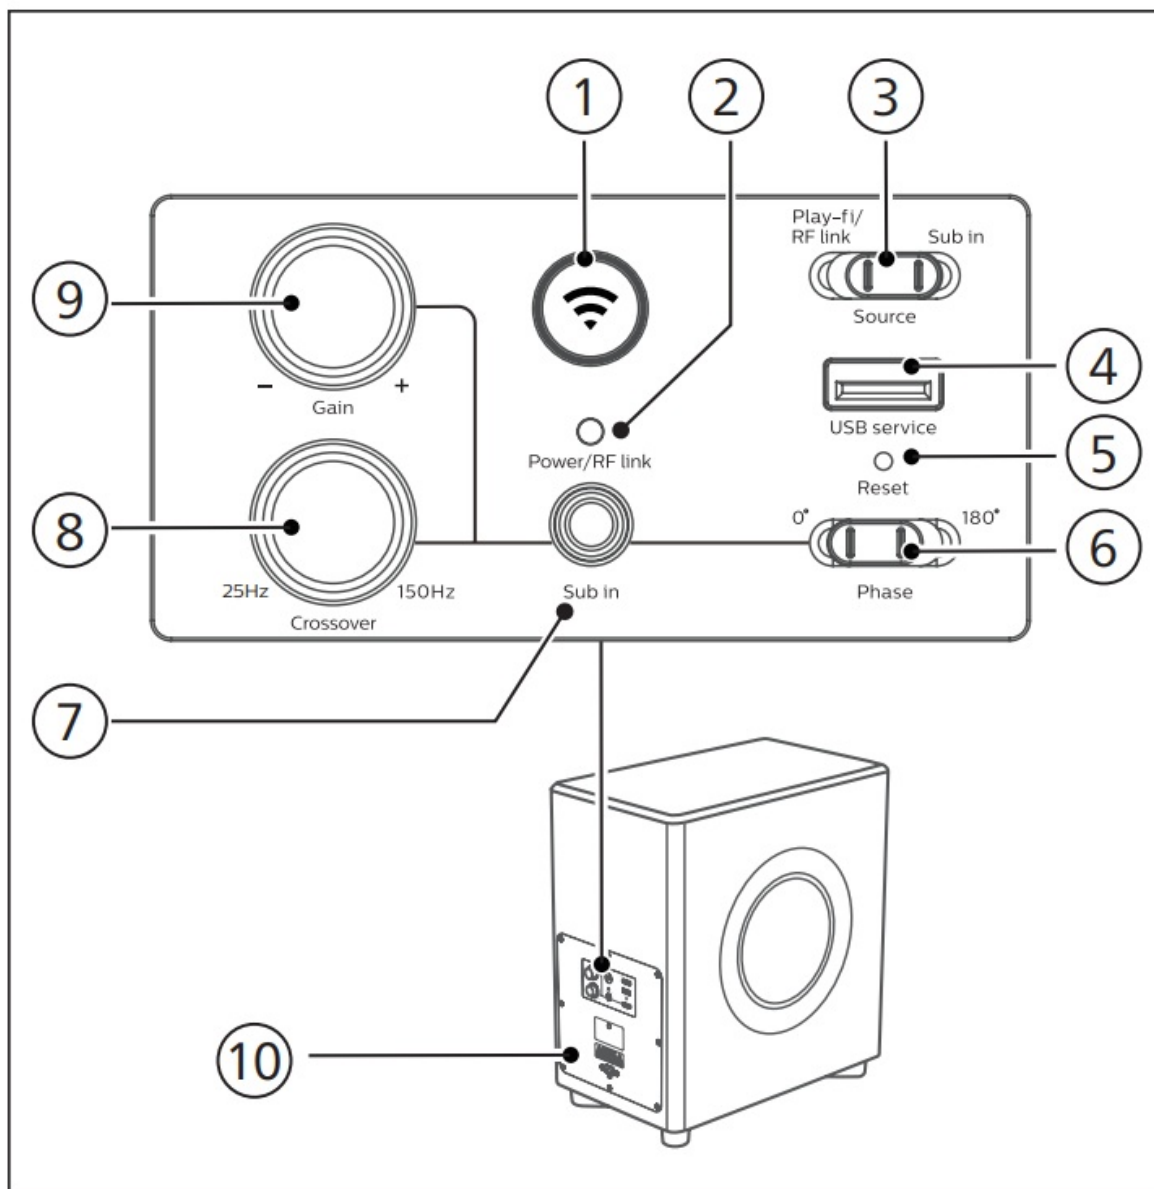

(Wi-Fi Setup) button / indicator

- Trigger Wi-Fi setup for Play-fi.
- Press and hold the button for 8 seconds to activate the AP mode.
- Press and hold the button for 4 seconds to activate the WPS mode.
- Press and hold the button for 15 seconds to reset the factory default settings of the subwoofer.

Action	LED State	Status
	Constant on	Connected / Pairing successful
Press and hold 8 seconds	Blink	Wi-Fi Access Point (AP) mode
Press and hold 4 seconds	Double blink	Wi-Fi Protected Setup (WPS) mode

Power/RF link indicator

Source (switch Play-fi/FR link/Sub in mode)

- When FW1 is used as a wired subwoofer, the source switch must be at Sub in position.

- All network audio functionality will stop working.
- Wi-Fi is disconnected but Wi-Fi credentials shall be retained if it is set up previously. » Play- module can be turned off.
- To upgrade firmware for Play- module and MCU via USB service port, the source switch must be at Sub in position.

USB service socket

The USB socket is for service only.

Reset button (Pinhole)

Reset device to default setting.

Phase 0° – 180° (switch)

Sub in (socket)

Use the subwoofer cable to connect the subwoofer to the soundbar (not supplied).

Crossover 25Hz-150Hz (knob)

Gain +/- (knob)

Functional	Settings	Default
Gain	-6 dB to +6 dB	0 dB
Crossover	25 to 150 Hz	0 degree
Phase	0 or 180 degree	

When FW1 is as a Play- subwoofer, the above controls and functions are not applicable.

AC in ~ socket

 
Connects to the power supply.

 
Connect

This section helps you connect your subwoofer to a TV and other devices, and then set it up.


Note

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

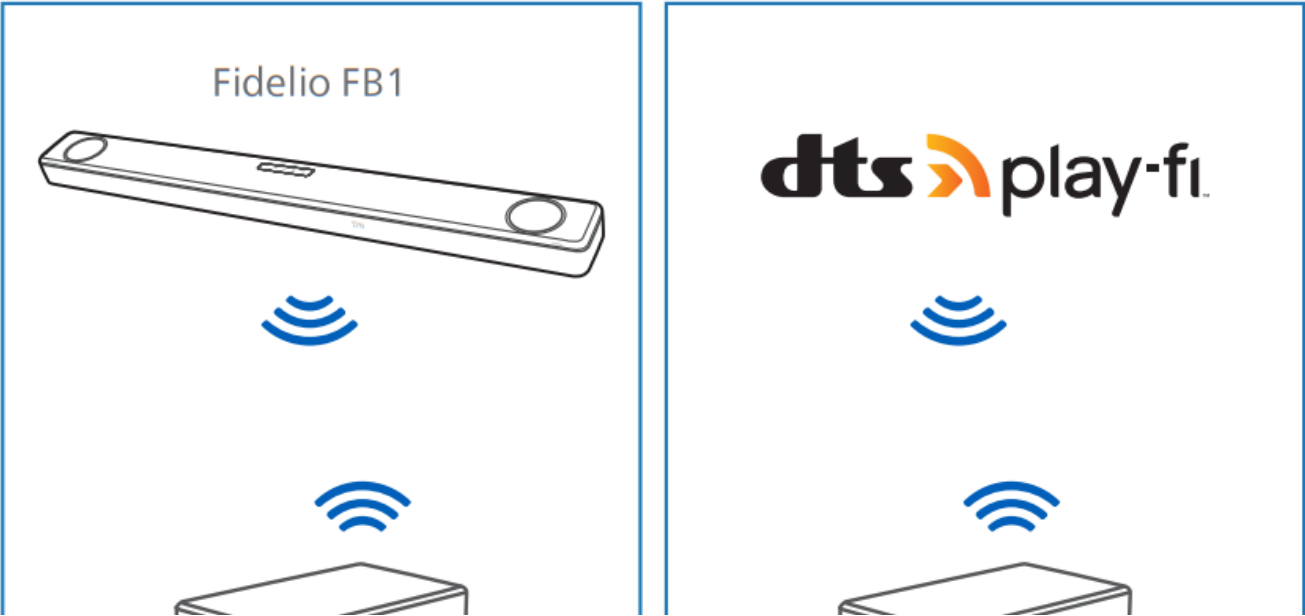


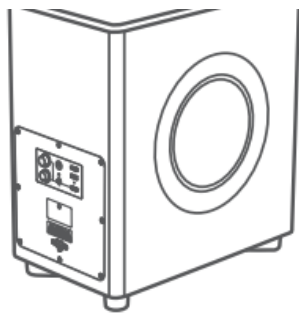


Fidelio FW1

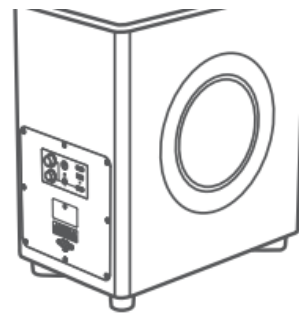 



Fidelio FW1

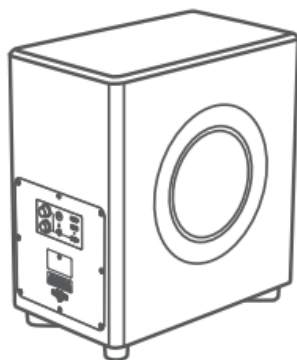 

Fidelio FW1

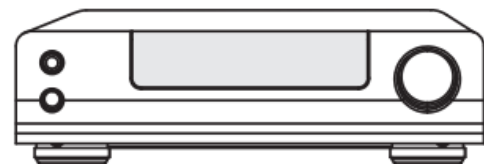 

Preamp Output Subwoofer out

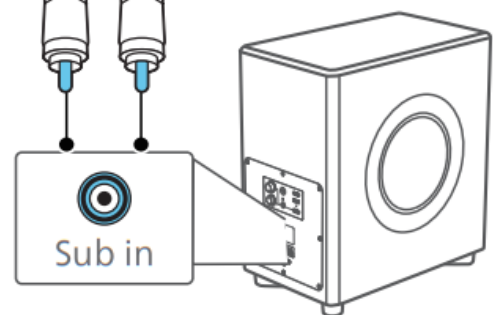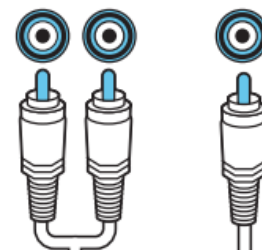  

- Pairing with FB1 soundbar, go to page 9.
- Wi-Fi Set up, go to page 10.
- Connect the subwoofer to Philips Play-enabled TV, go to page 12.
- For a wired connection, go to page 13.

Connect to power



 
WARNING!

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the power cord, always pull the plug from the socket. Never pull the

cord.

- Before connecting the AC power cord, ensure you have completed all other connections.


Connect the mains cable to the **AC in the ~** socket of the subwoofer and then into a mains socket.

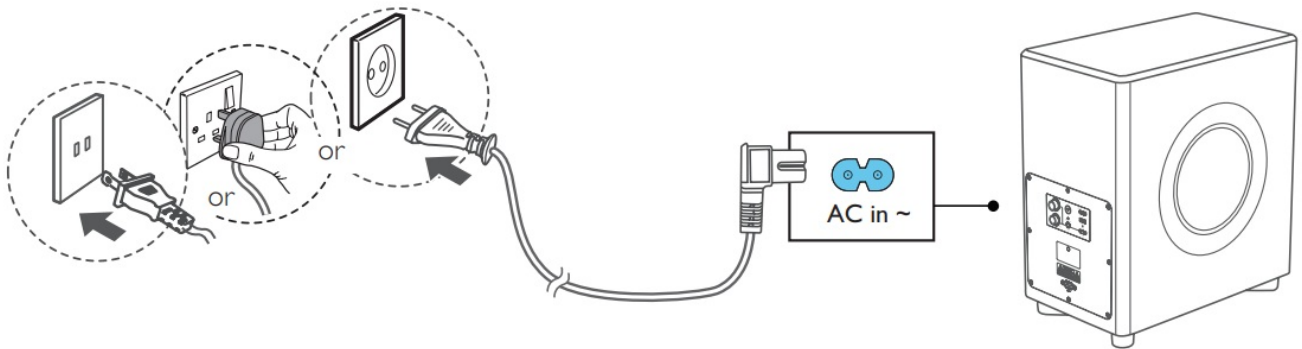


* Power cord quantity and plug type vary by region.

Pairing with FB1 soundbar (RF-link initial set up)


FW1 Play-Fi wireless subwoofer can pair with FB1 (not supplied) soundbar.

1. The source switch must be at Play-fi/ RF Link position.
2. The Power/RF link indicator will (Green) fast blink on the Subwoofer.
3. Press the button to turn your FB1 soundbar on.
4. Goto the soundbar settings menu (press ) and select "SUB PAIR". Then press (Enter) to enter the subwoofer pairing mode.
5. Wait until the Power/RF link indicator will light up solid on the subwoofer.
6. Soundbar and subwoofer shall discover each other and pair.

 
1

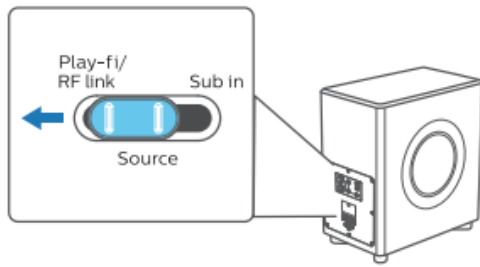


2

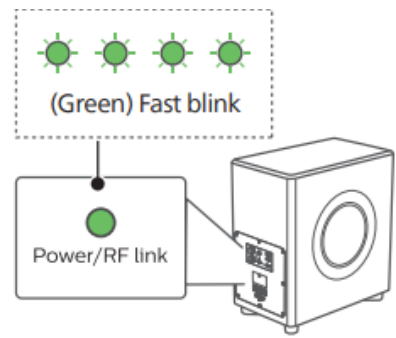 


3

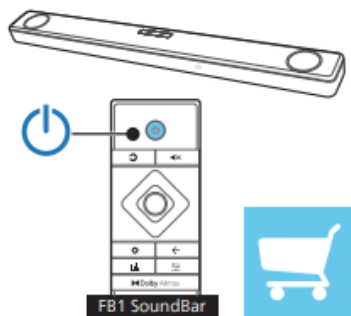 


4

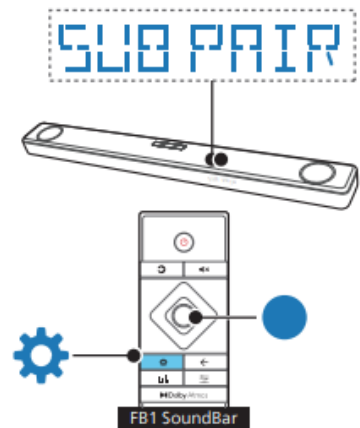 

5

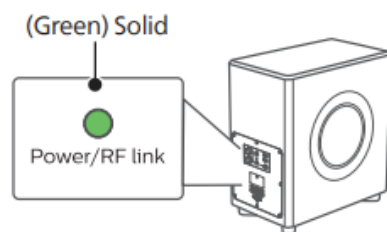 

6

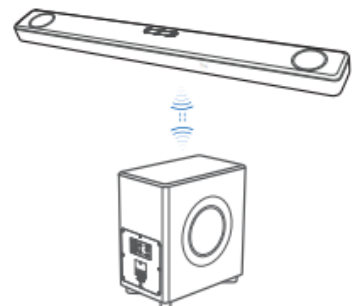 

Wi-Fi Set up

 
 
 
(For iOS and Android versions)

By connecting this unit and mobile phones, and tablets (such as iPad, iPhones, iPod touch, Android phones, etc.) to the same Wi-Fi network, you can then use the Philips Sound app powered by DTS Play- to control the subwoofer to listen to audio files.


1. Connect your phone or tablet to the same Wi-Fi network that you want to connect your subwoofer.



2. Download and install the Philips Sound app powered by DTS Play-fi on a phone or tablet.
 - Make sure your router is turned on and working properly.
 - When FW1 is used as a Play-fi subwoofer, the source switch must be at Play-fi/RF Link position.

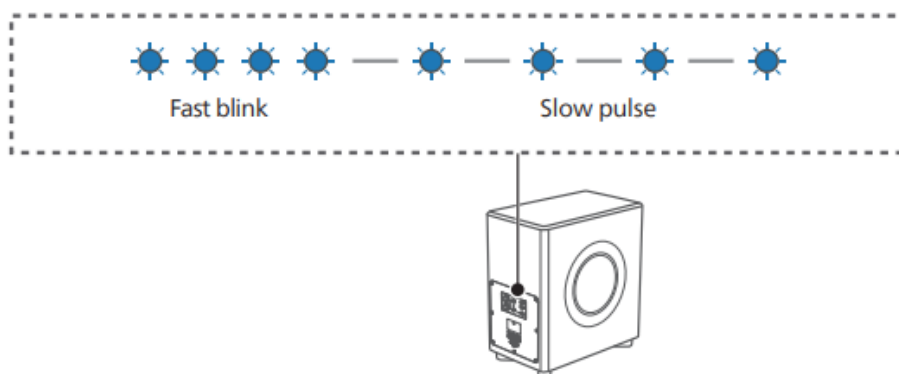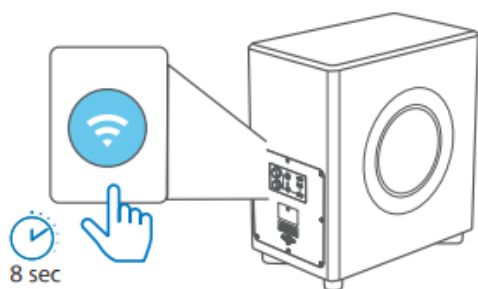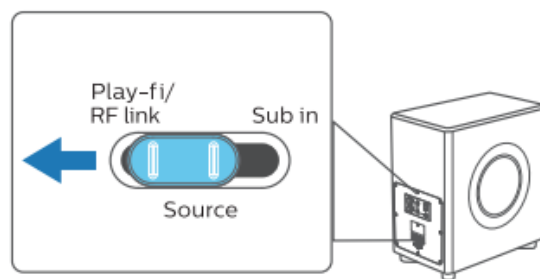

 3. Press and hold the (Wi-Fi) button located at the back cabinet for 8 sec to trigger the Wi-Fi connection. » Until the speaker make a second tone and then release the button.
4. Wait until the Wi-Fi light indicator on the back cabinet goes from a fast blink to a slow pulse. When it begins pulsing slowly, it indicates that the speaker is entering the Wi-Fi setup mode.
5. Launch the Philips Sound app powered by DTS Play-. Follow the instructions in the app to connect this product to your Wi-Fi network.

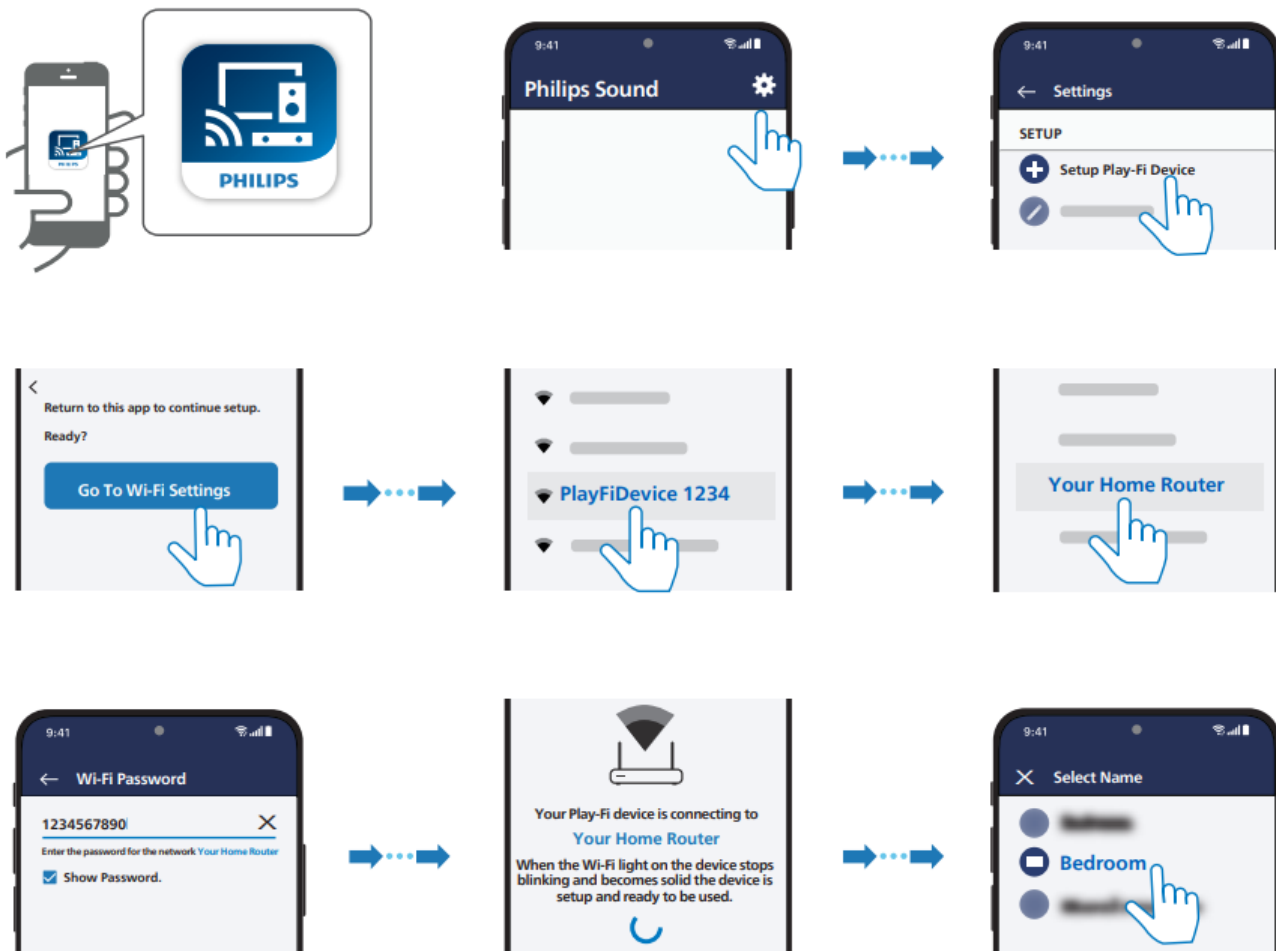




6. After a successful Wi-Fi connection, the Wi-Fi light indicator will stop pulsing and turn solid. Once you set up this product on your Wi-Fi network, you can control it from any smartphone or tablet on the same network.
7. After connection, you can change the device name. There are several names to choose from or create your own by choosing Custom Name at the end of the name list. Otherwise, it follows the default name.
8. After connection, this product may perform a software update. Upgrade to the latest software when it is your first time set up. The software upgrade may take several minutes. Do not unplug your speaker, turn off your device, or leave the network during the update.

Note

- After connection, the product may perform a software update. The upgrade is required after the initial setup. Without the upgrade, not all product features can be available.
- When the first time set up is not successful, hold down the Wi-Fi button on the subwoofer for 8 seconds until the second tone can be heard and the Wi-Fi light is changed to a slow pulse. Reset the Wi-Fi connection, restart the app, and start the setup again.
- If you want to change from one network to another, you need to set up the connection again. Press hold down the (Wi-Fi) button on the subwoofer for 8 seconds to reset the Wi-Fi connection.

Wi-Fi Protected Setup (WPS)

   If your router has Wi-Fi Protected Setup (WPS), you can set up the connection without entering a password.

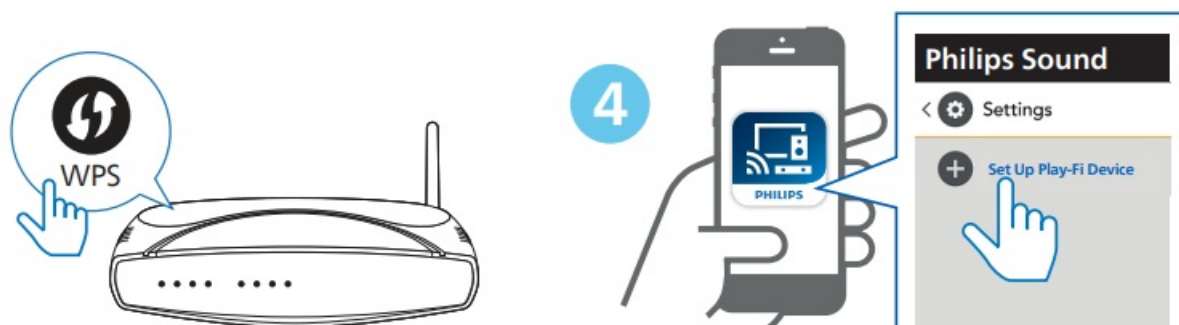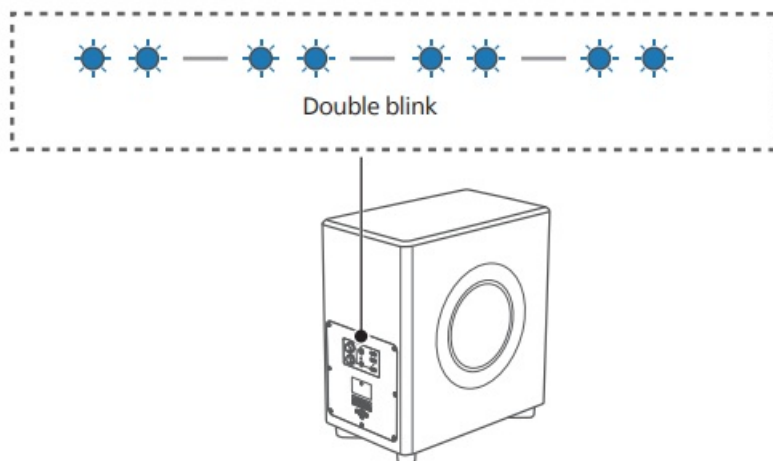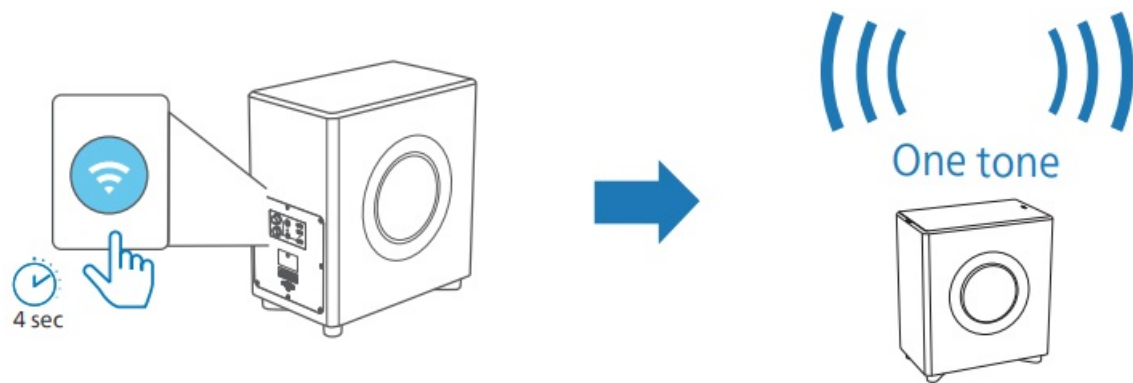




1. Press and hold the (Wi-Fi) button for 4 seconds. » You will hear a tone and the Wi-Fi light will begin double blink.
2. Press the WPS button on your router. The button is normally marked with this WPS logo.
3. Follow the instruction in Philips Sound app powered by DTS Play- to start the pairing.


Note

- WPS is not a standard feature on all routers. If your router does not have WPS then use Standard Wi-Fi Setup.
- Press the (Wi-Fi) button once if you want to exit the WPS mode or it will automatically exit after 2 minutes.

Connect the subwoofer with the Philips Sound app

    1. After a successful Wi-Fi connection, the Wi-Fi light indicator will stop pulsing and turn solid.
2. Launch the Philips Sound app powered by DTS Play- .
3. Select the Primary Speaker [FW1].

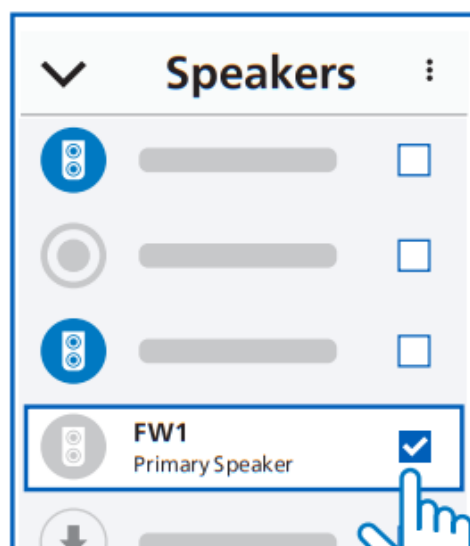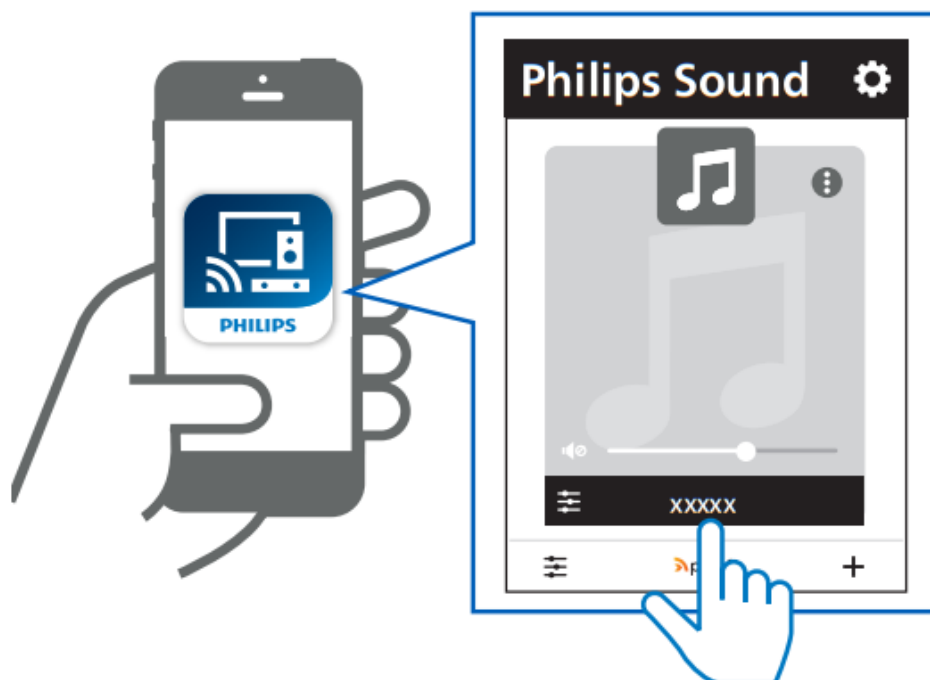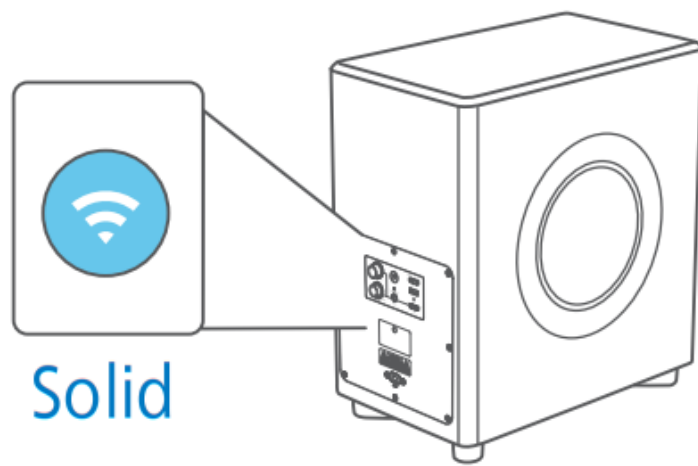





Connect the subwoofer to Philips Play-fi enabled TV

1. Power up your DTS Play-Fi TV connected to the internet. » TV sound is muted.
2. Enter the Settings menu on the TV. » Settings > Sound > DTS Play-Fi



  <p>User manual <small>for more information visit www.philips.com/support</small></p>	<p>Mmd Hong Kong Holding FW1 Wireless Subwoofer and Speaker [pdf] User Manual TAFW1RE, 2AR2STAFW1RE, FW1 Wireless Subwoofer and Speaker, FW1, Wireless Subwoof er and Speaker, TAFW1RE 37, Wireless Subwoofer TAFW1 37</p>
--	--

References

-  [Philips Customer Service Support - Home | Philips](#)