



MOBAPAD B0C3VC3HL3 Hall Effect Drift-Proof Wireless Switch Controller User Manual

[Home](#) » [MOBAPAD](#) » MOBAPAD B0C3VC3HL3 Hall Effect Drift-Proof Wireless Switch Controller User Manual 

 
MOBAPAD B0C3VC3HL3 Hall Effect Drift-Proof Wireless Switch Controller



Contents

- 1 [DEVICE LAYOUT](#)
- 2 [PAIRING WITH NINTENDO SWITCH](#)
- 3 [CONNECT TO PC VIA BLUETOOTH OR OTHER RECEIVERS](#)
- 4 [WIRED CONNECTION TO PC](#)
- 5 [CONNECTING TO APPLE DEVICES \(IOS VERSION 13 OR ABOVE\)](#)
- 6 [CONNECTING TO ANDROID DEVICE](#)
- 7 [MACRO PROGRAMMING](#)
- 8 [MACRO LOOP](#)
- 9 [TURBO MAPPING](#)
- 10 [RAPID FIRE FREQUENCY ADJUSTMENT](#)
- 11 [SWITCH LIGHT COLORS](#)
- 12 [SHUTDOWN/AUTO SLEEP](#)
- 13 [FINE-TUNE YOUR CONTROLLER ON THE APP](#)
- 14 [PRECAUTIONS](#)
- 15 [Customer Support](#)
- 16 [Documents / Resources](#)
- 17 [Related Posts](#)


DEVICE LAYOUT

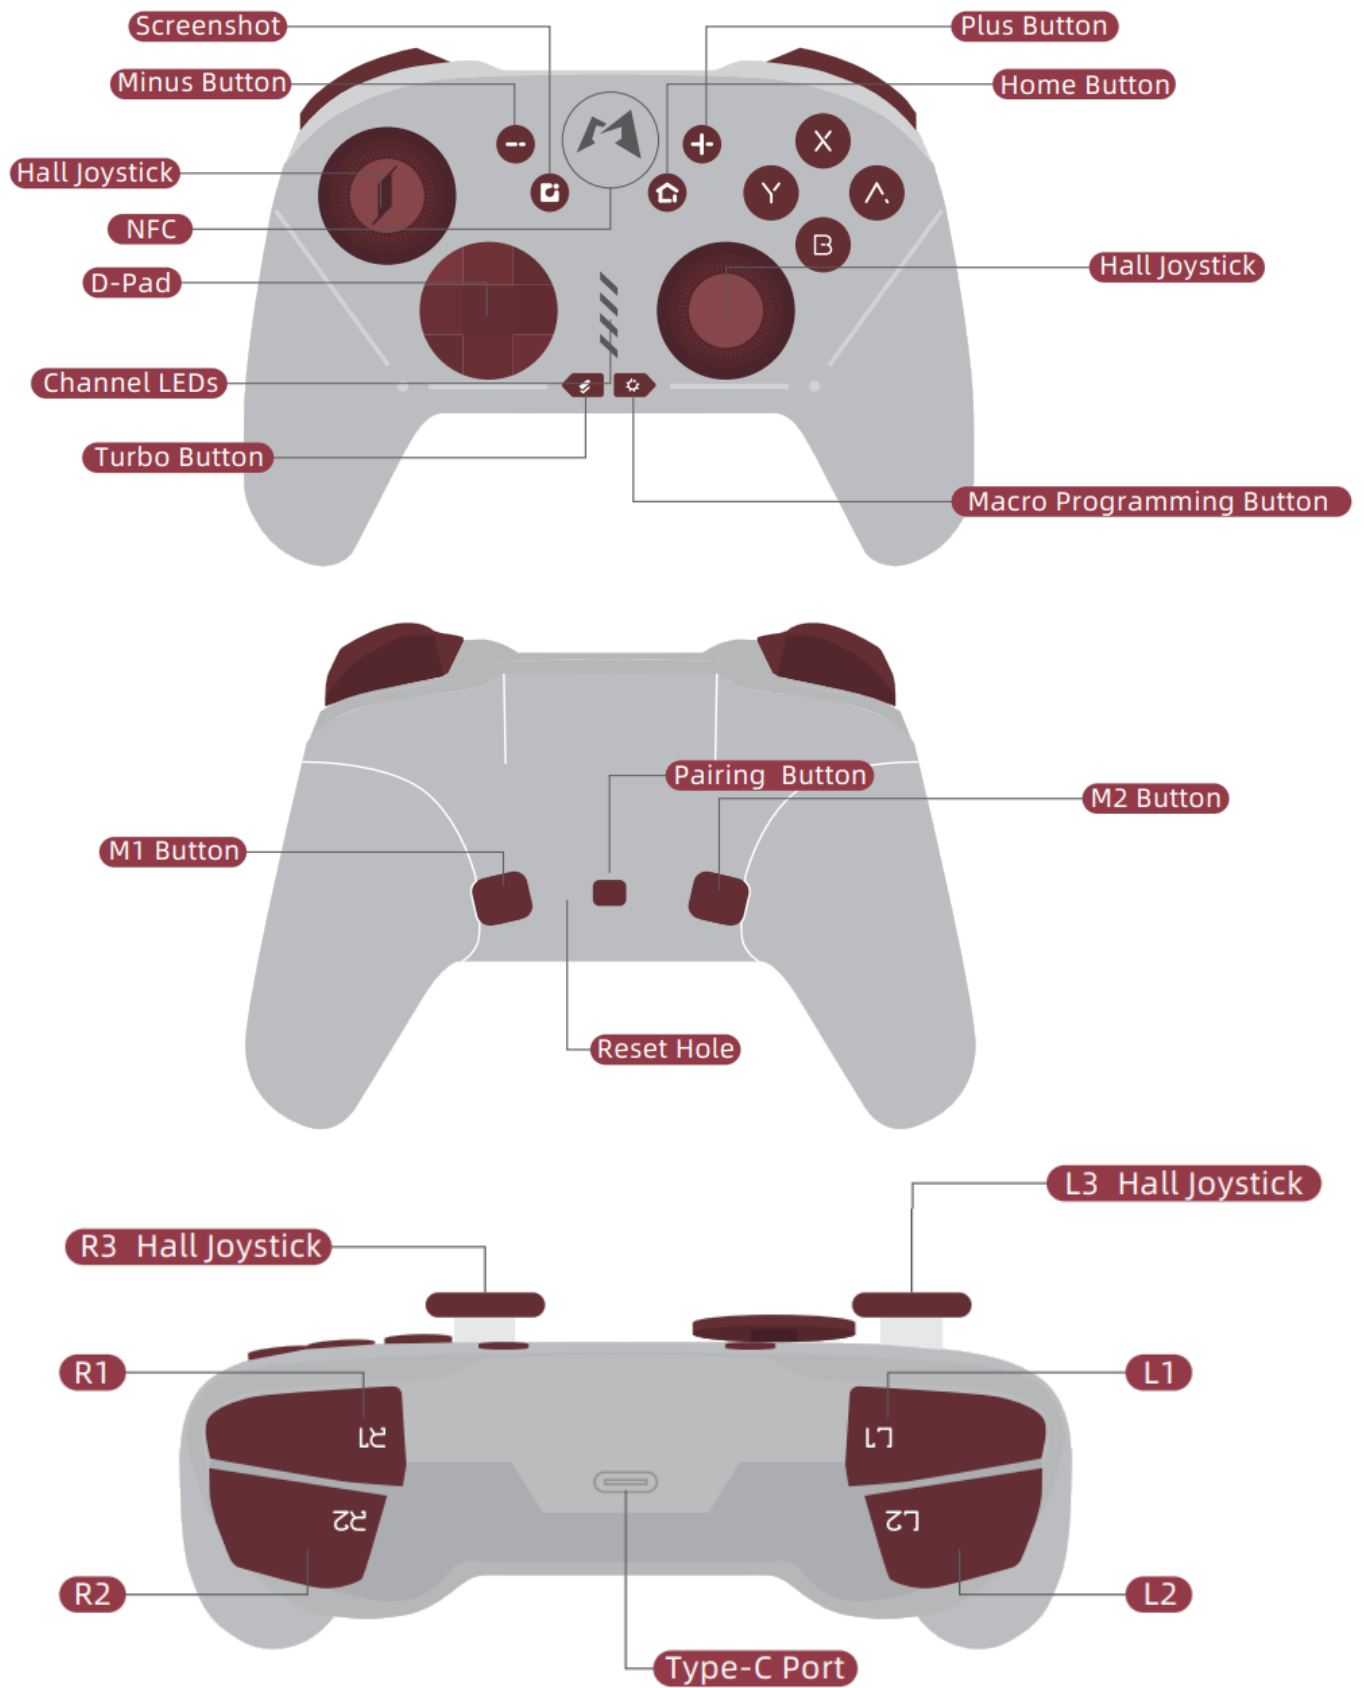

PAIRING WITH NINTENDO SWITCH



 
Click the controller icon on the Switch homepage

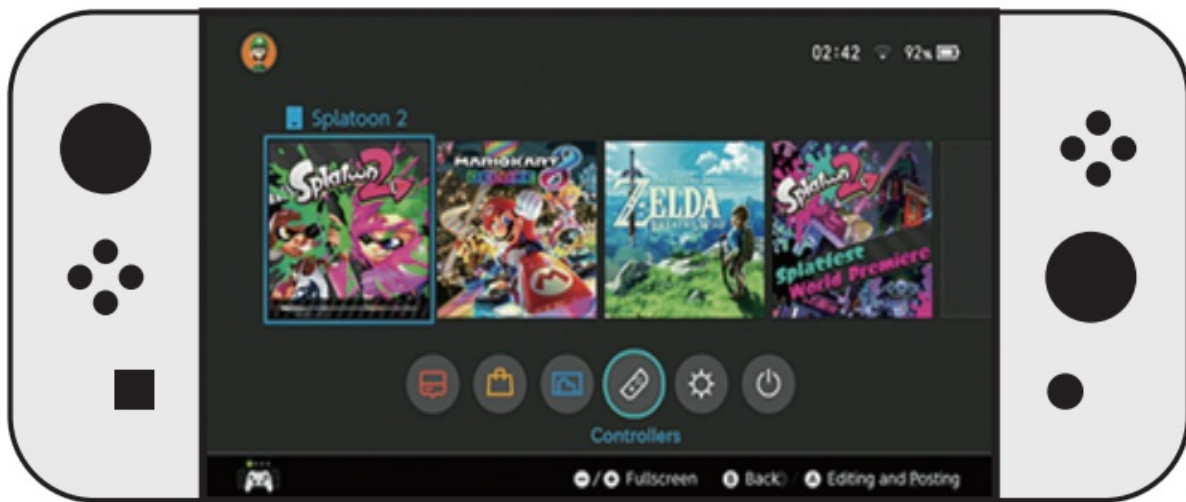


Click on "Change Grip/Order"



1. On the Nintendo Switch console interface, click on the [] and select "Change Grip/Order", then stay on this screen without making any further changes.
2. With the controller powered off, short press the [Pairing Button], the middle channel LEDs on the controller will flash in a marquee pattern, indicating it has entered pairing mode. Just Wait for pairing to complete.
3. When the middle channel LED1 on the controller remains solid, and the console displays the controller icon, it

means pairing is successful. Press the [Home Button] to return to the main interface and start using the controller.

4. When the console goes into sleep mode, the controller will automatically power off. If you want to use the controller again, simply press the [ Button] on the controller and wait for the console to wake up and automatically reconnect.

CONNECT TO PC VIA BLUETOOTH OR OTHER RECEIVERS

For Windows 10 system and Steam Games that Support Controller:

1. Click on the [Win] icon in the bottom left corner, then go to [Settings] – [Devices] – [Add Bluetooth or other device] – [Bluetooth], and stay on this screen without exiting.
2. Press and hold the [Pairing Button] on the controller, then release it. The LED lights in the middle of the controller will start flashing in a marquee pattern, indicating it has entered pairing mode.
3. When the device name “[Pro controller]” is displayed on the screen, double-click on it with the mouse to connect.
4. When the light LED1 in the middle of the controller stays solid, it means the connection is successful.
(**Note:** Once connected, you can automatically reconnect by pressing the Home button on the controller without switching devices.)



WIRED CONNECTION TO PC

When the controller is connected to a PC via a wired connection, the mode is set to “Switch Pro” mode. To switch the controller mode, simultaneously press and hold the [Plus Button] and [Minus Button].

 
LED1 solid: Indicates Switch Pro mode:

After successful mode switching, the LED1 in the middle channel will remain solid. This mode is suitable for games that require motion control support on Steam platform and some emulators.

LED1 + LED2 solid: Indicates Xbox 360 mode: After successful mode switching, the LED1 and LED2 in the middle channel will remain solid. This mode is suitable for mainstream PC games.

LED1 + LED2 + LED3 solid: Indicates MOBAPAD Pro-HD mode:

After successful mode switching, the LED1, LED2, and LED3 in the middle channel will remain solid. This mode is suitable for mainstream emulator games and some classic PC games on the PC platform.

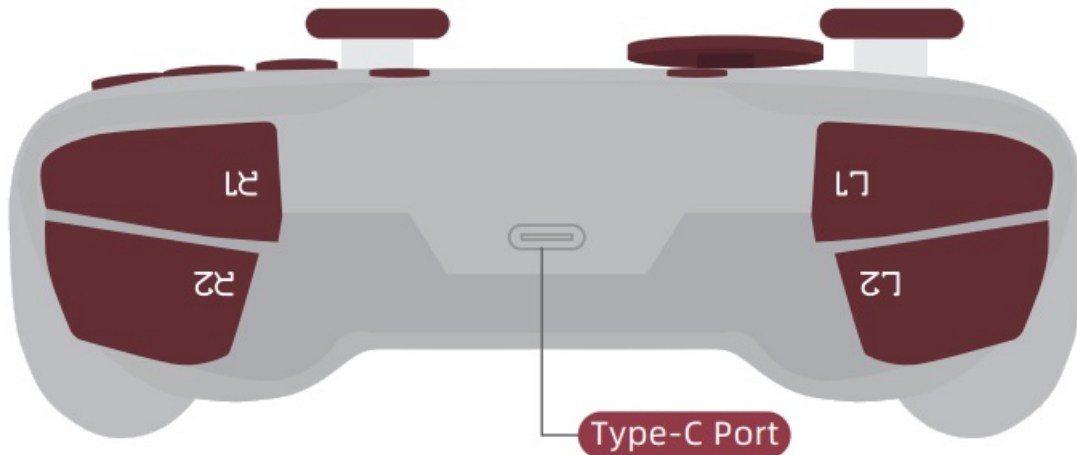

CONNECTING TO APPLE DEVICES (IOS VERSION 13 OR ABOVE)

1. First of all, ensure that the controller is powered off (no lights). Press and hold the right directional button, then press the Home button. Release both buttons after the middle channel light LED3 flashes quickly.
2. Go to the Bluetooth search list on your phone and find the device named "[Xbox Wireless Controller]", then click to connect.
3. Once connected successfully, your phone will display "Connected", and the middle channel light LED3 will stay lit, indicating a successful connection.

Note: After a successful connection, pressing the Home button will automatically reconnect to the previously connected phone.



CONNECTING TO ANDROID DEVICE

1. Ensure the game controller is powered off (no LED lights). Press and hold the left directional key, then press the Home button in the middle of the controller. The LED2 light in the middle channel will flash quickly, then release the buttons.
2. Go to the Bluetooth search list on your phone and find the device named "[MOBAPAD Pro-HD]", then click to connect.
3. Once connected successfully, your phone will display "[Connected]" and the LED2 light in the middle channel of the controller will remain lit, indicating a successful connection.

Note: Once successfully connected, pressing the Home button will automatically reconnect to the previously connected phones.



MACRO PROGRAMMING

Assignable Buttons:

A/B/X/Y/L1/L2/L3/R1/R2/R3/Plus/Minus/D-pad and joysticks (joysticks only support eight directions, no analog input).

1. To start recording a macro, press and hold the MacroProgramming button for 3 seconds. The logo light will turn solid purple, indicating that the controller is ready to record the desired button inputs. Now you can start to record.
To end the recording, press the M1 or M2 button on the back of the controller. If you press M1, the macro will be saved to M1; if you press M2, it will be saved to M2.
2. There you go! Press the M1 or M2 button where you have saved the macro to trigger the recorded button inputs in a single action.

 


1. Clearing Macro Operations Recorded on M1/M2 Button:

To clear the macro operations recorded on the M1/M2 button, press and hold the Macro Programming Button for 3 seconds. The logo light will turn purple, indicating that no buttons should be touched. Then directly press the M1 or M2 button, and the macro recorded on the respective M1 or M2 button will be cleared.

2. Disabling the M1/M2 Button: Double-click the Macro Programming Button quickly twice, and the controller will vibrate shortly to remind you that the back buttons are now disabled. (Disabling will not clear the macro recorded contents.)

3. Re-enabling the M1/M2 Button: Double-click the Macro Programming Button quickly twice, and the controller will vibrate long to remind you that the back button functionality has been restored. The Macro disable function has memory, and unless re-enabled, it will remain disabled.

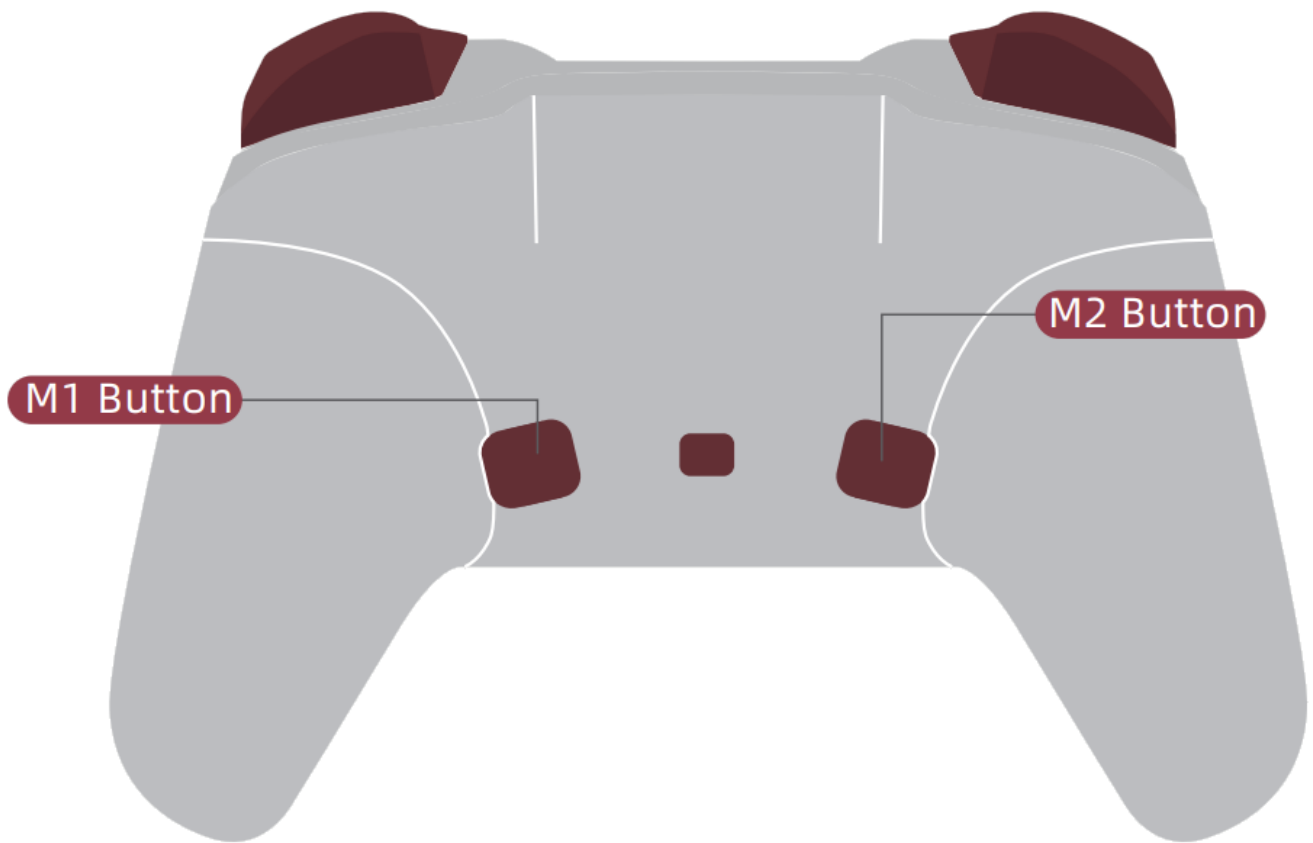

Please Note:

1. The maximum number of buttons that can be recorded in a macro is 32.
2. The maximum time interval between pressing buttons during recording is at most 5 seconds.

MACRO LOOP

Take setting the M1 key macro loop as an example:

To enable the macro loop for the M1 key:

Press and hold the Macro Programming button, then press the M1 key, and release both buttons to enable the macro loop for the M1 key.

 
To disable the macro loop:

During the macro loop process, press and hold the Macro Programming button, then press the M1 key, and release both buttons to disable the macro loop for the M1 key.



Please note:

The Macro loop will not be interrupted by regular key operations, and can only be manually ended by disabling the macro loop.

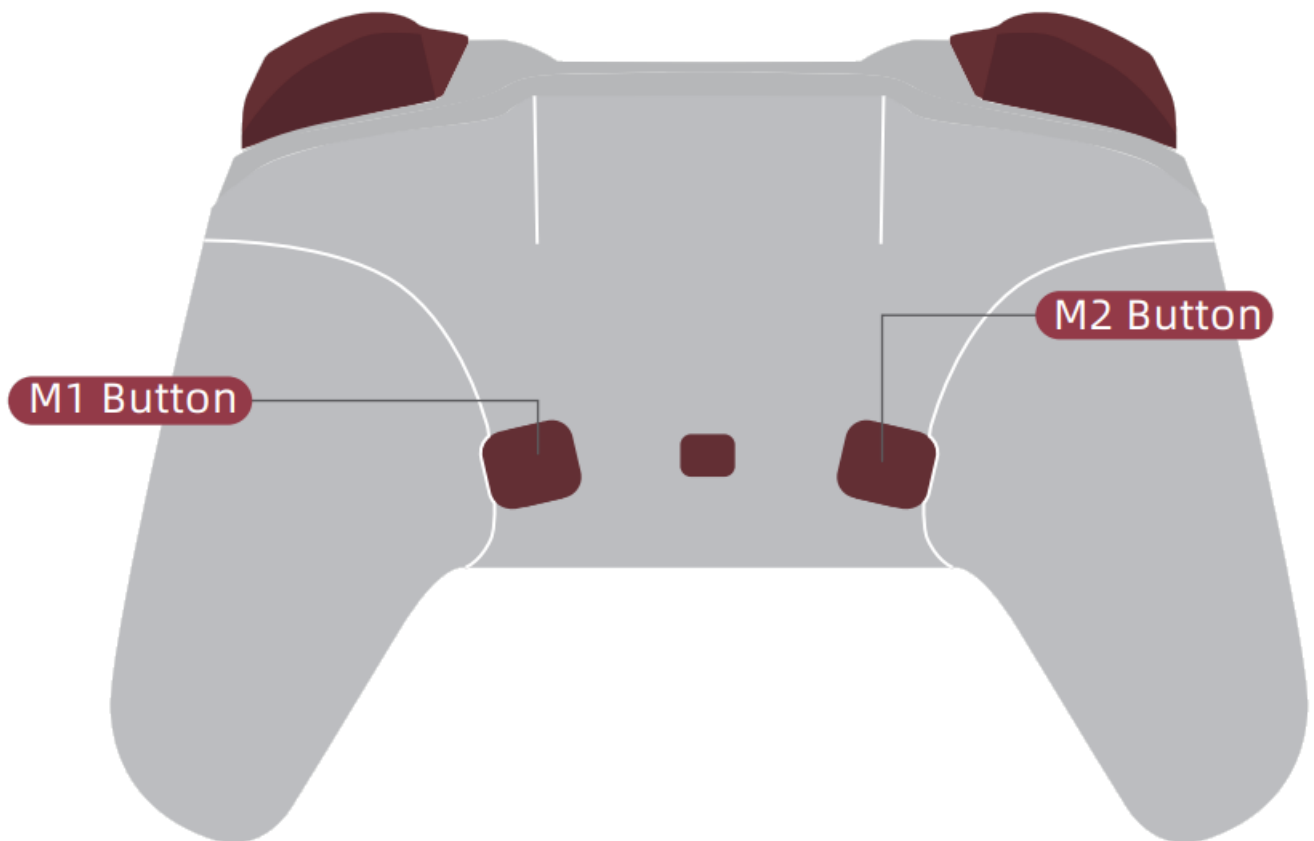

TURBO MAPPING



The following buttons can be mapped as a Turbo Button: A/B/X/Y/L1/L2/R1/R2. Take the “A” button as an example:

The first time you press and hold the “Turbo Button” and the “A” button simultaneously, then release them to enter manual rapid fire mode. Now you can hold down the “A” button to trigger rapid fire and release it to stop it. (the M-shaped logo light will blink as a reminder).

The second time you press and hold the “Turbo Button” and the “A” button again, then release them to enter automatic rapid-fire mode. Now you can press the “A” button once to activate automatic rapid fire. (the M-shaped logo light will blink as a reminder). Pressing the “A” button again will stop the rapid fire.

The third time you press and hold the “Turbo Button” and the “A” button simultaneously, then release them to cancel the rapid-fire function for the “A” button.

How to clear all rapid-fire functions?

Press and hold the “Turbo Button” for approximately 3 seconds, the controller will short vibrate, then release it. This will cancel all rapid-fire functions for ALL buttons.

RAPID FIRE FREQUENCY ADJUSTMENT



The rapid fire frequency has 3 levels: Low, Medium, and High. The default factory setting is Medium.
To increase frequency: Press and hold the [Turbo Button] and the right direction button simultaneously.
To decrease frequency: Press and hold the [Turbo Button] and the left direction button simultaneously.

Note:

When set to Low frequency, the current channel light will flash once as a reminder.

When set to Medium frequency, the current channel light will flash twice as a reminder.

When set to High frequency, the current channel light will flash 3 times as a reminder.

The M-shaped logo light will also flash according to the set frequency during the rapid-fire mode.

SWITCH LIGHT COLORS



To change the color of M-Shape Logo Light, press and hold the Macro Programming button first and then press the “Minus” button.

To switch the color mode, press and hold the Macro Programming button first and then press the “Plus” button.

SHUTDOWN/AUTO SLEEP

1. Long press HOME button for 3 seconds to turn off the controller;
2. In the connected state, if the controller is idle for more than 15 minutes, it will automatically shut down
3. In the connectionless state waiting for connection), if there is no connection for 2 minutes, the controller will automatically shut down.
4. With auto sleep or manual shutdown, the controller will wake up if short press the HOME button or connect back to the device that had been successfully connected last time.

FINE-TUNE YOUR CONTROLLER ON THE APP

APP can be downloaded by scanning this QR code and is also available on the App Store

For Android: Download by scanning the QR code



For iOS: Available on the App Store



PRECAUTIONS

1. If there is any quality problem with the product, please contact our customer service and register firstly. contact aliceshaomopaigame.comGuangzhou Xinxiang Culture Co., LTD Address: Room C02,6th Floor, 336 Huangpu Avenue, Tianhe District, Guangzhou
2. If you need to return or exchange the product, please ensure that the product is intact (including the outer packing, free gift, instruction, after-sales card, label, etc.) and will not affect the secondary sales.
3. If the product needs to be repaired, please provide the info of the user's name, phone number, address ant correctly fill in the after-sales requirements and detailed after-sales reasons, The after-sales card should btsent back with the product.

Customer Support


Feel free to reach out to us if you need ANY help with the controller.

We'll get back to you within 5 hours.

Email: aliceshao@mopaigame.com



Documents / Resources

	<p>MOBAPAD B0C3VC3HL3 Hall Effect Drift-Proof Wireless Switch Controller [pdf] User Manual</p> <p>B0C3VC3HL3 Hall Effect Drift-Proof Wireless Switch Controller, B0C3VC3HL3, Hall Effect Drift-Proof Wireless Switch Controller, Drift-Proof Wireless Switch Controller, Wireless Switch Controller, Switch Controller, Controller</p>
---	--