



MOBAPAD ChiTu Switch Controllers User Guide

[Home](#) » [MOBAPAD](#) » MOBAPAD ChiTu Switch Controllers User Guide 

Contents

- [1 MOBAPAD ChiTu Switch Controllers](#)
- [2 LAYOUT](#)
- [3 Connect to the Switch](#)
- [4 Wake up & Reconnect](#)
- [5 Turbo Function](#)
- [6 NFC Sense](#)
- [7 Light Adjustment](#)
- [8 Battery Indicator](#)
- [9 ON & OFF](#)
- [10 After-Sale Service](#)
- [11 Macro \(Local setup\)](#)
- [12 Macro Auto-Loop](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

MOBAPAD

MOBAPAD ChiTu Switch Controllers



 
 
LAYOUT

Exclusively Designed for Nintendo Switch






- Left Stick
- Right Stick
- D-Pad
- Minus Button
- Plus Button
- Screenshot
- Face Button
- Home Button
- Channel Lights
- Turbo Button
- Macro Button
- NFC / LOGO Light

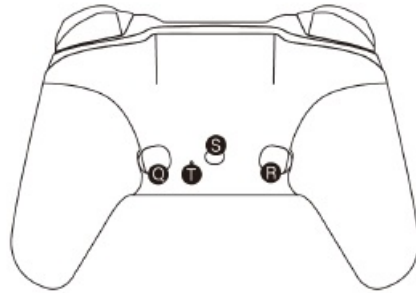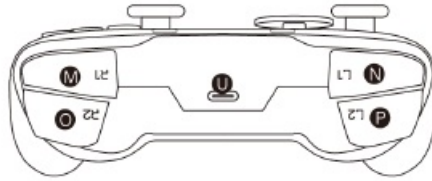•



- R Key
- L Key
- ZR Key
- ZL Key
- M1 customizable
- M2 customizable
- Pairing Button
- Reset Hole
- Type-C Charging Port


Connect to the Switch

- On the Switch, click on  and select “Change Grip/Order”,
- Short press , the channel lights flash like marquee, pairing starts.
- When LED1 stays on, pairing is complete. Press  to return home page.

Note: To use a wired connection, ensure the controller is on or in sleep mode and enable wired mode for the Pro controller







Wake up & Reconnect








After automatic sleep or manual shutdown, short pressing the  will awaken the controller or reconnect to the previously paired device

Turbo Function

- **Turbo-Mappable Buttons:** A/B/X/Y/L1/L2/R1/R2. >
- **Manual Turbo:** The LOGO light flashes when the turbo is triggered.
- **Auto Turbo:** The LOGO light continuously flashes automatically.

| | | |
|--------------------------|---|--|
| Manual Turbo |  + Function Button | After the first setup, hold down the function button to activate turbo, release to stop. |
| Auto Turbo |  + Function Button | After the second setup, short press the function button to initiate automatic turbo, short press the function button again to pause the turbo. |
| Disable Single-Key Turbo |  + Function Button | After the third setup, the turbo function of the certain button will be disabled. |
| Disable All Turbo | Long press  for 3s | Disable turbo for <u>ALL</u> function buttons. |

Turbo Modes: High, Medium, Low

| | | |
|-----------------|--|--|
| Switch Modes |  +  or  left right |  +  downshift  +  upshift |
| Mode Indicators | | For low gear, the current mode light blinks once. For medium gear, the current mode light blinks twice. For high gear, the current mode light blinks 3 times. |

 
 
NFC Sense

How To Use

After successfully connecting the controller to the Switch console, if the game supports Amiibo functionality, you can use the figurine on the M-shaped logo sensing area to activate in-game items.



Light Adjustment

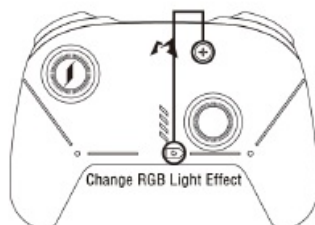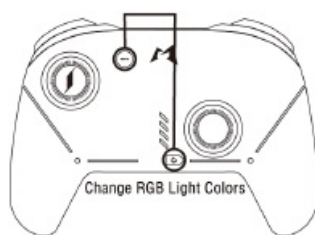

| | | |
|-----------------------------|---|--|
| Manual Operation | + | Color 1: White (Default) Color 2: Blue Color 3: Red Color 4: Green Color 5: Yellow Color 6: Cyan Color 7: Purple |
| Shield MA/M2 (Disabling) | + | Light Effect 1: Stay on (Default) Light Effect 2: Breathing Light Effect 3: Off |

Battery Indicator

- **Low battery warning:** The middle mode channel light flashes rapidly.
- When charging the controller in the power-off state, the channel lights blink, automatically won farther 1 step the battery is truly charged, the lights will
- While playing games, if you charge the controller, the working channel light will flash twice as a reminder, and then return to the default lighting effect.



ON & OFF

- Long press for 3 seconds to power off.
- When the controller is connected, it will automatically power off it idle for more than 15 minutes.
- When the controller is in an unconnected state (waiting for connection), it will automatically power off if not connected after 2 minutes.

 
After-Sale Service

- Feel free to reach out to us if you encounter any concerns or issues with Mobapad controller.
- We are committed to addressing your needs and ensuring your satisfaction within a year.

zhangzk@mopaigame.com

Macro (Local setup)

Assignable Buttons: A/B/X/Y/L1/L2/L3/R1/R2/R3/Plus/Minus/D-pac and joysticks (joysticks only support eight directions, no analog input).

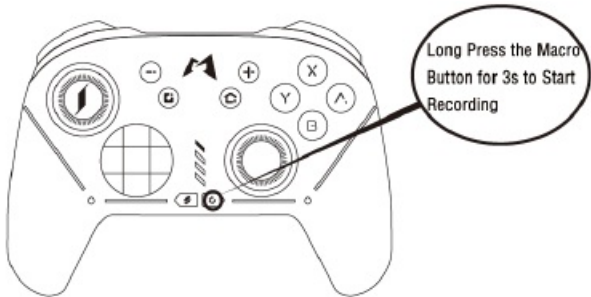

| | |
|---|--|
| Macroprogramming | Press and hold the ⚙️ for 3s, the LOGO light will turn solid purple. Then start recording. At the end of the recording, press M1 to save recorded macros on the M1 button, or M2 to save macros on the M2 button. Press the M1/M2 key to trigger the recorded operation. |
| Clear the macros saved on the M1 or M2 button | Long press the ⚙️ for 3s, the LOGO light will turn solid purple, then press M1 or M2 to clear the recorded macro |
| Shield the macros recorded on M1/M2 | Double-press the ⚙️ to trigger a short vibration, meaning the macros for M1/M2 are blocked (not cleared). Double-press the ⚙️ again to trigger two long vibrations, meaning the macros for M1/M2 are restored. |

 
Important Notes

The default factory functions for M1/M2 are face buttons B/A. After setting them as macros, if you wish to remap them, please go to the APP.

Macro Auto-Loop

- **Activate Macro Loop:** (take M1 as an example) Hold ⚙️ + M1 to enable the macro loop for the M1 key.
- **Deactivate Macro Loop:** During the macro loop, hold ⚙️ + M1 to disable the macro loop function for the M1 key.

(Enable M1 macro loop/ Disable M1 macro loop)

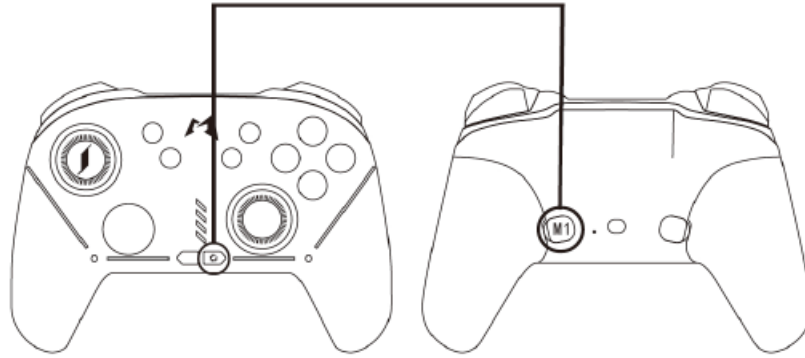

Note

- Only M1/M2 can enable macro auto loop.
- The macro loop will not be interrupted by other button presses and can only be ended by pressing certain button combinations.

Documents / Resources

| | |
|--|---|
| | MOBAPAD ChiTu Switch Controllers [pdf] User Guide ChiTu Switch Controllers, ChiTu, Switch Controllers, Controllers |
|--|---|

References

- [User Manual](#)