



Mobile Intouch SIMTELL Wireless Router User Guide

[Home](#) » [Mobile Intouch](#) » Mobile Intouch SIMTELL Wireless Router User Guide

Contents [[hide](#)]

- 1 Mobile Intouch SIMTELL Wireless Router
- 2 SIMTELL wireless router specification
- 3 SIMTELL wireless router interface
- 4 Installation Guideline
 - 4.1 Quick Configuration Guide
- 5 Package Contents
- 6 Common faults and treatment suggestion
- 7 FCC Statement
- 8 Documents / Resources
- 9 Related Posts



Mobile Intouch SIMTELL Wireless Router



Thanks for choosing SIMTELL 4G wireless router, please read the user manual carefully so that it will be more convenient for you to use the router.

Lift Side

Front

Right Side

Back



SIMTELL is LTE wireless router, and this router support cloud-SIM technology, so the physical SIM card is not required. When the router is powered on, it will be dynamical allocated SIM card. This router support multiple wireless networks and dynamic choose the best LTE network so as to provide best service.

SIMTELL wireless router specification

Feature	Description
Bands	4G FDD LTE: B1/2/3/4/5/7/8/12/13/17/20/25/26/66 4G TDD LTE: B38/39/40/41 3G WCDMA/HSPA: B1/2/4/5/8 2G GPRS/EDGE: B2/3/5/8
Peak Throughput	CAT 6: DL 300Mbps UL 50Mbps Intra and Inter bands CA (carrier aggregation)
LTE antenna	Built-in antenna & external antenna (optional)
WiFi	802.11 b/g/n/ac Dual band 2.4G & 5G 32 concurrent connection users
LAN/WAN	4 LAN interface (10M/100M/1000M auto-sensing) 1 WAN/LAN interface (adjust by configuration)
Dimension	180mm*132mm*48mm
Weight	< 500g
Power	AC: 100V~240V, 50Hz~60Hz DC: 12V/2A Battery: 2000mAh (optional)

Note: Listed wireless data transfer rates are the theoretical maximum. The actual data transfer rate may vary depending on the network environment and carrier's coverage.

SIMTELL wireless router interface



1. WPS Button
2. WLAN ON/OFF Switch

3. LAN Port
4. WAN/LAN Port
5. USB port
6. DC Power
7. Power Switch
8. Reset Button
9. SIM Card
10. External Antenna
11. Power LED
12. WiFi/WPS LED
13. LTE LED
14. LTE Signal Strength LED

Note: Port 4 is used as WAN port by default, if you need to use it as LAN, you need to modify the configuration of the port function through the configuration of the router.

Product display light introduction

Device front display light:

Type	Status	Description
Power	Blue On	Power normal, the router is powered on
	Blue Off	Power abnormal, the router is powered off
	Orange On	Powered by internal battery ①
WLAN	Blue On	WiFi is opened and has data transmission
	Blue blink	WPS function is ON
	Blue Off	WiFi closed
Internet	Blue	Connected the internet
	Red	Not connected
Signal	One	The Signal is poor
	Two	Signal is moderate
	Three	Signal is good
	Four	Signal is good
	Five	Signal is very good

Installation Guideline



- Turn off the router and unplug the power adapter before installing any external panel antenna.
- The router prefer to use the built-in antenna, unless an external antenna is installed.
- Only use external antennas provided in this package or by your carrier.
- Do not place the external remote antenna in the outdoor, and do not use the external remote antenna in thunderstorms.

Quick Configuration Guide

The router supports connecting with computer via standard RJ45 cable or WiFi, supports OS as following: Windows XP/Windows 7/Windows 8/Window 10/MAC OS/Linux/Android, and so on.

1. Insert SIM card (optional).

This wireless router supports Cloud-SIM technology, the device will automatically be allocated SIM card resources from the network and provide Internet connection when it is powered on. If you have your own SIM card and want to use your own SIM card, you can insert your SIM card in the SIM card slot. When a physical SIM card is installed, the router will give priority to the physical physical SIM card.

2. Power on the router.

3. Configure the WiFi SSID and password.

- Once the WLAN indicator is blue on and Internet indicator is blue, you can surf Internet on your smart-phone, laptop,tablet or PC, via WiFi or LAN connection with TR200 router .
- Use WiFi connection, you need to choose the SSID of the TR200's 2.4G or 5G WiFi and configure the password of WiFi on the smart-phone, laptop, tablet or PC. The default WiFi name (SSID) and password are provided on the device sticker label on the back of the router.
- Use LAN connection, please connect the LAN port onTR200 router with PC's LAN port and configure the LAN obtaining IP and DNS by DHCP.

4. Change the WiFi SSID or password (optional).

The default WiFi name and password are provided on the device sticker label on the back of the router.

We recommend that you do not change the WiFi SSID and password to match the information on the label on the back of the device.

If you want to change the WiFi SSID and password, please following the instruction as folloing:

- On smart-phone, tablet, laptop or PC which is connected with TR200 router, open web browser and type

the default gateway IP address “192.168.0.1”.

- Click the “Login” in the upper right corner to access the user page using the username and password indicated at the device sticker at the bottom. (default username: admin, default password: admin)change the WiFi configuration. (SSID, password,etc)



- change the WiFi configuration. (SSID, password,etc)



Package Contents

- 1×Router
- 1× LAN RJ45 Cable (1m)
- 2×External Antennav
- 1×Power Adaptor
- 1×User Manual
- 1×Battery (optional)

Precautions

- When you remove and insert the SIM card, please ensure the device is powered off.
- Do not use the equipment in case of lightning and unplug power adapter.
- If the device is working fine, do not change the parameter or other functions, if changed and cannot access Internet, please press and hold the reset button for more than 5 seconds to restore the factory settings and reboot.

Common faults and treatment suggestion

Common faults	Treatment suggestion
The device is powered on but the front panel power light is off.	Check the power adapter whether properly plug in the power outlet and the device power port. Check the cable for any damaged.
Computer local connection is not displayed, cannot successfully ping IP address of the device, cannot open the WEB page.	Check if the computer's LAN network status obtained automatically IP address from the device DHCP pool, reboot your computer, Clear your browsing history / cache. Check your LAN cable whether properly plugged in the LAN port.
Change user page login password or SSID password, but forget the password.	Long press the reset button for more than 5 seconds to restore the factory settings, and then check the username and password which are listed in the back label.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on

standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: This device has also been tested against this SAR limit. This device was tested for typical Body Phantom operations with the Wireless Router kept 0mm from the body. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Documents / Resources

	Mobile Intouch SIMTELL Wireless Router [pdf] User Guide SIMTELL, 2AXZ3-SIMTELL, 2AXZ3SIMTELL, SIMTELL Wireless Router, Wireless Router, Router
---	---