



MobileDemand xTablet Flex 10B Rugged Touchscreen Tablet User Manual

[Home](#) » [MobileDemand](#) » MobileDemand xTablet Flex 10B Rugged Touchscreen Tablet User Manual 



User Manual xTablet Flex 10B



Contents

 
- [1 Introduction](#)
- [2 xTablet Diagrams](#)
- [3 Desktop](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Introduction

Acknowledgments Congratulations on the purchase of MobileDemand's xTablet® Flex 10B. Designed and tested to meet our exacting standards ensures dependability and customer satisfaction. Refer to this manual to guide you through the basic functions and features.

Safety Notice

	Read the safety instructions carefully and thoroughly. All cautions and warnings on the equipment and user's manual should be noted.
	Keep this equipment away from humidity, high temperature, and flammable liquids.
	Adhere to hospital protocol as it pertains to mobile devices to avoid interference with medical equipment
	<ul style="list-style-type: none">• To avoid damage do not leave the equipment in an unconditioned environment with a storage temperature above 160°F or below -22°F (-30°C to 71°C).• Operating temperature of 32°F to 120°F (0°C to 49°C) for light loading applications.
	When using the USB data line, observe the guidelines provided in this manual to avoid damage.
	Do not store near magnetic storage equipment.

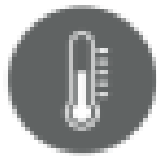

Never pour liquid into the opening. Damage to the equipment or electrical shock could result.

xTal



Figure A: Front Panel

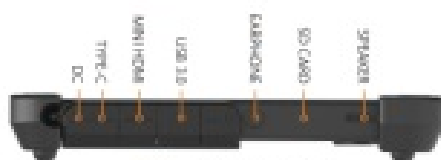 


Figure B: Left Side Panel



Figure C: Right Side Panel



Figure D: Top Side Panel



Figure E: Bottom Side Panel



Figure F: Back Panel

Optional Keyboard



1. Flexible Base Keyboard Interface: Magnetic attachment holds keyboard firmly in place
2. Keyboard Group: Full-size QWERTY key.
3. Touch Tablet: Cursor control similar to mouse
4. Left Key
5. Right Key

Desktop


Image Slide Application

Windows 10 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of a “magnet”. You need to log on to your Microsoft account before the application program completely runs



Cortana

 Use Cortana for fast smart searching.

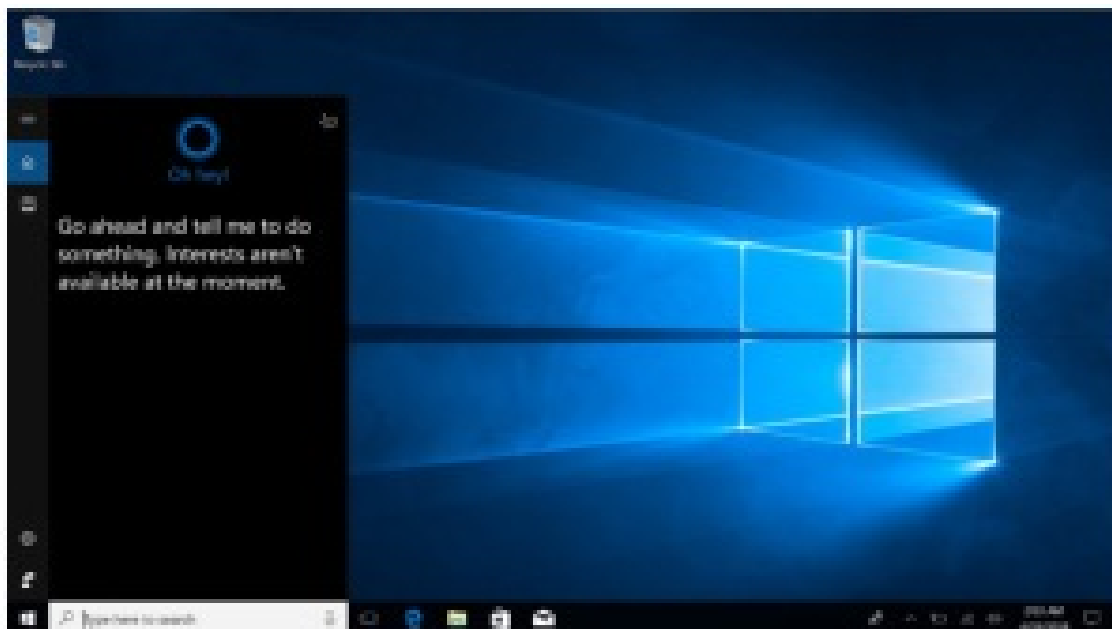

Introduction to App Interface

Besides the application programs already fixed on the “start” screen, you can also fix other applications, programs, folders, etc to the “start” screen.

If you want to fix more application programs on the start interface, see the operation in the figure below. In the start menu, right-click the application you want to fix and select “Pin to Start”.

You can also drag the application onto the “start” screen, as follows:

 


Conversely, if you want to cancel or delete a certain application in the start screen:

- (1) Right-Clicking the application
- (2) Click the “Unpin from Start”.



If you want to fix more application programs on the taskbar, see the operation in the figure below. In the start menu, right-click the application you want to fix and select “More”, and then select “Pin to Taskbar”. You can also drag the application onto the “start” screen, as follows:

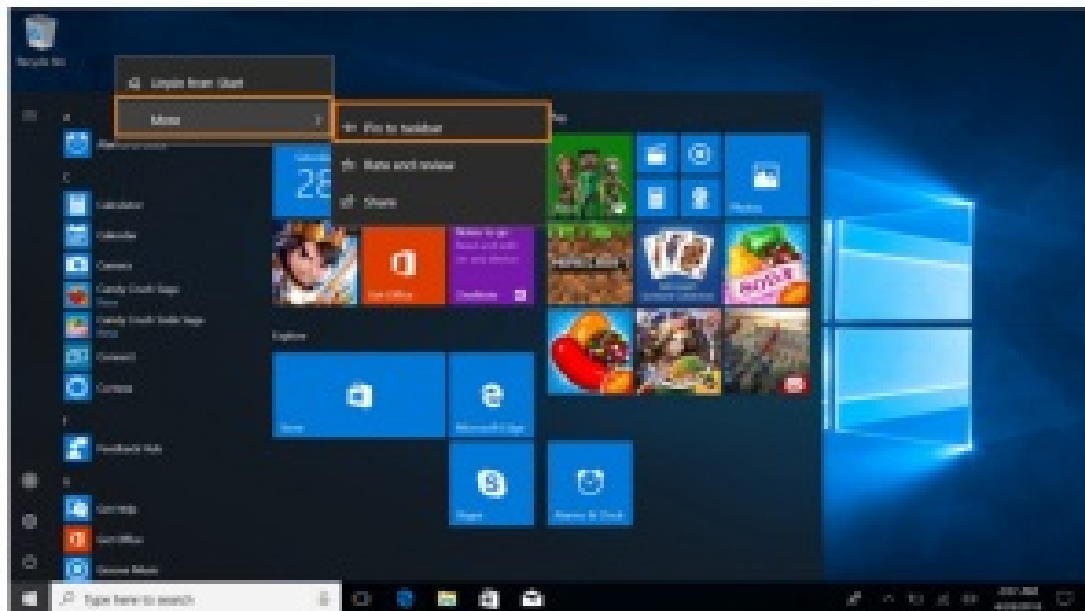



Conversely, if you want to cancel or delete a certain application in the taskbar:




- (1) Right-Clicking the application
- (2) Click the "Unpin this program from taskbar".



  3.6 Start Menu

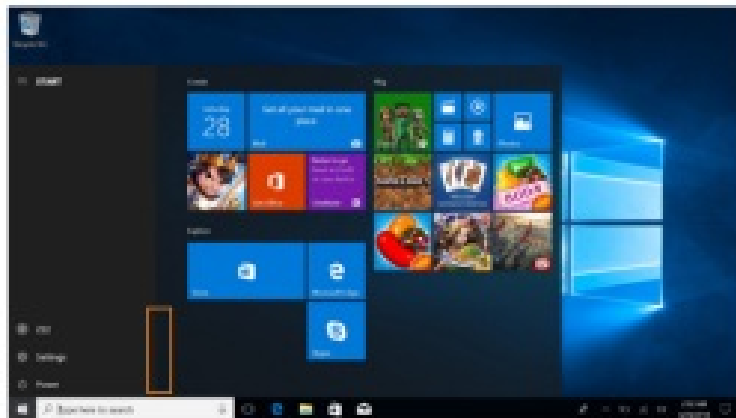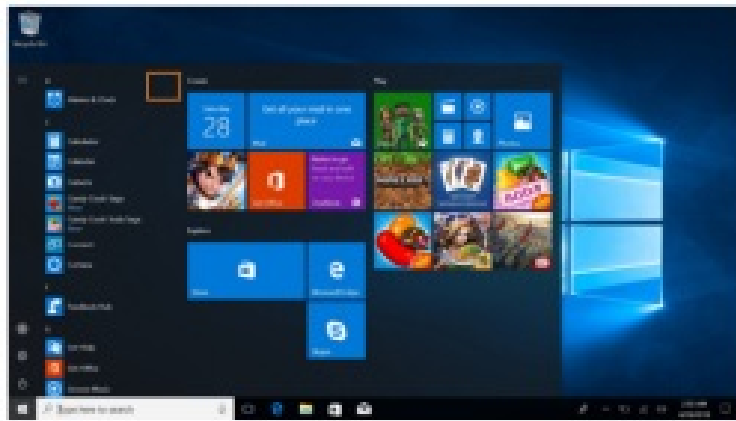 Under PC mode, press the Start icon, Start Menu will display including Start, Device, Setup, Share, and Search Program.


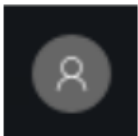


  	Power, Settings, Account
	Account Settings, Lock, Sign Out
	Sleep, Shut Down, Restart

  Search Menu




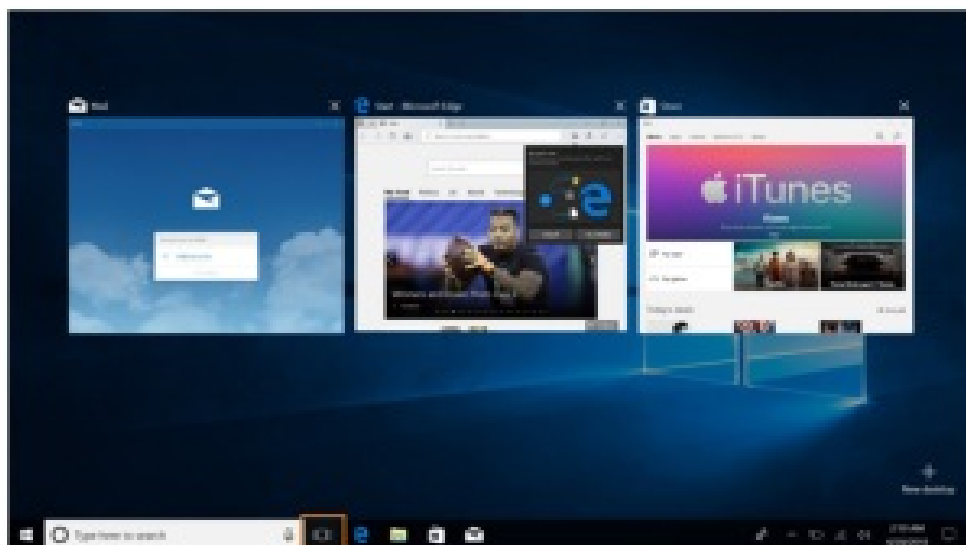 
Action Center

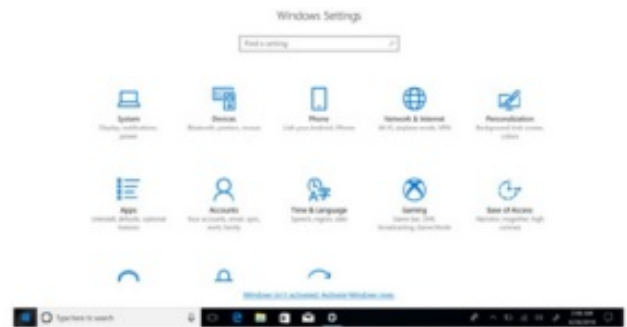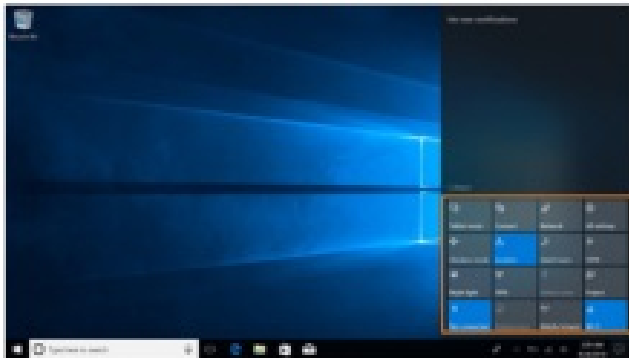



Action Center is a notification center that also allows for quick settings like Tablet / PC mode, Wi-Fi, Bluetooth, etc.

Multitasking Operating Interface

If you click the Task View(or press the icon ), the running applications will be displayed. We can enter the application, which also can be deleted.



  Sleep, Shut Down, Restart

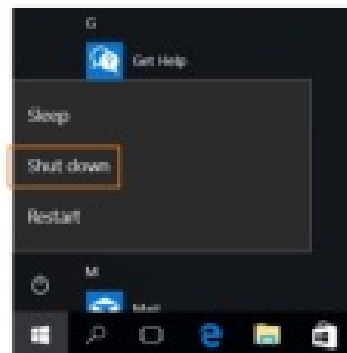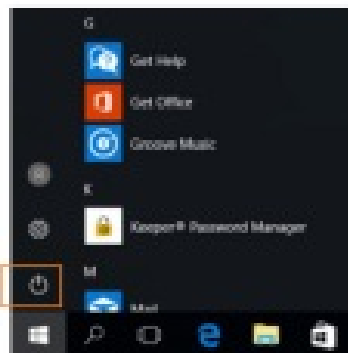

xTablet Flex 10B



Contact our sales team today | sales@mobiledemand.com | 319.363.4121
 1501 Boyson Square Drive | Suite 101 | Hiawatha, Iowa 52233 | 319.363.4121 | RuggedTabletPC.com
 ©2021 MobileDemand, LC | All trademarks are property of their respective owners.
 VERSION 09.28.21

Documents / Resources

	<p>MobileDemand xTablet Flex 10B Rugged Touchscreen Tablet [pdf] User Manual xTablet Flex 10B, Rugged Touchscreen Tablet</p>
--	---

Manuals+.