



MODECOM 5200U Multimedia Keyboard User Manual

[Home](#) » [MODECOM](#) » MODECOM 5200U Multimedia Keyboard User Manual 

MODECOM 5200U Multimedia Keyboard



Contents

- [1 Introduction](#)
- [2 Installation](#)
- [3 Shortcut Functions](#)
- [4 SPECIFICATION:](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Introduction

Important: Please carefully read these installation instructions for properly use this device.

Installation

Locate available USB port and connect the keyboard using its USB Plug to that port.

Keyboard should be automatically detected and installed by the operating system. Keyboard is ready to be used.

Shortcut Functions

- Fn + F1 = launch default multimedia player application
- Fn + F2 = volume down
- Fn + F3 = volume up
- Fn + F4 = mute
- Fn + F5 = previous track
- Fn + F6 = next track
- Fn + F7 = play/pause
- Fn + F8 = stop
- Fn + F9 = launch default web browser application
- Fn + F10 = launch default mail client software
- Fn + F11 = open „Search”
- Fn + F12 = open “Calculator”

Remark: All multimedia player hotkeys, were configured to work properly with the default Windows Media Player or Groove Music. However, many other programs can be operated with those keys as well. If your specific multimedia player doesn't react properly to pressing those keys, please consult it's help system to configure the application to make use of those hotkeys.

SPECIFICATION:

- **Dimensions:** 435*126*22mm
- **Number of keys:** 104
- **Number of hotkeys:** 12
- **Interface:** USB
- **USB cable length:** 180cm
- **Power:** USB 5V
- **Net weight:** 450g

WARNINGS:

- Do not use the keyboard for purposes other than those for which it is intended or connect to other devices, as this may damage the keyboard and may be dangerous.
- Keep away from children.




This device was designed and made of high-quality reusable materials and components. If the device, its packaging, user's manual, etc. are marked with crossed waste container, it means they are subject to segregated household waste collection in compliance with the Directive 2012/19/UE of the European Parliament and of the Council. This marking informs that electric and electronic equipment shall not be thrown away together with household waste after it's been utilised. The user is obliged to bring the utilised equipment to electric and electronic waste collection point. Those running such collection points, including local collection points, shops or commune units, provide convenient system enabling to scrap such equipment. Appropriate waste management

aids in avoiding consequences which are harmful for people and environment and result from dangerous materials used in the device, as well as improper storage and processing. Segregated household waste collection aids recycle materials and components of which the device was made. A household plays crucial role in contributing to recycling and reusing the waste equipment. This is the stage where the basics are shaped which largely influence the environment being our common good. Households are also one of the biggest users of small electrical equipment. Reasonable management at this stage aids and favours recycling. In the case of improper waste management, fixed penalties may be imposed in accordance with national legal regulations.



Documents / Resources

| | |
|---|---|
| <div>5200U</div> <div>Klawiatura przewodowa</div> <div>Multimedia keyboard</div> <div>USER'S MANUAL</div> <div></div> <div>MODECOM</div> | <div>MODECOM 5200U Multimedia Keyboard [pdf] User Manual</div> <div>5200U Multimedia Keyboard, 5200U, Multimedia Keyboard, Keyboard</div> |
|---|---|

References

-  [MODECOM | Oficjalna strona](#)