



modular Cooking Range Line FRY TOP Instruction Manual

[Home](#) » [MODULAR](#) » modular Cooking Range Line FRY TOP Instruction Manual 

modular Cooking Range Line FRY TOP











MOD.			
_60/30 FT...G _60/30 FT...G-CR _60/60 FT...G _60/60 FT...G-CR _60/30 FT...E _60/30 FT...E-CR _60/60 FT...E _60/60 FT...E-CR _60/30 FT...E-D _60/30 FT...E-CR-D _60/60 FT...E-D _60/60 FT...E-CR-D	_65/40 FT...G _65/40 FT...G-CR _65/40 FTGS _65/70 FT...G _65/70 FT...G-CR _65/70 FTGS _65/40 FT...E _65/40 FT...E-CR _65/40 FTES _65/70 FT...E _65/70 FT...E-CR _65/70 FTES _65/40 FT...E-D _65/40 FT...E-CR-D _65/70 FT...E-D _65/70 FT...E-CR-D	_70/40 FT...G... _70/40 FT...G-CR... _70/40 FTGS... _70/70 FT...G... _70/70 FT...G-CR... _70/70 FTGS... _70/40 FT...E... _70/40 FT...E-CR... _70/40 FTES... _70/70 FT...E... _70/70 FT...E-CR... _70/70 FTES...	_90/40 FT...G _90/40 FT...G-CR _90/80 FT...G _90/80 FT...G-CR _90/40 FT...E _90/40 FT...E-CR _90/80 FT...E _90/80 FT...E-CR

Doc.n°	252.450.00
Edition	00

Contents

- 1 GENERAL PRESCRIPTIONS
 - 1.1 DISPOSAL OF PACKING AND OF THE APPLIANCE
 - 1.2 SAFETY DEVICES
- 2 INSTRUCTIONS FOR INSTALLATION
 - 2.1 REMINDERS FOR THE INSTALLER
 - 2.2 REFERENCE STANDARDS AND LAWS
 - 2.3 UNPACKING
 - 2.4 POSITIONING
 - 2.5 CONNECTIONS
 - 2.6 CONVERSION TO ANOTHER TYPE OF GAS
 - 2.7 COMMISSIONING
- 3 INSTRUCTIONS FOR USE
 - 3.1 REMINDERS FOR THE USER
 - 3.2 USING THE GAS FRY-TOP WITH TAP
 - 3.3 GAS GRIDDLE WITH THERMOSTATIC TAP USE
 - 3.4 PROLONGED DISUSE
- 4 INSTRUCTIONS FOR CLEANING
 - 4.1 REMINDERS FOR CLEANING
- 5 INSTRUCTIONS FOR MAINTENANCE
 - 5.1 REMINDERS FOR THE MAINTENANCE TECHNICIAN
 - 5.2 CONVERSION TO ANOTHER TYPE OF GAS
 - 5.3 COMMISSIONING
 - 5.4 TROUBLESHOOTING
 - 5.5 REPLACING COMPONENTS
 - 5.6 CLEANING THE INTERIOR
 - 5.7 MAIN COMPONENTS
- 6 INSTALLATION DIAGRAM
- 7 TECHNICAL DATA
 - 7.1 Nozzles and Settings
 - 7.2 Categories and pressures
 - 7.3 Technical data of gas appliances
 - 7.4 Technical data of electric appliances
- 8 Documents / Resources
- 9 Related Posts

GENERAL PRESCRIPTIONS

	READ THIS MANUAL CAREFULLY. IT PROVIDES IMPORTANT INFORMATION FOR SAFE INSTALLATION, USE AND MAINTENANCE OF THE APPLIANCE.
	FAILURE TO COMPLY WITH WHAT IS PRESENTED BELOW MAY COMPROMISE THE SAFETY OF THE EQUIPMENT.
	THE MANUFACTURER WILL NOT BE LIABLE FOR ANY DAMAGE OR INJURY RESULTING FROM FAILURE TO OBSERVING THE FOLLOWING RULES.
	TRANSLATION OF THE ORIGINAL INSTRUCTIONS.
	APPLIANCES NEED PRECAUTIONS FOR INSTALLATION, PLACING AND/OR FIXATION AND CONNECTION TO THE MAINS. SEE SECTION "INSTALLATION INSTRUCTIONS".
	THE APPLIANCES NEED PRECAUTIONS FOR CLEANING. SEE THE SECTION "INSTRUCTION FOR CLEANING".
	THE SYMBOL "HIGH VOLTAGE" IS PLACED ON A PANEL THAT GIVES ACCESS TO A PART WITH HIGH VOLTAGE.
	DO NOT CLEAN THE EQUIPMENT WITH DIRECTS WATER JETS, HIGH PRESSURE OR STEAM CLEANER.

Keep this manual in a safe place, known to all users, so that it can be consulted throughout the working life of the appliance.


This equipment is designed for cooking food. It is intended for industrial use. Any other use is to be considered improper

This appliance is not intended for use by people (including children) with limited physical, sensory or mental abilities or without experience and knowledge of it.

Unless they are supervised or instructed in its use by a person responsible for their safety.

Do not leave the appliance unattended in presence of children and ensure that the latter do not have access to the appliance.

The appliance must be used by trained personnel. Do not leave the appliance unattended when operating.

	DO NOT STORE FLAMMABLE MATERIALS IN CLOSE PROXIMITY TO THE APPLIANCE. FIRE HAZARD.
---	--

The appliance must be installed in a well-ventilated room.

Inadequate ventilation causes asphyxia. Do not obstruct the ventilation system of the place where the appliance is installed. Do not obstruct the vents or ducts of this or other appliances.

The appliance must be installed in a well-ventilated room.

Inadequate ventilation causes asphyxia. Do not obstruct the ventilation system of the place where the appliance is

installed. Do not obstruct the vents or ducts of this or other appliances.

In the event of an appliance fault or malfunction, shut the gas shut-off valve and/or switch the appliance off at the main switch installed upline. Installation and conversion to a different type of gas must be carried out by qualified technicians authorized by the manufacturer, in compliance with current safety standards and the instructions in this manual.

Appliance maintenance and conversion to a different type of gas must be carried out by qualified technicians authorized by the manufacturer, in compliance with current safety standards and the instructions in this manual. Clean the appliance following the instructions given in Chapter "INSTRUCTIONS FOR CLEANING".

DISPOSAL OF PACKING AND OF THE APPLIANCE

PACKING

The packing is made using environmentally friendly materials. The plastic recyclable components are:

- the transparent cover, the bags containing the instructions manual and nozzles (made of Polyethylene – PE).
- the straps (in Polypropylene – PP).

APPLIANCE

The appliance is manufactured 90% from recyclable metals (stainless steel, aluminium sheet, copper) .

- The appliance must be scrapped in compliance with current regulations governing such disposal.
- Make the appliance unusable before scrapping.
- It must be disposed of properly.

THE SYMBOL SHOWING A CROSSED-OUT WASTE CONTAINER ON THE UNIT OR PACKAGE INDICATES THAT, AT THE END OF ITS LIFE CYCLE, THE PRODUCT MUST BE COLLECTED SEPARATE FROM OTHER WASTE.

THE DIFFERENTIATED COLLECTION OF THIS EQUIPMENT IS ORGANISED AND MANAGED BY THE PRODUCER.

THE USER WHO INTENDS TO GET RID OF THIS EQUIPMENT SHALL CONTACT THE PRODUCER AND FOLLOW THE SYSTEM THAT THE LATTER HAS USED IN ORDER TO COLLECT THE EQUIPMENT SEPARATELY AT THE END OF ITS LIFE.

PROPER SEPARATE COLLECTION HELPS PREVENT POSSIBLE NEGATIVE IMPACTS ON THE ENVIRONMENT AND HEALTH, AND FAVOURS THE REUSE AND/OR RECYCLING OF THE UNIT'S MATERIALS.

ABUSIVE DISPOSAL OF THE PRODUCT BY THE HOLDER WILL RESULT IN THE APPLICATION OF PENALTIES AS PER CURRENT STANDARDS.

SAFETY DEVICES

ELECTRIC FRY-TOP

SAFETY THERMOSTAT






THE MANUFACTURER WILL NOT BE LIABLE FOR ANY DAMAGE OR INJURY RESULTING FROM FAILURE TO OBSERVING THE FOLLOWING RULES.

- The appliance is equipped with a manual reset safety thermostat that interrupts heating when the operating temperature exceeds the maximum permitted value.
- To restore appliance operation, remove the control panel and press the thermostat reset button. This procedure must only be carried out by a qualified, authorized technician.

INSTRUCTIONS FOR INSTALLATION

REMINDERS FOR THE INSTALLER

	READ THIS MANUAL CAREFULLY. IT PROVIDES IMPORTANT INFORMATION FOR SAFE INSTALLATION, USE AND MAINTENANCE OF THE APPLIANCE.
	FAILURE TO COMPLY WITH WHAT IS PRESENTED BELOW MAY COMPROMISE THE SAFETY OF THE EQUIPMENT.
	THE MANUFACTURER WILL NOT BE LIABLE FOR ANY DAMAGE OR INJURY RESULTING FROM FAILURE TO OBSERVING THE FOLLOWING RULES.

Identify the specific appliance model. The model number is detailed on the packing and on the appliance data plate. The appliance must be installed in a well-ventilated room.

Installation and conversion to a different type of gas must be carried out by qualified technicians authorized by the manufacturer, in compliance with current safety standards and the instructions in this manual.

Appliance maintenance and conversion to a different type of gas must be carried out by qualified technicians authorized by the manufacturer, in compliance with current safety standards and the instructions in this manual.

Do not obstruct any air vents or drains present on the appliance.

Do not tamper with appliance components.

REFERENCE STANDARDS AND LAWS

- Install the appliance in accordance with the safety standards in force in the country.

UNPACKING

- Check the state of the packing and in the event of damage, ask the delivery person to inspect the goods.
- Remove the packing.
- Remove the protective film from the outer panels.

Use a suitable solvent to remove any residual adhesive from the panels.

POSITIONING

The overall dimensions of the appliance and the position of connections are given on the installation diagram at the end of this manual.

The appliance can be installed singly or in combination with other appliances in the same product range.

The appliance is not suitable for integrated installation.

Position the appliance at least 10 cm from adjacent walls.

If the appliance is to be placed near walls, dividers, kitchen furniture, decorative elements etc.

this must be made of non-combustible materials. Otherwise, they must be covered with suitable non-combustible

heat insulating materials.

Level the appliance by means of the heightadjustable feet

APPLIANCE ASSEMBLY WITH BASE AND BRIDGE

Follow the instructions provided with the type of support utilized.

FUMES EXHAUST SYSTEM

Create a fumes exhaust system based on the " Type " of appliance. The " Type " is stated on the appliance dataplate.

"A1 " TYPE APPLIANCE

Position the "A1" type appliance below an extractor hood to ensure smoke and fumes generated by cooking are removed.

" 821 " TYPE APPLIANCE

Position the "B21" type appliance below an extractor hood.

" 811 " TYPE APPLIANCE

Fit the "B11" type appliance with a suitable flue, available from the appliance manufacturer. Follow the assembly instructions provided with the flue.

Connect the flue to a 150/155 mm diameter hose, heat resistant to 300°C.

Vent to the outside or into an efficient flue. The hose length must not exceed 3 metres.

CONNECTIONS

The position and dimensions of connections are given in the installation diagram at the end of this manual.

CONNECTION TO THE GAS SUPPLY

- Check that the appliance is designed to operate with the type of gas supply present on site. Check the information given on the decals on the packing and appliance.
- Convert the appliance to the local gas type, if necessary. Follow the instructions at the next paragraph "Conversion to a different type of gas".
- On top appliances a rear connection is also available. Remove the plug present and screw it tightly onto the front connector.
- A rapid-action gas shut-off valve must be fitted upstream of the appliance in an easily accessible position.
- Do not use connection pipes having a diameter smaller than that of the appliance's gas connector.
- Once the appliance has been installed, check for gas leaks at the connection points.

CONNECTION TO THE GAS SUPPLY

- Check that the appliance is designed to operate with the type of gas supply present on site. Check the information given on the decals on the packing and appliance.

- Convert the appliance to the local gas type, if necessary. Follow the instructions at the next paragraph “Conversion to a different type of gas”.
- On top appliances a rear connection is also available. Remove the plug present and screw it tightly onto the front connector.
- A rapid-action gas shut-off valve must be fitted upstream of the appliance in an easily accessible position.
- Do not use connection pipes having a diameter smaller than that of the appliance’s gas connector.
- Once the appliance has been installed, check for gas leaks at the connection points.

ELECTRICAL CONNECTIONS

Check if the appliance is designed to operate at the voltage and frequency of the power supply present on site. Check the details given on the appliance data plate and plaque near the terminal board. Install upstream of the equipment in an easily accessible place, an all-pole disconnecting device with a contact gap of allowing full disconnection under the conditions of overvoltage category III.

A flexible rubber cable with insulation specifications not lower than type HOS RN-F must be used for connection. Connect the power supply cable to the terminal board as shown in the wiring diagram supplied with the appliance. Secure the power supply cable with the cable clamp.

Protect the power supply cable on the outside of the appliance with a rigid plastic or metal pipe.


If the power supply cable is damaged, it must be replaced by the manufacturer or his service centre or by a person with similar qualifications to prevent any risk.




THE SYMBOL “HIGH VOLTAGE” IS PLACED ON A PANEL THAT GIVES ACCESS TO A PART WITH HIGH VOLTAGE.

PROTECTIVE EARTH AND EARTH BONDING CONNECTIONS

Connect the appliance to an efficient ground circuit.

Connect the earth conductor to the terminal with the symbol  next to the main terminal board.

Connect the metal structure of the appliance to the equipotential node. Connect the conductor to the terminal with the symbol  on the outside part of the bottom.

CONNECTION TO THE WATER SUPPLY

- The appliance must be connected to a potable water supply. The water inlet pressure must be between 150 kPa and 300 kPa. Use a pressure reducer if the inlet pressure is above the maximum permitted level.
- Install a mechanical filter and a shut-off valve upstream of the appliance in an easily accessible point.
- Make sure the water circuit is free of ferrous particles before connecting the filter and the appliance.
- Seal any unused connectors with a plug.
- Once the appliance has been installed, check for gas leaks at the connection points.

CONNECTION TO THE WATER DRAIN

The water drainage system must be made using materials resistant to temperatures of 100 °C. The bottom of the appliance must not be subjected to steam produced by drainage of hot water.

Install a siphoned floor drain with grating below the water drain cock of Boiling pans and in front of Bratt pans.



CONVERSION TO ANOTHER TYPE OF GAS

Table Tabl specifies:

- which gas can be used for the appliance.
- the nozzles and settings for each gas that can be used.
- For nozzles, the number indicated in table TAB1 is also stamped on the body of nozzles.

To convert the appliance to the local gas type, follow the instructions given in TAB1 and carry out the steps below:

- Replace the main burner nozzle (UM).
- Adjust the main burner's air regulator to distance A.
- Replace the pilot burner nozzle (UP).
- Adjust the pilot burner air flow (if necessary).
- Replace the gas valve minimum nozzle (Um).
- Affix the adhesive tab indicating the new type of gas used.
- The nozzles and adhesive tabs are supplied with the appliance.

GAS FRY-TOP WITH TAP

REPLACING THE NOZZLE AND THE MAIN BURNER PRIMARY AIR REGULATION

- Remove the control panel.
- Remove nozzle UM and replace it with the one indicated in table TAB1.
- Retighten nozzle UM.
- Slacken screw V and position the air regulator at distance A as indicated in table TAB1.
- Retighten screw V fully.
- Reassemble all parts. For assembly, proceed in reverse order.

REPLACING THE MINIMUM ADJUSTMENT SCREW

- Remove the control panel.
- Remove nozzle UM and replace it with the one indicated in table TAB1.
- Retighten nozzle UM.
- Reassemble all parts. For assembly, proceed in reverse order.

REPLACING THE PILOT BURNER NOZZLE

- Remove the control panel.
- Undo connector R.
- Remove nozzle UP and replace it with the one indicated in table TAB1.
- Retighten connector R. Reassemble all parts.
- Following, in reverse order, the sequence used for their removal.

GAS GRIDDLE WITH THERMOSTATIC TAP

REPLACING THE NOZZLE AND THE MAIN BURNER PRIMARY AIR REGULATION

- Remove the control panel.
- Remove nozzle UM and replace it with the one indicated in table TAB1.
- Retighten nozzle UM.
- Slacken screw V and position the air regulator at distance A as indicated in table TAB1.
- Retighten screw V fully.
- Reassemble all parts. For assembly, proceed in reverse order.

REPLACING THE PILOT BURNER NOZZLE

- Remove the control panel.
- Undo connector R.
- Remove nozzle UP and replace it with the one indicated in table TAB1.
- Retighten connector R. Reassemble all parts.
- Following, in reverse order, the sequence used for their removal.

COMMISSIONING

Following installation, conversion to a different type of gas or any maintenance operations, check appliance operation. In the event of any malfunction, consult the next Paragraph "Troubleshooting".

GAS APPLIANCES

Switch on the appliance as directed in the instructions and reminders for use given in Chapter "INSTRUCTIONS FOR USE" and check:

- the gas supply pressure (see next Paragraph).
- the correct ignition of the burners and the effectiveness of the fumes removal system.

CHECKING THE GAS SUPPLY PRESSURE

- To measure the gas supply pressure use a manometer with a minimum definition of 0,1 mbar.
- Remove the control panel.
- Remove the screw from on pressure test point PP and connect the manometer to the test point.
- Make the measurement with the appliance in operation.



IMPORTANT! IF THE GAS SUPPLY PRESSURE IS NOT WITHIN THE LIMITS (MIN. – MAX) INDICATED IN TABLE TAB2, CEASE OPERATION OF THE APPLIANCE AND CONTACT THE GAS UTILITY COMPANY.

- Disconnect the manometer and retighten the retaining screw on the pressure connection.

ELECTRIC EQUIPMENT

Switch on the appliance as directed in the instructions and reminders for use given in Chapter "INSTRUCTIONS FOR USE" and check:

- the current values of each phase.

– the correct operation of the heating elements.

INSTRUCTIONS FOR USE

REMINDERS FOR THE USER



READ THIS MANUAL CAREFULLY. IT PROVIDES IMPORTANT INFORMATION FOR SAFE INSTALLATION, USE AND MAINTENANCE OF THE APPLIANCE.



THE MANUFACTURER WILL NOT BE LIABLE FOR ANY DAMAGE OR INJURY RESULTING FROM FAILURE TO OBSERVING THE FOLLOWING RULES.

For after-sales service, contact technical assistance centres authorized by the manufacturer and demand the use of original spare parts.

Have the appliance serviced at least twice a year.

The manufacturer recommends taking out a service contract.

The appliance is designed for professional use and must be operated by trained personnel.

The appliance is to be used for cooking food as specified in the prescriptions for use. Any other use is considered to be improper.

Do not allow the appliance to operate empty for prolonged periods. Only pre-heat the oven just before use.

Do not leave the appliance unattended while in operation.

In the event of an appliance fault or malfunction, shut the gas shut-off valve and/or switch the appliance off at the main switch installed upline.

Clean the appliance following the instructions given in Chapter "INSTRUCTIONS FOR CLEANING"



DO NOT STORE FLAMMABLE MATERIALS IN CLOSE PROXIMITY TO THE APPLIANCE. FIRE HAZARD.

Do not obstruct any air vents or drains present on the appliance.

Do not tamper with appliance components.

Keep this manual in a safe place, known to all users, so that it can be consulted throughout the working life of the appliance.

Installation and appliance maintenance must be carried out by qualified technicians authorized by the manufacturer, in compliance with current safety standards and the instructions in this manual.

Appliance maintenance and conversion to a different type of gas must be carried out by qualified technicians authorized by the manufacturer, in compliance with current safety standards and the instructions in this manual.

USING THE GAS FRY-TOP WITH TAP

The appliance is designed for cooking foods directly on the hotplate (steaks, hamburgers, fish, vegetables, etc.).

The hotplate must not be to heat pans or saucepans.


Empty the grease collection tray several times a day.



EXERCISE GREAT CAUTION WHEN REMOVING THE TRAY. DANGER OF SCALDING FROM HOT OIL.

BURNER IGNITION AND EXTINCTION

The gas tap control knob has the following positions:

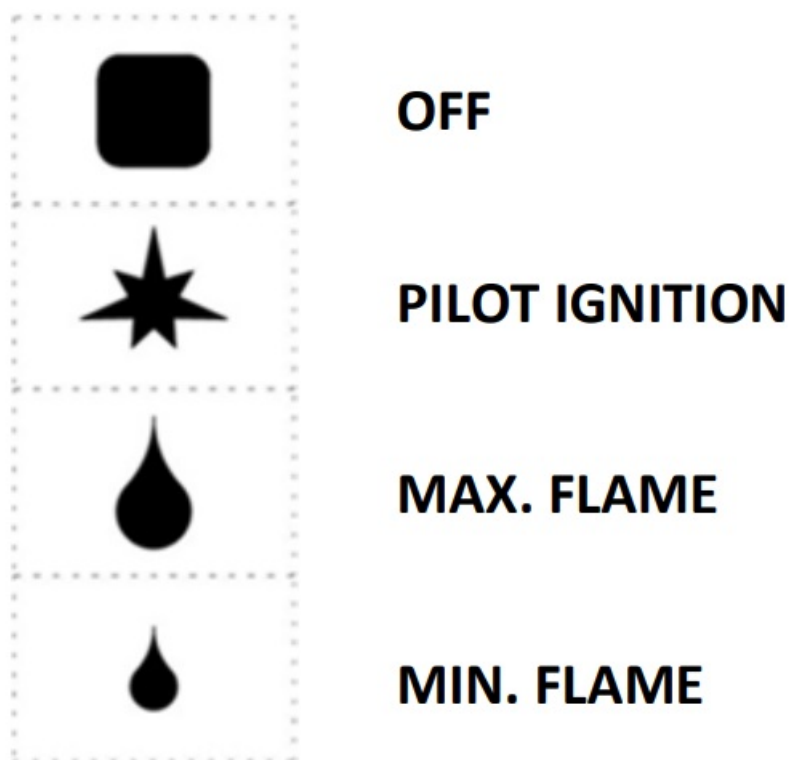

PILOT IGNITION

- Press and turn knob to “pilot on”.
- Press the knob down fully and light the pilot using the piezoelectric igniter.
- Hold the knob down for about 20 seconds before releasing it. If the pilot flame goes out, repeat the operation.
- The pilot flame can be seen through the peep hole, visible when the grease collection tray is removed.
- The pilot burner can be lit with a flame; for access, remove the grease collection tray.

MAIN BURNER IGNITION

- To light the main burner, turn the knob from “pilot on” to “max. flame”.
- Next, depending on cooking requirements, turn the knob to any position between “max. flame ” and “min. flame”.

TURNING OFF

- To switch the main burner off, turn the knob to position “pilot on”
- To switch off the pilot flame, press and turn the knob to position “Off”.

GAS GRIDDLE WITH THERMOSTATIC TAP USE

The appliance is designed for cooking foods directly on the hotplate (steaks, hamburgers, fish, vegetables, etc.). The hotplate must not be used to heat pans or saucepans. Take particular care when using the chromed frytop.

Always clean the cooking surface and remove any food residues immediately after cooking.

While cooking, handle food only with the special scraper for the smooth fry-top or the toothed scraper for the ribbed fry-top.

The appliance is equipped with a manual reset safety thermostat that interrupts heating when the operating temperature exceeds the maximum permitted value.


Empty the grease collection tray several times a day.



EXERCISE GREAT CAUTION WHEN REMOVING THE TRAY. DANGER OF SCALDING FROM HOT OIL.

BURNER IGNITION AND EXTINCTION

the control knob of the thermostatic tap has the following positions use:

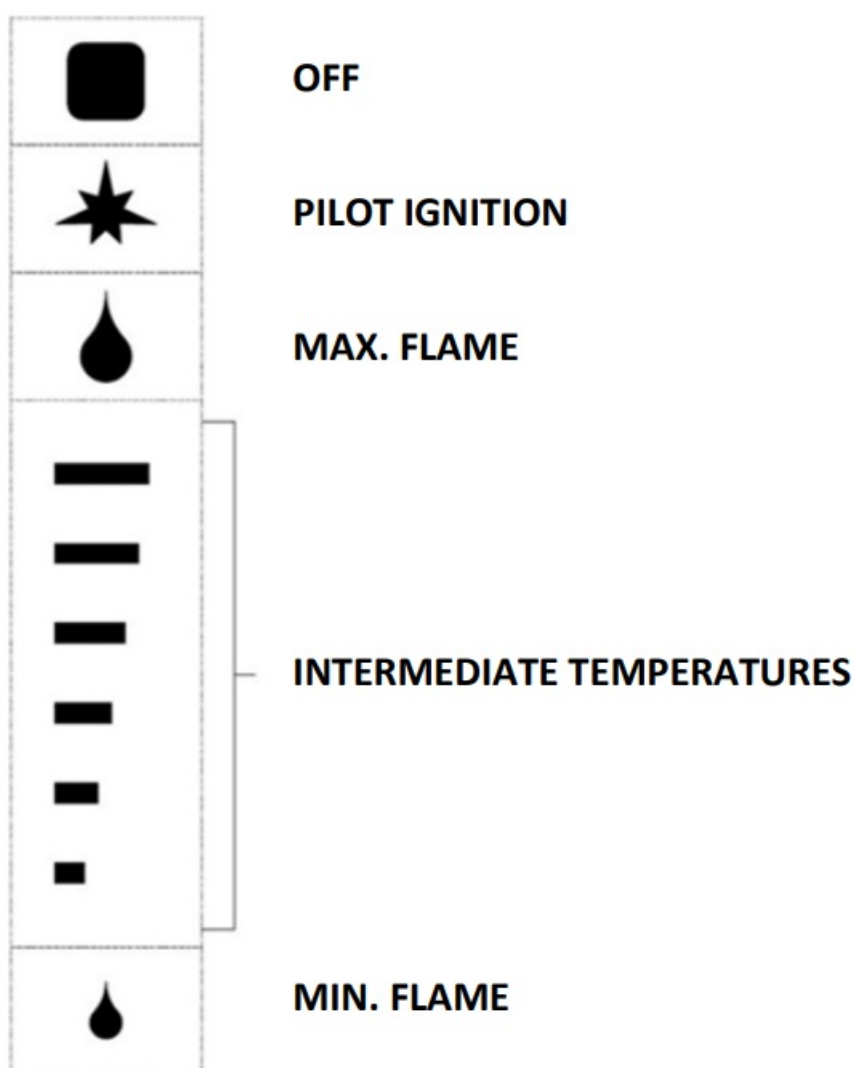

PILOT IGNITION

- Turn the knob to position “pilot on”.
- Press the knob down fully and light the pilot using the piezoelectric igniter.
- Hold the knob down for about 20 seconds before releasing it. If the pilot flame goes out, repeat the operation.
- The pilot flame can be seen through the peep hole, visible when the grease collection tray is removed.

- The pilot burner can be lit with a flame; for access, remove the grease collection tray.

MAIN BURNER IGNITION

- Turn the knob to the chosen temperature setting for cooking.

TURNING OFF

- To switch the main burner off, turn the knob to position “pilot on”.
- To switch off the pilot flame, press and turn the knob to position “Off”

USING THE ELECTRIC FRY-TOP

The appliance is designed for cooking foods directly on the hotplate (steaks, hamburgers, fish, vegetables, etc.). The hotplate must not be to heat pans or saucepans .

Take particular care when using the chromed frytop.

Always clean the cooking surface and remove any food residues immediately after cooking .

While cooking, handle food only with the special scraper for the smooth fry-top or the toothed scraped for the ribbed fry-top.

The appliance is equipped with a manual reset safety thermostat that interrupts heating when the operating temperature exceeds the maximum permitted value.


Empty the grease collection tray several times a day.



EXERCISE GREAT CAUTION WHEN REMOVING THE TRAY. DANGER OF SCALDING FROM HOT OIL.

SWITCHING ON AND OFF

The thermostat control knob has the following positions:

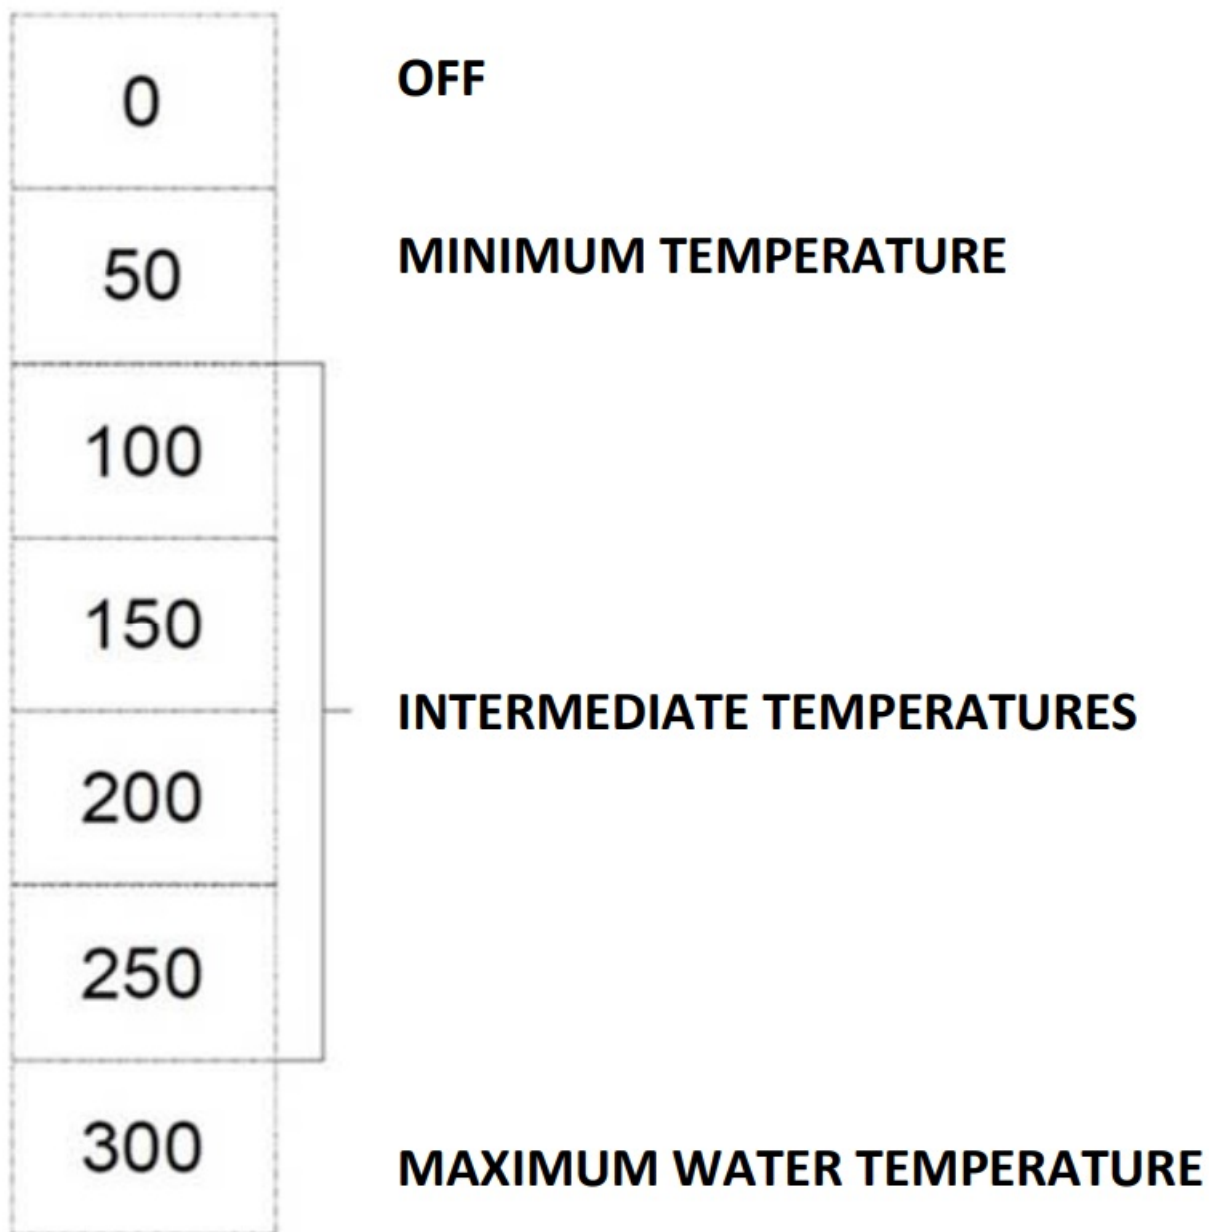

SWITCHING ON

- Turn the thermostat knob to the chosen temperature setting for cooking.
- the yellow and the green indicator lamp turn on.
- The yellow indicator light switches off when the oven reaches the set temperature.

TURNING OFF

- Turn the thermostat knob to position "0".
- the yellow and the green indicator lamp turn off.

PROLONGED DISUSE

Before any prolonged disuse of the appliance, proceed as follows:

- Clean the appliance thoroughly.
- Rub stainless steel surfaces with a cloth soaked in vaseline oil to create a protective film.

- Close cocks or main switches ahead of the appliances.

Following prolonged disuse, proceed as follows:

- Inspect the appliance thoroughly before using it again.
- Allow electric appliances to operate at the lowest temperature for at least 60 minutes.

INSTRUCTIONS FOR CLEANING

REMINDERS FOR CLEANING



READ THIS MANUAL CAREFULLY. IT PROVIDES IMPORTANT INFORMATION FOR SAFE INSTALLATION, USE AND MAINTENANCE OF THE APPLIANCE.



THE MANUFACTURER WILL NOT BE LIABLE FOR ANY DAMAGE OR INJURY RESULTING FROM FAILURE TO OBSERVING THE FOLLOWING RULES.



DISCONNECT THE APPLIANCE ELECTRIC SUPPLY, IF PRESENT, BEFORE CARRYING OUT ANY OPERATION.

- Clean the satin finish stainless steel exterior surfaces, the cooking wells and the surface of the hotplates every day.
- At least twice a year, have an authorized technician clean the internal parts of the appliance.
- Do not use corrosive products to clean the floor beneath the appliance.
- Do not use direct or high pressure water jets to clean the appliance.

SATIN FINISH STAINLESS STEEL SURFACES

- Clean the surfaces with a cloth or sponge using water and proprietary non-abrasive detergents. Follow the direction of the satin finish lines. Rinse repeatedly and dry thoroughly.
- Do not use pan scourers or other iron items.
- Do not use chemical products containing chlorine.
- Do not use sharp objects which might scratch and damage the surfaces.

HOTPLATE IN DUCTILE IRON

- Clean surfaces with a damp cloth.
- Switch on for a few minutes to dry rapidly.
- Lubricate surfaces with a fine coat of food grade oil.
- Do not use pan scourers or abrasive powder detergents.
- Do not use chemical products containing chlorine.
- Do not use sharp objects which might scratch and damage the surfaces.

CHROMED HOTPLATE

- Clean the cooking surface while it is still moderately hot (approx. 80-100 °C). Use a cloth or sponge soaked in water and vinegar. Rinse repeatedly and dry thoroughly.
- Do not use pan scourers or abrasive powder detergents.
- Do not use chemical products containing chlorine.
- Do not use sharp objects which might scratch and damage the surfaces.

COLLECTION TRAYS

- Clean the surface, removing grease, oil, food residue etc ...

INSTRUCTIONS FOR MAINTENANCE

REMINDERS FOR THE MAINTENANCE TECHNICIAN



THE MANUFACTURER WILL NOT BE LIABLE FOR ANY DAMAGE OR INJURY RESULTING FROM FAILURE TO OBSERVING THE FOLLOWING RULES,

Identify the specific appliance model. The model number is detailed on the packing and on the appliance dataplate.

The appliance must be installed in a well-ventilated room.

Do not obstruct any air vents or drains present on the appliance.

Do not tamper with appliance components.

Appliance maintenance and conversion to a different type of gas must be carried out by qualified technicians authorized by the manufacturer, in compliance with current safety standards and the instructions in this manual.

CONVERSION TO ANOTHER TYPE OF GAS

See Chapter "Instructions for installation".

COMMISSIONING

See Chapter "Instructions for installation".

TROUBLESHOOTING

GAS FRY-TOP WITH TAP

Possible causes:

- Insufficient gas supply pressure.
- Blocked tubing or nozzle.
- Defective gas tap or valve.
- Igniter defective or not properly connected.
- Igniter or igniter wire defective.

PILOT BURNER GOES OUT DURING USE.

Possible causes:

- Insufficient gas supply pressure.
- Defective gas tap or valve.
- Defective thermocouple or insufficient heating.
- Thermocouple incorrectly connected to gas tap or valve.

Knob of gas tap or valve not pressed sufficiently.

THE MAIN BURNER DOES NOT LIGHT (EVEN THOUGH PILOT IS LIT).

Possible causes:

- Insufficient gas supply pressure.
- Blocked tubing or nozzle.
- Defective gas tap or valve.
- Defective burner (gas outlet holes clogged).

HEATING CANNOT BE ADJUSTED.

Possible causes:

- Defective gas valve.

GAS GRIDDLE WITH THERMOSTATIC TAP THE PILOT BURNER DOES NOT LIGHT.

Possible causes:

- Insufficient gas supply pressure.
- Blocked tubing or nozzle.
- Defective gas tap or valve.
- Igniter defective or not properly connected.
- Igniter or igniter wire defective.

PILOT BURNER GOES OUT DURING USE.

Possible causes:

- Insufficient gas supply pressure.
- Defective gas tap or valve.
- Defective thermocouple or insufficient heating.
- Thermocouple incorrectly connected to gas tap or valve.

Knob of gas tap or valve not pressed sufficiently.

THE MAIN BURNER DOES NOT LIGHT (EVEN THOUGH PILOT IS LIT).

Possible causes:

- Insufficient gas supply pressure.
- Blocked tubing or nozzle.
- Defective gas tap or valve.
- Defective burner (gas outlet holes clogged).

HEATING CANNOT BE ADJUSTED.

Possible causes:

- Defective gas valve.

ELECTRIC FRY-TOP

THE APPLIANCE DOES NOT HEAT.

Possible causes:

- Temperature thermostat defective.
- Heating elements defective.
- Safety thermostat tripped.

HEATING CANNOT BE ADJUSTED.

Possible causes:

- Temperature thermostat defective.

REPLACING COMPONENTS

REMINDERS FOR REPLACING COMPONENTS



SHUT THE GAS SHUT-OFF VALVE AND/OR SWITCH THE APPLIANCE OFF AT THE MAIN SWITCH INSTALLED UPSTREAM.



AFTER REPLACING A GAS SYSTEM COMPONENT, CHECK FOR GAS LEAKS AT CONNECTION POINTS.



DISCONNECT THE APPLIANCE ELECTRIC SUPPLY, IF PRESENT, BEFORE CARRYING OUT ANY OPERATION.



AFTER REPLACING AN ELECTRICAL SYSTEM COMPONENT, CHECK IT IS CORRECTLY WIRED.

GAS FRY-TOP WITH TAP

REPLACING THE GAS TAP.

- Remove the control panel.
- Remove and replace the component.
- Reassemble all parts. For assembly, proceed in reverse order.

REPLACING THE BURNER, THE PILOT BURNER, THE THERMOCOUPLE, THE PIEZOELECTRIC IGNITION AND THE IGNITER

- Remove the control panel.
- Remove and replace the component.
- Reassemble all parts. For assembly, proceed in reverse order.

GAS GRIDDLE WITH THERMOSTATIC TAP

THERMOSTATIC TAP SUBSTITUTION

- Remove the control panel.
- Remove the bulb from its seat on the bottom of the hotplate.
- Remove and replace the component.
- Insert the bulb properly in its seat on the bottom of the hotplate.
- Reassemble all parts. For assembly, proceed in reverse order.

REPLACING THE BURNER, THE PILOT BURNER, THE THERMOCOUPLE, THE PIEZOELECTRIC IGNITION AND THE IGNITER

- Remove the control panel.
- Remove and replace the component.
- Reassemble all parts. For assembly, proceed in reverse order.

ELECTRIC FRY-TOP

REPLACING THE HEATING AND LIGHT GLOWS.

- Remove the control panel.
- Remove and replace the component.
- Reassemble all parts. For assembly, proceed in reverse order.

REPLACING THE WORKING THERMOSTAT AND SAFETY THERMOSTAT

- Remove the control panel.
- Remove the bulb from its seat on the bottom of the hotplate.
- Remove and replace the component.
- Insert the bulb properly in its seat on the bottom of the hotplate.
- Reassemble all parts. For assembly, proceed in reverse order.

CLEANING THE INTERIOR

Check the condition of the inside of the appliance.

Remove any built-up dirt.

Check and clean the fumes exhaust system.

MAIN COMPONENTS

GAS FRY-TOP WITH TAP

- GAS COCK
- MAIN BURNER
- Pilot burner
- Thermocouple
- Igniter
- Piezoelectric ignition

GAS GRIDDLE WITH THERMOSTATIC TAP


- Thermostatic tap
- MAIN BURNER
- Pilot burner
- Thermocouple
- Piezoelectric ignition
- Igniter


ELECTRIC FRY-TOP






- Working thermostat
- Safety thermostat


- Heating element
- Indicator light

INSTALLATION DIAGRAM

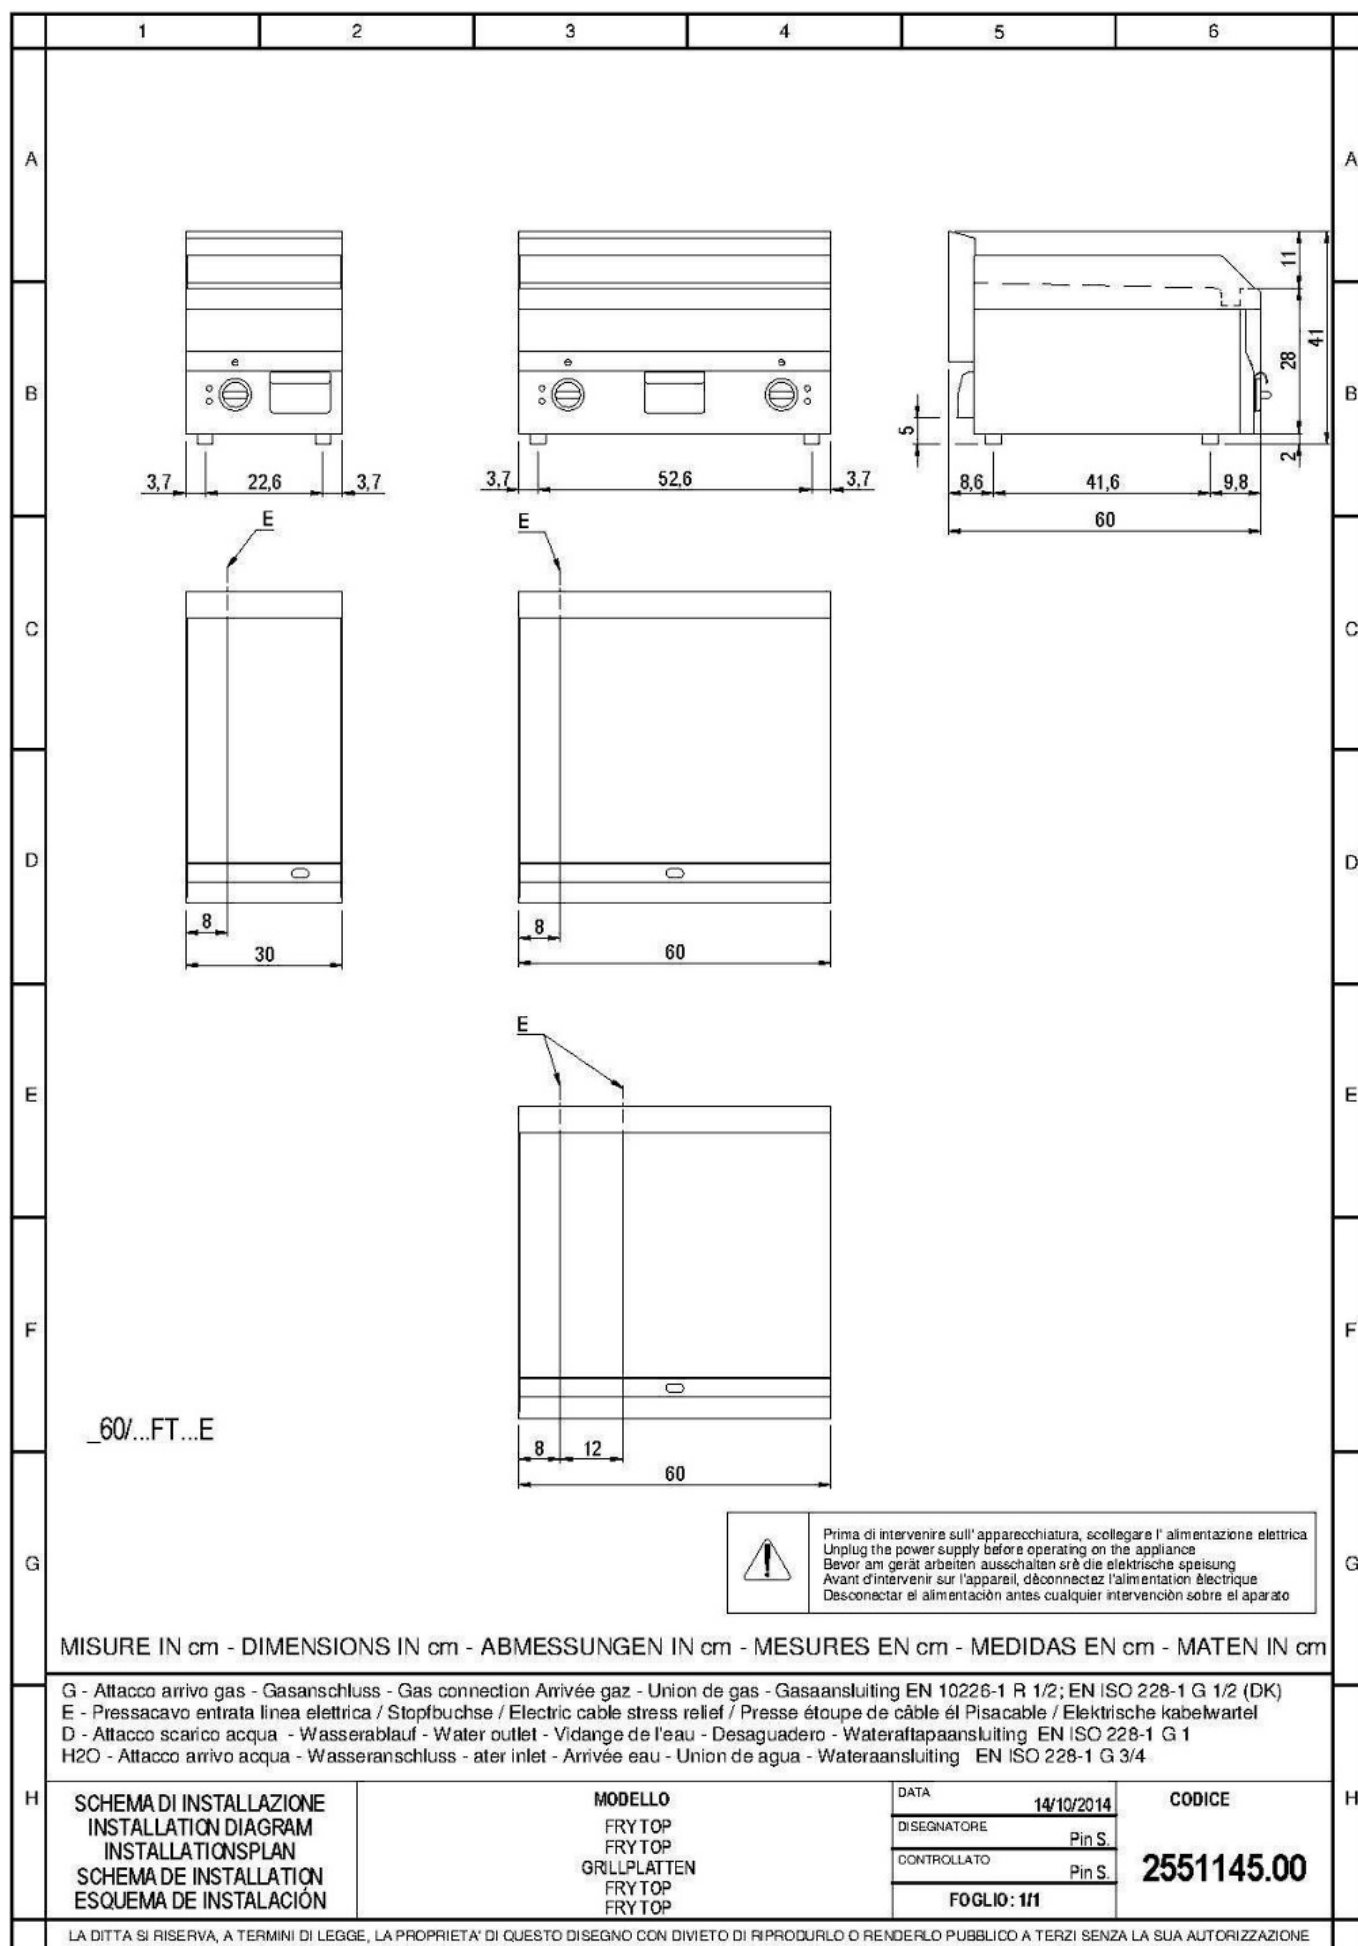



	1	2	3	4	5	6	
A							A
B							B
C							C
D							D
E							E
F							F
G	<p>65/...FT...E 65/...FT...ES</p> <div><p>Prima di intervenire sull'apparecchiatura, scollegare l'alimentazione elettrica Unplug the power supply before operating on the appliance Bevor am gerät arbeiten ausschalten sr die elektrische speisung Avant d'intervenir sur l'appareil, déconnectez l'alimentation électrique Desconectar el alimentación antes cualquier intervención sobre el aparato</p></div>						G
MISURE IN cm - DIMENSIONS IN cm - ABMESSUNGEN IN cm - MESURES EN cm - MEDIDAS EN cm - MATEN IN cm							
G - Attacco arrivo gas - Gasanschluss - Gas connection Arrivée gaz - Union de gas - Gasaansluiting EN 10226-1 R 1/2; EN ISO 228-1 G 1/2 (DK) E - Pressacavo entrata linea elettrica / Stopfbuchse / Electric cable stress relief / Presse étoupe de câble él Pisacable / Elektrische kabelwartel D - Attacco scarico acqua - Wasserablauf - Water outlet - Vidange de l'eau - Desaguadero - Wateraftapaansluiting EN ISO 228-1 G 1 H2O - Attacco arrivo acqua - Wasseranschluss - ater inlet - Arrivée eau - Union de agua - Wateraansluiting EN ISO 228-1 G 3/4							
H	SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN		MODELLO FRY TOP FRY TOP GRILLPLATTEN FRY TOP FRY TOP		DATA 14/10/2014 DISEGNATORE Pin S. CONTROLLATO Pin S. FOGLIO: 1/1	CODICE 2551147.00	H
LA DITTA SI RISERVA, A TERMINI DI LEGGE, LA PROPRIETÀ DI QUESTO DISEGNO CON DIVIETO DI RIPRODURLO O RENDERLO PUBBLICO A TERZI SENZA LA SUA AUTORIZZAZIONE							

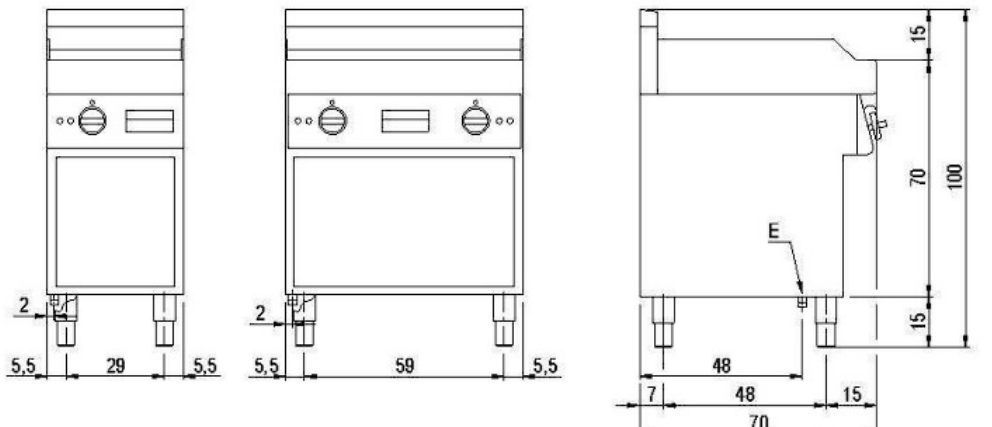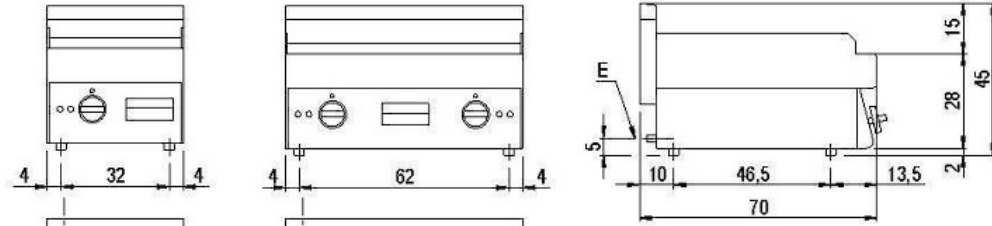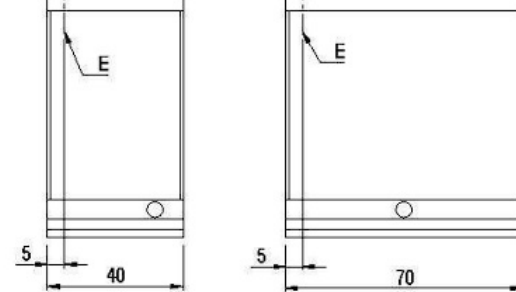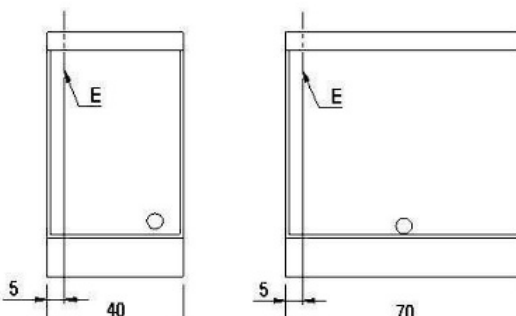	1	2	3	4	5	6											
A						A											
B						B											
C						C											
D						D											
E						E											
F						F											
G	<div><p>Prima di intervenire sull'apparecchiatura, scollegare l'alimentazione elettrica Unplug the power supply before operating on the appliance Bevor am Gerät arbeiten ausschalten sr die elektrische speisung Avant d'intervenir sur l'appareil, déconnectez l'alimentation électrique Desconectar el alimentación antes cualquier intervención sobre el aparato</p></div> <p>MISURE IN cm - DIMENSIONS IN cm - ABMESSUNGEN IN cm - MESURES EN cm - MEDIDAS EN cm - MATEN IN cm</p> <p>G - Attacco arrivo gas - Gasanschluss - Gas connection Arrivée gaz - Union de gas - Gasaansluiting EN 10226-1 R 1/2; EN ISO 228-1 G 1/2 (DK) E - Pressacavo entrata linea elettrica / Stopfbuchse / Electric cable stress relief / Presse étoupe de câble él Pisacable / Elektrische kabelwartel D - Attacco scarico acqua - Wasserablauf - Water outlet - Vidange de l'eau - Desaguadero - Wateraftapaansluiting EN ISO 228-1 G 1 H2O - Attacco arrivo acqua - Wasseranschluss - ater inlet - Arrivée eau - Union de agua - Wateraansluiting EN ISO 228-1 G 3/4</p>					G											
H	<table><tr><td rowspan="4">SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN</td><td rowspan="4">MODELLO FRY TOP FRY TOP GRILLPLATTEN FRY TOP FRY TOP</td><td>DATA</td><td>14/10/2014</td><td rowspan="4">CODICE 2551149.00</td></tr><tr><td>DISEGNATORE</td><td>Pin S.</td></tr><tr><td>CONTROLLATO</td><td>Pin S.</td></tr><tr><td colspan="2">FOGLIO: 1/1</td></tr></table> <p>LA DITTA SI RISERVA, A TERMINI DI LEGGE, LA PROPRIETA' DI QUESTO DISEGNO CON DIVIETO DI RIPRODURLO O RENDERLO PUBBLICO A TERZI SENZA LA SUA AUTORIZZAZIONE</p>					SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN	MODELLO FRY TOP FRY TOP GRILLPLATTEN FRY TOP FRY TOP	DATA	14/10/2014	CODICE 2551149.00	DISEGNATORE	Pin S.	CONTROLLATO	Pin S.	FOGLIO: 1/1		H
SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN	MODELLO FRY TOP FRY TOP GRILLPLATTEN FRY TOP FRY TOP	DATA	14/10/2014	CODICE 2551149.00													
		DISEGNATORE	Pin S.														
		CONTROLLATO	Pin S.														
		FOGLIO: 1/1															

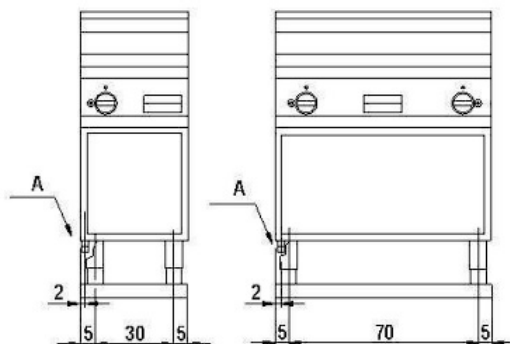

Mod. 90/40 FTG
90/40 FTG-CR

Mod. 90/80 FTG
90/80 FTG-CR

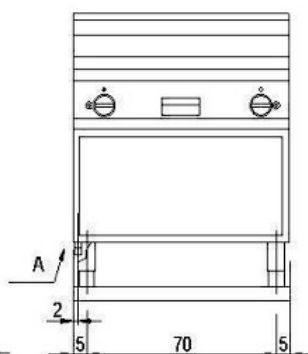
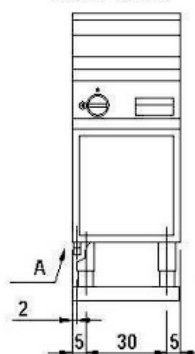


Mod. 90/40 FTRG
90/40 FTRG-CR

Mod. 90/80 FTRG
90/80 FTRG
90/80 FTRG-CR
90/80 FTRG-CR

R-1/2
R-1/2
R-1/2
R-1/2
R-1/2
R-1/2 ISO 228-1

A= ATTACCO GAS
ARRIVÉE GAZ
GAS INLET
CONEXION GAS
GASANSCHLUSS
POUR FRANCE-DENEMARK
ARRIVÉE GAZ

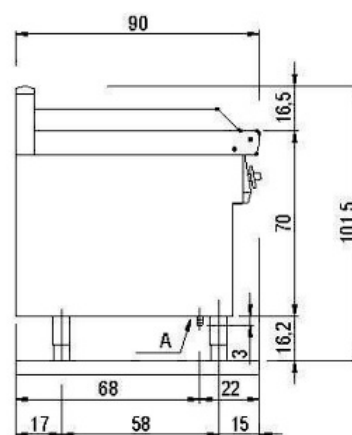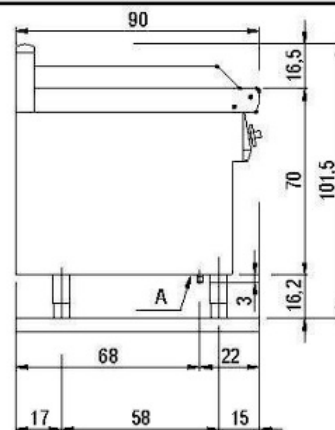

APPARECCHIO TIPO A:
I SUDETTI PRODOTTI SONO STATI APPROVATI PER:

AT 2H38P	BE 2E+3+	DE 2EL38P
DK 2H38P	ES 2H3+	FI 2H38P
FR 2E+3+	GB 2H3+	GR 3+
IE 2H3+	IT 2H3+	LU 2E38P
NL 2L38P	NO 38P	PT 2H3+
SE 2H38P	CH 2H38P	
	CH 2H3+	

SCHEMA DI INSTALLAZIONE
SCHEMA DE INSTALLATION
INSTALLATION DIAGRAM
INSTALLATIONSPLAN
ESQUEMA DE INSTALACIÓN

MODELLO
FRY-TOP_PLAQUE GILLADE
GRIDDLE_BRADPLATTE
FRY-TOP

data: 31/05/2007
nome: D. Duso
ultima mod.: /
FOGLIO: 1/1




CODICE

255.109.01


Mod. 90/40 FTE
90/40 FTE-CR
kW 6,6




Mod. 90/80 FTE
90/80 FTE-CR
kW 13,2

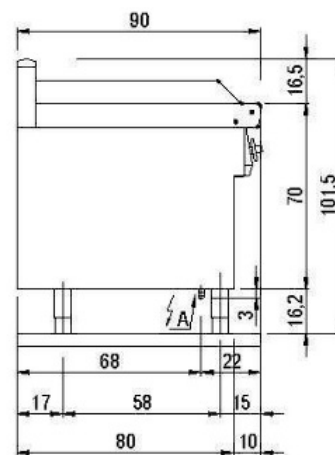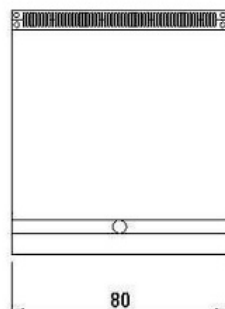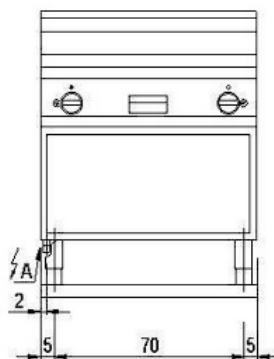


Mod. 90/40 FTRRE
90/40 FTRRE-CR
kW 6,6

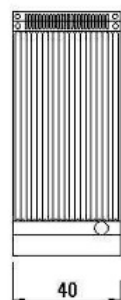

Mod. 90/80 FTRRE
90/80 FTRRE-CR
kW 13,2

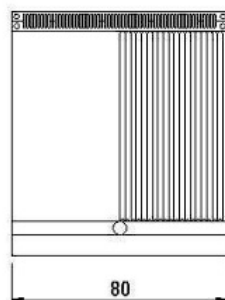

Mod. 90/80 FTRRE
90/80 FTRRE-CR
kW 13,2

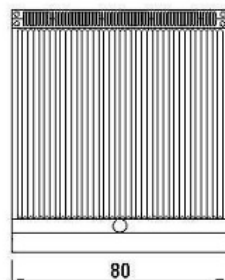

⚡A= ENTRATA ALIMENTAZIONE ELETTRICA
 ARRIVÉE ALIMENTATION ELECTRIQUE
 ELEKTROANSCHLUSS
 ELECTRIC SUPPLY INLET

} VAC 400+3N








SCHEMA DI INSTALLAZIONE
 SCHEMA DE INSTALLATION
 INSTALLATION DIAGRAM
 INSTALLATIONSPLAN
 ESQUEMA DE INSTALACIÓN








MODELLO
 FRY-TOP_PLAQUE GILLADE
 GRIDDLE_BRADPLATTE
 FRY-TOP





data: 06/06/2007
 nome: D. Duso
 ultima mod.: /
FOGLIO: 1/1

CODICE

255.211.01

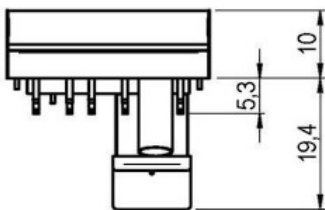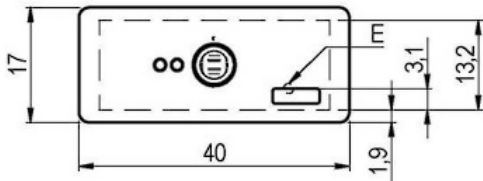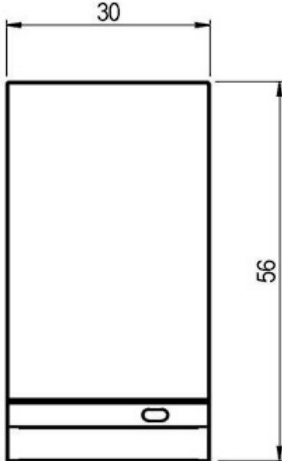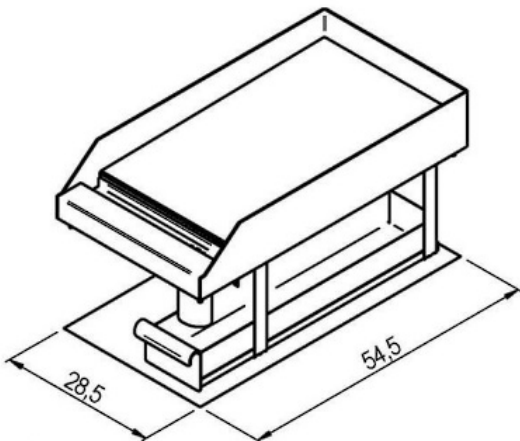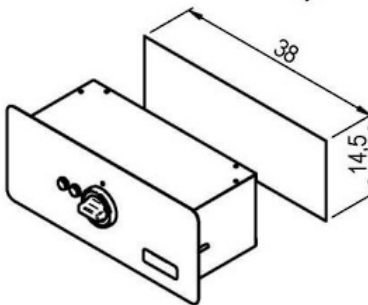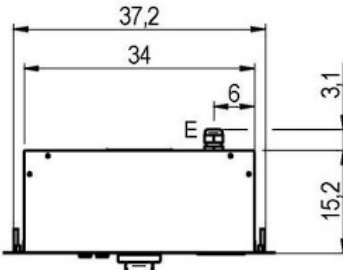	1	2	3	4	5	6												
A							A											
B							B											
C							C											
D							D											
E							E											
F							F											
G	<div><p>60/30 FTE-D 60/30 FTRE-D 60/30 FTE-CR-D</p><div><p>Prima di intervenire sull'apparecchiatura, scollegare l'alimentazione elettrica Unplug the power supply before operating on the appliance Bevor am gerät arbeiten ausschalten sré die elektrische speisung Avant d'intervenir sur l'appareil, déconnectez l'alimentation électrique Desconectar el alimentación antes cualquier intervención sobre el aparato</p></div><p>MISURE IN cm - DIMENSIONS IN cm - ABMESSUNGEN IN cm - MESURES EN cm - MEDIDAS EN cm - MATEN IN cm</p><p>G - Attacco arrivo gas - Gasanschluss - Gas connection Arrivée gaz - Union de gas - Gasaansluiting EN 10226-1 R 1/2; EN ISO 228-1 G 1/2 (DK) E - Pressacavo entrata linea elettrica / Stopfbuchse / Electric cable stress relief / Presse étoupe de câble él Pisacable / Elektrische kabelwartel D - Attacco scarico acqua - Wasserablauf - Water outlet - Vidange de l'eau - Desaguadero - Wateraftapaansluiting EN ISO 228-1 G 1 H2O - Attacco arrivo acqua - Wasseranschluss - ater inlet - Arrivée eau - Union de agua - Wateraansluiting EN ISO 228-1 G 3/4</p></div>						G											
H	<table><tr><td rowspan="4">SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN</td><td rowspan="4">MODELLO FRY TOP DROP IN FRY TOP DROP IN GRILLPLATTEN DROP IN FRY TOP DROP IN FRY TOP DROP IN</td><td>DATA</td><td>18/12/2014</td><td rowspan="4">CODICE 2551086.00</td></tr><tr><td>DISEGNATORE</td><td>Possamai F.</td></tr><tr><td>CONTROLLATO</td><td>Possamai F.</td></tr><tr><td colspan="2">FOGLIO: 1/1</td></tr></table> <p>LA DITTA SI RISERVA, A TERMINI DI LEGGE, LA PROPRIETÀ DI QUESTO DISEGNO CON DIVIETO DI RIPRODURLO O RENDERLO PUBBLICO A TERZI SENZA LA SUA AUTORIZZAZIONE</p>						SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN	MODELLO FRY TOP DROP IN FRY TOP DROP IN GRILLPLATTEN DROP IN FRY TOP DROP IN FRY TOP DROP IN	DATA	18/12/2014	CODICE 2551086.00	DISEGNATORE	Possamai F.	CONTROLLATO	Possamai F.	FOGLIO: 1/1		H
SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN	MODELLO FRY TOP DROP IN FRY TOP DROP IN GRILLPLATTEN DROP IN FRY TOP DROP IN FRY TOP DROP IN	DATA	18/12/2014	CODICE 2551086.00														
		DISEGNATORE	Possamai F.															
		CONTROLLATO	Possamai F.															
		FOGLIO: 1/1																

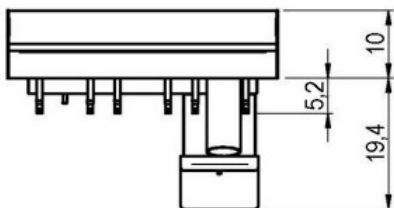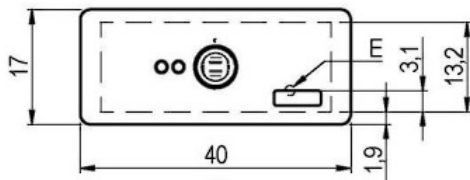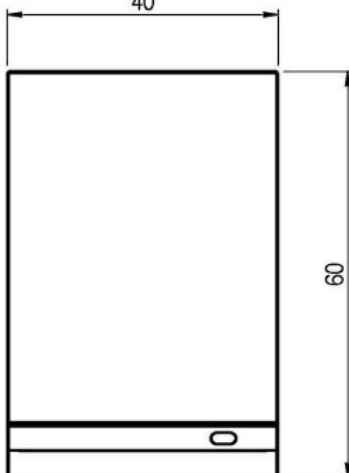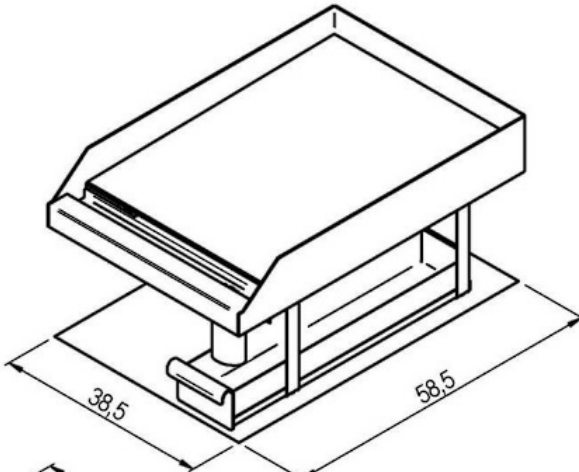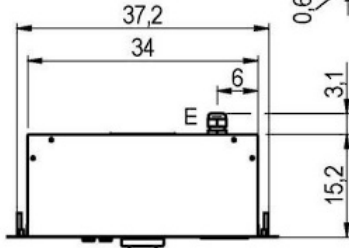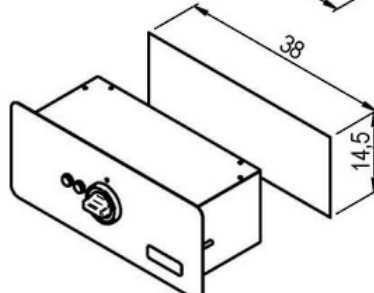	1	2	3	4	5	6	
A							A
B							B
C							C
D							D
E							E
F							F
G	<div><p>65/40 FTE-D 65/40 FTRE-D 65/40 FTE-CR-D</p><div><p>Prima di intervenire sull'apparecchiatura, scollegare l'alimentazione elettrica Unplug the power supply before operating on the appliance Bevor am gerät arbeiten ausschalten sré die elektrische speisung Avant d'intervenir sur l'appareil, déconnectez l'alimentation électrique Desconectar el alimentación antes cualquier intervención sobre el aparato</p></div><p>MISURE IN cm - DIMENSIONS IN cm - ABMESSUNGEN IN cm - MESURES EN cm - MEDIDAS EN cm - MATEN IN cm</p><p>G - Attacco arrivo gas - Gasanschluss - Gas connection Arrivée gaz - Union de gas - Gasaansluiting EN 10226-1 R 1/2; EN ISO 228-1 G 1/2 (DK) E - Pressacavo entrata linea elettrica / Stopfbuchse / Electric cable stress relief / Presse étoupe de câble él Pisacable / Elektrische kabelwartel D - Attacco scarico acqua - Wasserablauf - Water outlet - Vidange de l'eau - Desaguadero - Wateraftapaansluiting EN ISO 228-1 G 1 H2O - Attacco arrivo acqua - Wasseranschluss - ater inlet - Arrivée eau - Union de agua - Wateraansluiting EN ISO 228-1 G 3/4</p></div>						G
H	<p>SCHEMA DI INSTALLAZIONE INSTALLATION DIAGRAM INSTALLATIONSPLAN SCHEMA DE INSTALLATION ESQUEMA DE INSTALACIÓN</p>		<p>MODELLO FRY TOP DROP IN FRY TOP DROP IN GRILLPLATTEN DROP IN FRY TOP DROP IN FRY TOP DROP IN</p>		<p>DATA 18/12/2014 DISEGNATORE Possamai F. CONTROLLATO Possamai F. FOGLIO: 1/1</p>	<p>CODICE 2551088.00</p>	H
<p>LA DITTA SI RISERVA, A TERMINI DI LEGGE, LA PROPRIETÀ DI QUESTO DISEGNO CON DIVIETO DI RIPRODURLO O RENDERLO PUBBLICO A TERZI SENZA LA SUA AUTORIZZAZIONE</p>							

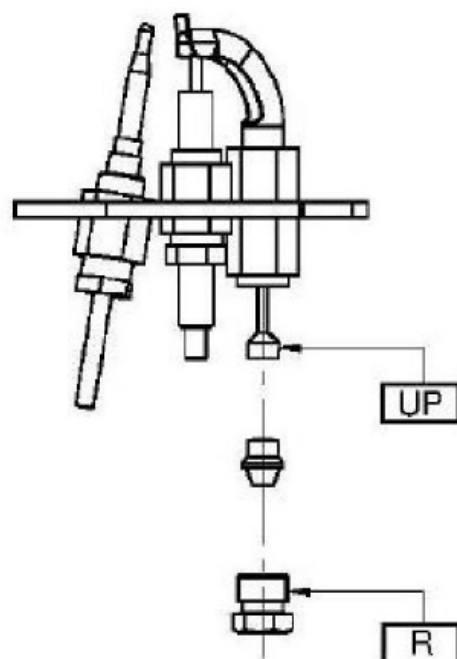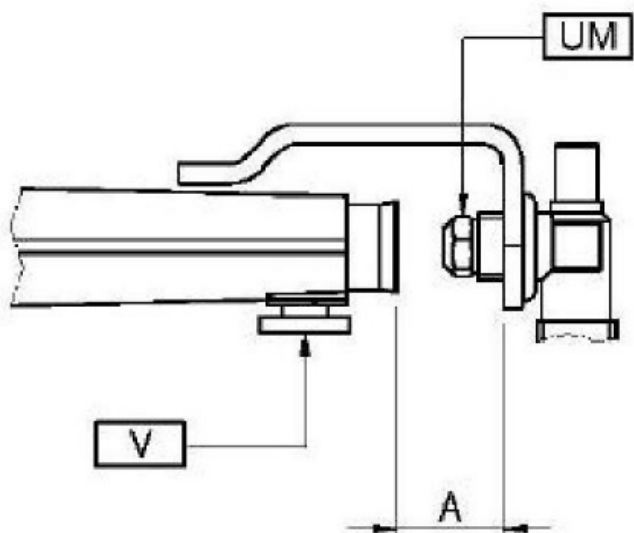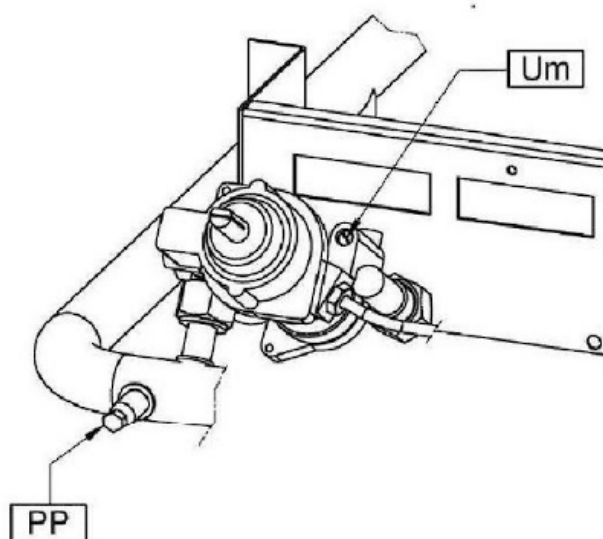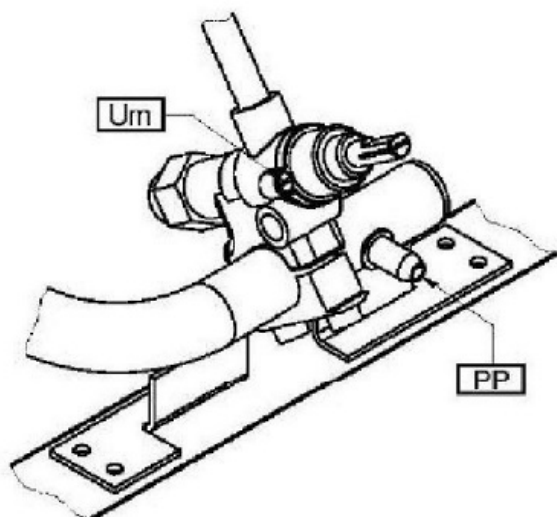

TECHNICAL DATA

Nozzles and Settings

TAB1					
Gas Gaz	Pa (mbar)	UM UP A	60/30 FT..G	65/40 – 70/40 FT..G	90/40 FT..G
			60/60 FT..G	65/70 – 70/70 FT..G	90/80 FT..G
G20 G20 /G25	20 20/25	UM	165	185	200L
		UP	36	36	36
		A (mm)	25	25	0,5
		Um	REG	REG	REG
G25	20	UM	185	200	215L
		UP	36	36	36
		A (mm)	25	25	0,5
		Um	REG	REG	REG
G25	25	UM	175	185	200L
		UP	36	36	36
		A (mm)	25	25	0,5

		Um	REG	REG	REG
G20	25	UM			
		UP			
		A (mm)			
		Um			
G25.1	25	UM			
		UP			
		A (mm)			
		Um			
G30/G31	28-30/37 28-30	UM	120	120	135L
		UP	19	19	19
		A (mm)	12	12	–
		Um	70	70	100
		UM			
		UP			

G30/G31	37	A (mm)			
		Um			
G30/G31	50	UM	105	110	120L
		UP	19	36	19
		A (mm)	12	10	—
		Um	70	70	100
G110	8	UM			
		UP			
		A (mm)			
		Um			
G120	8	UM			
		UP			
		A (mm)			
		Um			
Pa :Supply pressure					

UM :MAX nozzle
Um : MIN nozzle
UP : Pilot
A :Aerator Opening
REG : Regulated

Categories and pressures

Paese Land Country Pays Pais	Category	Gas-Gaz	Supply pressure		
			Normal	Min.	Max
LU-PL	12E	G20	20	17	25
NO	12H	G20	20	17	25
NL	12L	G25	25	20	30
LU	13+	G30/G31	28-30/37	20/25	35/45
NO-NL-CY-MT	13B/P	G30/G31	28-30	25	35
PL	13B/P	G30/G31	37	25	45
BE-FR	112E+3+	G20/G31	20/25	17	25/30
		G30/G31	28-30/37	20/25	35/45
		G20	20	17	25

DE	112ELL3B/P	G25	20	18	25
		G30/G3 1	50	42.5	57.5
ES-GB-GR-1E-1T-PT-SK	112H3+	G20	20	17	25
		G30/G3 1	28-30/37	20/25	35/45
F1-BG-EE-LV-LT-CZ-S1-TR-HR-RO	112H3B/P	G20	20	17	25
		G30/G3 1	28-30	25	35
AT-CH	112H3B/P	G20	20	17	25
		G30/G3 1	50	42.5	57.5
HU	112HS3B/P	G20	25	18	33
		G25.1	25	18	33
		G30/G3 1	28-30	25	35
HU	112HS3B/P	G20	25	18	33
		G25.1	25	18	33
		G30/G3 1	50	42.5	57.5
SE	1111ab2H3B /P	G20	20	17	25
		G30/G3 1	28-30	25	35
		G110	8	6	15
		G120	8	6	15

DK	1111a2H3B/ P	G20	20	17	25
		G30/G3 1	28-30	25	35
		G110	8	6	15
1T-CH	111a2H	G20	20	17	25
		G110	8	6	15

Technical data of gas appliances

TAB.3												
Models	Width	IQn	Total gas consumption									
			G20 (20)	G25 (25)	G25 (20)	G20 (25)	G25. 1 (25)	G11 0 (8)	G12 0 (8)	G30 (29)	G30 (37)	G30 (50)
	mm	kW	m3/ h	m3/ h	m3/ h	m3/ h	m3/ h	m3/h	m3/h	Kg/h	Kg/h	Kg/h
_60/30 FT.G.	300	5.2	0.55	0.64	0.64	0.55	0.63 9			0.41	0.41	0.41
_60/60 FT.G.	600	10.4	1.10 1	1.28	1.28	1.10 1	1.27 8			0.82	0.82	0.82
_60/30 FT.G.CR	300	5.2	0.55	0.64	0.64	0.55	0.63 9			0.41	0.41	0.41
_60/60 FT.G.CR	600	10.4	1.10 1	1.28	1.28	1.10 1	1.27 8			0.82	0.82	0.82
_65/40 FT.G.	400	5.7	0.60 3	0.70 2	0.70 2	0.60 3	0.7			0.45	0.45	0.45
_65/70 FT.G.	700	11.4	1.20 6	1.40 3	1.40 3	1.20 6	1.40 1			0.89 9	0.89 9	0.89 9
_65/40 FT.G.CR	400	5.7	0.60 3	0.70 2	0.70 2	0.60 3	0.7			0.45	0.45	0.45

_65/70 FT.G.CR	700	11.4	1.20 6	1.40 3	1.40 3	1.20 6	1.40 1			0.89 9	0.89 9	0.89 9
_70/40 FT.G.	400	5.7	0.60	0.70	0.70	0.60	0.70			0.45	0.45	0.45
_70/70 FT.G.	700	11.4	1.21	1.40	1.40	1.21	1.40			0.90	0.90	0.90
_70/40 FT.G.CR.	400	5.7	0.60	0.70	0.70	0.60	0.70			0.45	0.45	0.45
_70/70 FT.G.CR.	700	11.4	1.21	1.40	1.40	1.21	1.40			0.90	0.90	0.90
_90/40 FT.G.	400	6.9	0.73	0.85	0.85	0.73	0.85			0.54	0.54	0.54
_90/80 FT.G.	800	13.8	1.46	1.70	1.70	1.46	1.70			1.09	1.09	1.09
_90/40 FT.G.CR.	400	6.9	0.73	0.85	0.85	0.73	0.85			0.54	0.54	0.54
_90/80 FT.G.CR.	800	13.8	1.46	1.70	1.70	1.46	1.70			1.09	1.09	1.09

Technical data of electric appliances

TAB.4						
Models	Width	Power supply voltage	Phases	Frequen cy	Max. total pow er	Power supply cable section
	mm	V	N.	Hz	kW	
_60/30 FT...E...	300	380-415	3N	50-60	3	5G1
		220-240	1N	50-60	3	3G1.5
		380-415	3N	50-60	6	5G1.5

_60/60 FT...E.	600	220-240	1N	50-60	6	3G4
_60/30 FT...E.- D	300	380-415	3N	50-60	3	5G1
_60/60 FT...E.- D	600	380-415	3N	50-60	6	5G1.5
_65/40 FT.E.	400	380-415	3N	50-60	4.5	5G1
_65/70 FT.E.	700	380-415	3N	50-60	9	5G1.5
_65/40 FT.E.-D	400	380-415	3N	50-60	4.5	5G1
		220-240	3	50-60	4.5	4G1.5
_65/70 FT.E.-D	700	380-415	3N	50-60	9	5G1.5
		220-240	3	50-60	9	4G2.5
_70/40 FT.E...	400	380-415	3N	50-60	5.40	5G1
_70/80 FT...E...	800	380-415	3N	50-60	10.80	5G1.5

_90/40 FT...E.	400	380-415	3N	50-60	7.50	5G1.5
_90/80 FT...E.	800	380-415	3N	50-60	15.00	5G2.5



Documents / Resources



The thumbnail shows the cover of the instruction manual for the modular Cooking Range Line FRY TOP. It includes the modular logo, a table of contents, and technical specifications.

[modular Cooking Range Line FRY TOP](#) [pdf] Instruction Manual
Cooking Range Line FRY TOP, Cooking Range Line, FRY TOP