

moebelix Magic-Klick Instruction Manual

Home » MOEBELIX » moebelix Magic-Klick Instruction Manual

Pollen-Fensternetz Magic-Klick 03322



Contents

- 1 Operating Instructions
- **2 Information About the Operating Instructions**
- 3 SYMBOLS
- **4 SIGNAL WORDS**
- **5 INTENDED USE**
- **6 SAFETY NOTICES**
- **7 ITEMS SUPPLIED**
- **8 CLEANING AND STORAGE**
- 9 DISPOSAL
- **10 PRODUCT DATA**
- 11 TRIMMING AND ATTACHING THE ANTI-POLLEN WINDOW

MESH

- 12 Documents / Resources
- 13 Related Posts

Operating Instructions

Dear Customer.

We are delighted that you have chosen our anti-pollen window mesh, Magic Klick.

Do you perhaps already have our mosquito net Magic Klick (Art. No. 03771) for the same window? Then you can swap these two nets quickly and easily because they are attached in exactly the same way. Simply remove the old net from the magnets and click on the new one – that's it!

If you have any questions, contact the customer service department via our website: www.dspro.de/kundenservice

Information About the Operating Instructions

Before using the product for the first time, please read through these operating instructions carefully and keep them for future reference and other users. They form an integral part of the product. The manufacturer and importer do not accept any liability if the information in these operating instructions is not complied with.

SYMBOLS

Danger symbol: This symbol indicates possible dangers. Read the associated safety notices carefully and follow them.





SIGNAL WORDS

Signal words indicate hazards if the associated notices are not followed.

WARNING – medium risk, may result in serious injury or death

INTENDED USE

- The product is suitable for use as pollen and insect protection. It is attached to windows with a maximum size
 of 150 x 130 cm.
- The product is not suitable for attaching to doors.
- The product is for personal use only and is not intended for commercial applications.
- Use the product only for the specified purpose and as described in the operating instructions. Any other use is deemed to be improper.
- The warranty does not cover faults caused by incorrect handling, damage, or attempted repairs. The same applies to normal wear and tear.

SAFETY NOTICES



- Keep children and animals away from the packaging material. There is a danger of suffocation.
- Pregnant women and people with a pacemaker or electronic implant should only set up and use the product
 after consulting their doctor owing to the magnets.
- The product is not a toy! Children must be supervised to ensure that they do not play with the product.

NOTICE - Risk of Damage to Material and Property

- Magnetism can impair or damage the functions of electronic devices, data storage media, and watches as well
 as credit cards and other similar items. Keep them away from the magnets.
- Keep the product away from heat sources, naked fl games as well as sharp and pointed objects.
- Check the product for any damage on a regular basis. The pollen and insect protection are compromised if the product is damaged.
- Do not use any corrosive or abrasive cleaning agents to clean the product. These may cause damage to the
 product.

ITEMS SUPPLIED

1 x anti-pollen window mesh 130 x 150 cm

12 x small metal plates with adhesive back (3)


12 x magnet holder with studs (2)

12 x locking piece (1)

1 x operating instructions

Check the items supplied for completeness and the components for transport damage. If you fi and any damage, do not use the product but contact our customer service department.

Magnet holder

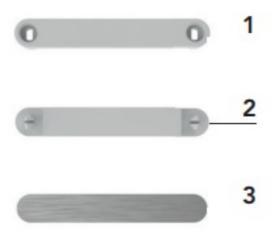

CLEANING AND STORAGE

- If necessary, wipe the anti-pollen window mesh with a damp cloth and mild cleaning agent if required.
- Store the product in a dry place out of the reach of children and animals when it is not being used.

DISPOSAL



Dispose of the packaging material in an environmentally friendly manner so that it can be recycled.


PRODUCT DATA

Article number: 03322

The ID of operating instructions: Z 03322 M DS V2 0221 uh

All rights reserved.

TRIMMING AND ATTACHING THE ANTI-POLLEN WINDOW MESH

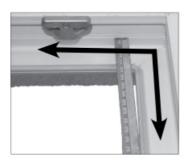

- 1. Measure out the inside dimension of the frame (!) of the window on which the anti-pollen window mesh is to be attached.
- 2. Trim the anti-pollen window mesh to fit the inside dimension of the frame.



3. Attach the small metal plates (3) inside the window frame: To do this, stick 2 small metal plates in each of the corners of the frame. In the case of large windows, also stick 1 small metal plate in the middle of the frame.



4. Place the magnet holders (2) with the magnets on the small metal plates fixed in the window frame. Start fi rmly attaching the anti-pollen window mesh to the top corners of the frame. It should fi t inside the frame. Make sure that the anti-pollen window mesh fi ts on all magnet holders, is taut and does not have any creases.



- 5. Hold the anti-pollen window mesh against a magnet holder and press the studs through the stitches of the net.
- 6. Repeat this process for all magnet holders.



7. Place the locking pieces (1) on the magnet holders and press them on firmly. You must hear them engage. Make sure that the anti-pollen window mesh does not lose its shape.

The anti-pollen window mesh can be retightened a little by moving the magnet holders on the small metal plates slightly.

The anti-pollen window mesh can now simply be taken off using the magnets and inserted back inside the window frame.

 
Klantenservice DS Produkte GmbH, Am Heisterbusch 1, 19258 Gallin Germany © +49 38851 314650 *

* Anruf in das deutsche Festnetz zum Tarif deines Anbieters. Calls to German landlines are subject to your provider's charges. Prix d'un appel vers le réseau fi xe allemand au tarif de votre fournisseur. Bellen naar het Duitse vaste netwerk tegen het tarief van je provider.

> 24.02.2021 09:14:21

03322_Leporello_DE-EN-FR-NL_A5_V2.indd 7-12

Documents / Resources



Manuals+,