

MoerLab 2A8MI-ASP57 The Show BT5.3 Wireless Speaker **User Manual**

Home » MoerLab » MoerLab 2A8MI-ASP57 The Show BT5.3 Wireless Speaker User Manual



Contents

- 1 MoerLab 2A8MI-ASP57 The Show BT5.3 Wireless **Speaker**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Classic Bluetooth Mode**
- **5 Package Contents**
- **6 Product Overview**
- 7 Operation
- 8 Three modes of connect and play
- **9 Function Operation Instructions**
- 10 Upgrade
- 11 FCC
- 12 Documents / Resources
 - 12.1 References



MoerLab 2A8MI-ASP57 The Show BT5.3 Wireless Speaker



Product Information

The Show BT5.3 Wireless Speaker is a Bluetooth-enabled wireless speaker that allows you to enjoy high-quality audio wirelessly. It comes with a built-in battery that needs to be fully charged before the first use. The speaker also features a Type-C charging port for easy charging.

The product package includes the following items:

- The Show BT5.3 Wireless Speaker
- User Manual
- Type-C Charging Cable

The speaker has the following components:

- 1. Bass knob
- 2. Audio source button
- 3. Audio source indicator
- 4. Volume knob
- 5. Treble knob

- 6. Battery indicator
- 7. Power button
- 8. AUX 3.5mm audio input
- 9. Type-C charging port

Product Usage Instructions

Charging

Please fully charge the built-in battery before the first time use. Connect the Type-C charging cable to the Type-C charging port on the speaker and the other end to a power source.

Power On

To power on the speaker, press and hold the power button for 2 seconds. The LED indicator will turn on.

Reset

If you need to reset the speaker, press and hold the power button for 8 seconds.

Connect and Play Modes

The speaker has three modes of connect and play:

- 1. Classic Bluetooth
- 2. Auracast
- 3. AUX wired connection

Classic Bluetooth Mode

To switch to Bluetooth mode:

- 1. Press the audio source button for 2 seconds to switch to Bluetooth mode.
- 2. To enter Bluetooth pairing mode, press the audio source button twice. The LED indicator will start flashing.
- 3. On your mobile phone, search for the Bluetooth device named "The Show" and tap it to pair and connect.

Auracast Mode

To switch to Auracast mode:

- 1. While the speaker is powered on, press the audio source button for 2 seconds to enter Auracast mode.
- 2. If your device supports Auracast, activate the Auracast broadcast mode on your device (e.g., mobile phone, computer, or player) and it will automatically pair with The Show.
- 3. If your device does not support Auracast, connect your mobile phone or computer to a MoerLink or MoerDuo (Auracast Audio Dongle, sold separately) and press the function key three times. Once both ends have activated the broadcast mode, the connection will be established automatically.

AUX Wired Connection Mode

To connect your phone and speaker with a 3.5 mm audio cable:

- 1. Plug one end of the 3.5 mm audio cable into the AUX 3.5mm audio input on the speaker.
- 2. Plug the other end of the audio cable into the audio output of your phone or other device.

Function Operation Instructions


| Function | Operation | LED Indicator |
|------------------------------|---|------------------------------------|
| Power On | Press the power button for 2 seconds | 4 LEDs stay on for 10 seconds |
| Power Off | Press the power button for 2 seconds, then press it again twice | All LEDs turn off |
| Battery Level | N/A | White LEDs stay on for 10 s econds |
| Play/Pause | Tap the power button | N/A |
| Bluetooth Pairing | Press the audio source button twice to enter Bluetooth p airing mode | Flashing LEDs |
| Bluetooth Connection | Search for the Bluetooth device named "The Show" on y our phone and tap it to connect | White LEDs stay on |
| Device Auto Power Off | The speaker will automatically power off after 5 minutes without a Bluetooth connection | All LEDs turn off |
| Switch to Bluetooth M ode | Press the audio source button for 2 seconds | White LEDs stay on |
| Switch to Auracast Mo de | Press the audio source button for 2 seconds | White LEDs stay on |
| AUX Mode Volume Up | Rotate the Volume knob to the right | White LEDs flash |
| Auracast Mode LED In dicator | White LEDs flash in the searching state, and stay on when successfully receiving the broadcast in Auracast mode | N/A |

Package Contents

The Show BT5.3 Wireless Speaker/User Manual/Type-C Charging Cable




Product Overview

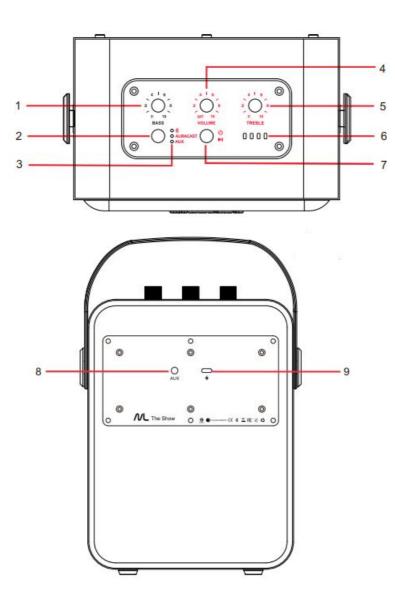

- 1. Bass knob
- 2. Audio source button
- 3. Audio source indicator
- 4. Volume knob
- 5. Treble knob
- 6. Battery indicator
- 7. Power button
- 8. AUX 3.5mm audio input
- 9. Type-C charging port

Operation


Charging

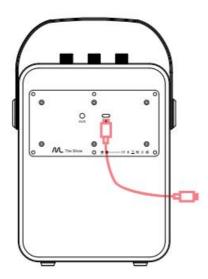

Charge the built-in battery

Please fully charge before the first time use

Power on

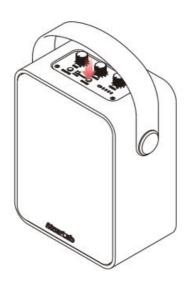

Press and hold the power button for 2 seconds to power on, for 8 seconds to reset

Three modes of connect and play


Mode1: Classic Bluetooth

- 1. Press the audio source button for 2 seconds to switch to Bluetooth mode
- 2. Press the audio source button twice to advance to Bluetooth pairing mode
- 3. Turn on the mobile phone's Bluetooth, then find "The Show"in the list of the mobile phone's pairable Bluetooth devices and tap it to pair and connect to play



Mode2: Auracast


- 1. To enter Auracast mode while powered on, press the audio source button for 2s
- 2. Connecting to other devices with Auracast: If the device supports Auracast: Activate the Auracast broadcast mode on a nearby device that supports Auracast, such as a mobile phone, computer, or player, and it will automatically pair with The Show If the device does not support Auracast: To activate Auracast broadcast mode, connect your mobile phone or computer to a MoerLink or a MoerDuo (the Auracast Audio Dongle, sold separately), and press the function key three times. Once both ends have activated the broadcast mode, the connection will be established automatically

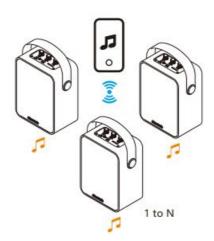

Mode3: AUX wired connection

Connect your phone and speaker with a 3.5 mm audio cable



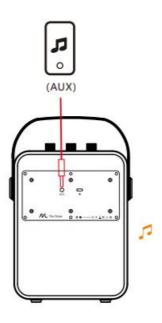

Function Operation Instructions

| Function | Operation | LED Indicator |
|-----------------------------|--|---|
| Power On | Press the power button for 2S | 4 LEDs stay on for 10s |
| Power Off | Press the power button for 2S | All LEDs turn off |
| Battery Level | Press the power button twice | White LEDs stay on for 10s |
| Play/Pause | Tap the power button | N/A |
| Bluetooth Pairing | Press the audio source button twice to enter Bluetooth pairing mode | Flashing |
| Bluetooth Connection | When the speaker is in Bluetooth mode, search for the Bluetooth device named "The Show" on your phone and tap it | White LEDs stay on |
| Device Auto Power Off | The speaker will automatically power off after 5 minutes without a Bluetooth connection | All LEDs turn off |
| Switch to Bluetooth Mode | Press the audio source button for 2 seconds to switch to Bluetooth mode | White LEDs flashes |
| Switch to Auracast Mode | Press the audio source button for 2 seconds to switch to Auracast Mode | White LEDs flashing in searching state LEDs stay on when successfully receiving broadcast in Auracast mode |
| AUX Mode | When the speaker is in power-on state, connecting to Line-in will be automatically recognize as AUX output | White LEDs light stay on |
| Volume Up | Rotate the Volume knob to the right | |
| Volume Down | Rotate the Volume knob to the left | |
| Bass Adjustment | Rotate the Bass knob to the right | |
| Treble Adjustment | Rotate the Treble knob to the right | |
| Battery Level Display | Battery level is 10%~25% | 1 LED light stays on |
| | Battery level is 25%~50% | 2 LEDs lights stay on |
| | Battery level is 50%~75% | 3 LEDs lights stay on |
| | Battery level is 75%~100% | 4 LEDs lights stay on |

Upgrade

You can download the "Moerlab" app from the Android App Store and Apple Store, follow the instructions to upgrade speaker firmware and unlock more skills

Important Safety Information Statement

- 1. Water should be prevented from dripping or splashing into the speaker.
- 2. Do not place any dangerous objects on the speaker.
- 3. Please use the speaker safely in an environment between 0°C and 45°C.
- 4. Use attachments or accessories specified by the manufacturer.

Battery Safety Precautions

- 1. If the battery is incorrectly replaced, there may be a danger of explosion. Do not disassemble and replace it by yourself.
- Batteries (batteries or installed cells) should not be exposed to excessive heat such as sunlight, fire, etc.
 Battery exposure to extremely high or low temperatures during use, storage, or transportation, as well as low air pressure at high altitudes, can cause safety hazards
- 3. Disposing of the battery in a fire or high-temperature oven, mechanical crushing, or cutting the battery may cause an explosion. Exposing the battery to extremely high temperatures or extremely low air pressure may result in an explosion or leakage of flammable liquids or gases.

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference,
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

RF warning for Mobile devices:

This equipment complies with FCC radiation exposure limits set forth. for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.



www.moerlab.com

Documents / Resources



MoerLab 2A8MI-ASP57 The Show BT5.3 Wireless Speaker [pdf] User Manual ASP57, 2A8MI-ASP57, 2A8MI-ASP57, 2A8MI-ASP57 The Show BT5.3 Wireless Speaker, BT5. 3 Wireless Speaker, Wireless Speaker, Speaker

References

• Moerlab - MoerLab website

Manuals+,