



MOGA XP-ULTRA Multi-Platform Wireless Controller User Manual

[Home](#) » [moga](#) » MOGA XP-ULTRA Multi-Platform Wireless Controller User Manual 

Contents

- 1 XP-ULTRA Multi-Platform Wireless Controller
- 2 XP-ULTRA MULTI-PLATFORM WIRELESS CONTROLLER
- 3 USAGE INSTRUCTIONS
- 4 Assigning the Advanced Gaming Buttons
 - 4.1 Problem: My controller will not power on.
 - 4.2 Problem: I do not see MOGA controller listed in mobile devices Bluetooth settings.
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts



XP-ULTRA Multi-Platform Wireless Controller



XP-ULTRA MULTI-PLATFORM WIRELESS CONTROLLER

The XP-ULTRA Multi-Platform Wireless Controller is a gaming controller that can be used with PC, Xbox, and mobile devices. It comes with advanced gaming buttons, a gaming clip slot, and a charge level indicator.

USAGE INSTRUCTIONS

Setup

For best results, fully charge the controller prior to first use.

Charge Level Indicator

The Charge Level Indicator can be checked by pressing the Battery Status button under the D-pad. The indicator will show the current level of charge from 25 to 100%, even when the controller is off. The LED will illuminate steadily when connected.

Bluetooth Connectivity

When powered on, the controller will automatically connect with a previously paired device that has Bluetooth activated.

Powering Off

To turn off the controller and save battery capacity, hold the Xbox button for 5 seconds.

Gaming Clip

The MOGA Clip is included for use with gaming on your phone. You can still use a USB cable for charging when the clip is attached.

1. Slide the MOGA clip onto the top of the controller until it clicks securely into the clip slots on the controller.
2. There are two adjustable articulation points on the MOGA clip. To loosen and adjust the angle of each point, rotate the dials on the sides counterclockwise. Rotate the dials clockwise to tighten after reaching the desired angle.
3. To insert phone, push top edge of phone against top of phone grip to expand upward.
4. Push bottom of phone down flat into place as you reach top limit of phone grip. Adjust phone horizontally as needed to center over controller.
5. To remove the clip, press the panel on the back of the clip to release the clip from the controller.

Assigning the Advanced Gaming Buttons

1. Press the Program Button on the bottom of the controller for 3 seconds. The LED Connection Indicator will flash, signaling that the controller is in assign mode.
2. Press one of the following buttons (A/B/X/Y/LT/RT/LB/RB) that you wish to assign to an Advanced Gaming Button. Then press the Advanced Gaming Button (AGR or AGL) that you wish to perform that function. The Power / Program LED will stop blinking, signaling that the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Buttons.

Note: Advanced Gaming Button assignments will remain in memory even after disconnected.

Resetting the Advanced Gaming Buttons

1. Hold the Program Button down for 2 seconds. The Power / Program LED will blink, signaling that the controller is in assign mode.
2. Press the previously assigned Advanced Gaming Button for 5 seconds, and the function will be cleared.

FAQs

For latest FAQs, visit [PowerA.com/Support](https://www.powera.com/support).

Problem: My controller will not power on.

Solution: Confirm that the controller is fully charged by pressing the Battery Status button on front lower left of controller. Plug in to recharge as needed.

Problem: I do not see MOGA controller listed in mobile devices Bluetooth settings.







Solution: Press and hold the Pairing button on top of the controller for 2 seconds to enter pairing mode (Power / Program LED will flash rapidly).

Documents / Resources



[MOGA XP-ULTRA Multi-Platform Wireless Controller](#) [pdf] User Manual
XP-ULTRA Multi-Platform Wireless Controller, XP-ULTRA, Multi-Platform Wireless Controller, Wireless Controller, Controller

References

-  [ACCO Brands](#)
-  [PowerA | PowerA](#)
-  [Declaration of Conformity | PowerA](#)
-  [Support | PowerA](#)
-  [Warranty-ANZ | PowerA](#)
-  [gesetzeim-internet.de](#)