

MOGA XP5-X Plus Bluetooth Controller For Mobile and Cloud Gaming



# MOGA XP5-X Plus Bluetooth Controller For Mobile and Cloud Gaming Instruction Manual

[Home](#) » [moga](#) » MOGA XP5-X Plus Bluetooth Controller For Mobile and Cloud Gaming Instruction Manual 

## Contents

- [1 MOGA XP5-X Plus Bluetooth Controller For Mobile and Cloud Gaming](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 BOX CONTENTS](#)
- [5 OVERVIEW](#)
- [6 SETUP](#)
- [7 INTEGRATED POWER BANK](#)
- [8 FAQs](#)
- [9 FCC STATEMENT](#)
- [10 WARRANTY](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**MOGA XP5-X Plus Bluetooth Controller For Mobile and Cloud Gaming**



## Product Specifications

- **Model:** MOGA XP5-X PLUS
- **Controller Connectivity:** Bluetooth
- **Cable Length:** 6.6ft (2m) Micro-USB to Standard USB Cable, 11.8in (30cm) Micro-USB to USB Type-C/Micro-USB Cable, 11.8in (30cm) Standard-USB to USB Type-C/Micro -USB Cable
- **Power Source:** Integrated Power Bank

## Product Usage Instructions

### setup

- For best results, fully charge the controller and power bank before first use.

### Charging and Battery Level

- Check the battery charge level by pressing the battery status button on the front lower left of the controller. The LEDs will indicate the current charge level from 25-100% even when the controller is off.

### Wireless Mode

- Move the Wireless/Wired switch on the front center of the controller to BT for wireless mode.

## **Power Off**

- Hold the Xbox button for 5 seconds to turn the controller off and save battery capacity.

## **Wired Mode**

- Move the Wireless/Wired switch on the front center of the controller to USB, which indicates the wired mode.

## **Gaming Clip**

1. Slide the Xbox Wireless Controller into the Mobile Gaming Clip by tipping the top edge in first.
2. Push the controller's bottom edge down into the clip until it locks into place.
3. Adjust the position using the articulation dials on the Mobile Gaming Clip.
4. To insert a phone, follow the provided steps for proper alignment.
5. To remove the clip, pull the front edge forward to release it from the notch.

## **Integrated Power Bank**

The integrated Power Bank allows you to charge your phone during gameplay or while the controller is off.

## **Assigning Advanced Gaming Buttons**

1. Press the Green Program Button on the bottom of the controller for 2 seconds to enter assign mode.
2. Select a button to re-assign and press the desired Advanced Gaming Button (AGR or AGL) to complete the assignment.

## **Frequently Asked Questions (FAQ)**

### **Q: Can I use wired mode with an Android phone?**

**A:** Yes, you can use wired mode on an Android phone with the appropriate cable provided in the box.

### **Q: How do I know if my controller is fully charged?**

**A:** You can check the battery charge level by pressing the battery status button on the front lower left of the controller.

The LEDs will indicate the current charge level.

## **BOX CONTENTS**

- MOGA XP5-X PLUS CONTROLLER
- DETACHABLE DUAL ARTICULATING PHONE CLIP
- 6.6FT (2 M) MICRO-USB TO STANDARD USB CABLE
- For Charging the Controller + Power Bank or Playing in Wired Mode on a PC

- 11.8 IN (30 CM) MICRO-USB TO USB TYPE-C/MICRO-USB CABLE
- For Playing in Wired Mode on Android Phone\*
- 11.8 IN (30 CM) STANDARD-USB TO USB TYPE-C/MICRO-USB CABLE
- For Charging Phone with an Integrated Power Bank

## USER MANUAL

- Wired mode is not officially supported or validated by Xbox.



2-YEAR LIMITED WARRANTY. VISIT [POWERA.COM/SUPPORT](http://POWERA.COM/SUPPORT) FOR DETAILS.

## OVERVIEW



PRECISION ANALOG STICK  
LEVIER ANALOGIQUE DE PRÉCISION

PRECISION ANALOG STICK  
LEVIER ANALOGIQUE DE PRÉCISION



PROGRAM BUTTON  
BOUTON DE PROGRAMME

STANDARD USB PORT  
PORT USB

RB

RT



LB

LT

MICRO  
USB PORT  
PORT  
MICRO-USB


## SETUP

For best results, fully charge the controller and power bank before first use.


### CHARGING CONTROLLER + POWER BANK



- Using the included 6.6ft (2 m) USB Cable, connect the Micro-USB end to the lower port at the top of the controller, and connect the Standard USB end to any powered USB source.
- When charging, four LEDs will display the charging level from 25-50-75-100%.

### CHARGE LEVEL INDICATOR


- Check the battery charge level by pressing the battery status button (  ) on the front lower left of the controller. The LEDs will indicate the current charge level from 25-100% even when the controller is off.

### WIRELESS MODE


- Move the Wireless/Wired switch on the front center of the controller to BT  which indicates Bluetooth wireless mode.

- If the controller is off, press the Xbox button (  ) to turn on (the LED will illuminate).
- Press and hold the Bluetooth sync button (  ) on the back of the controller for 2 seconds to enter pairing mode (LED will flash rapidly).
- Enter the Bluetooth settings on your device and choose the MOGA controller. The pairing LED will turn solid when connected.
- **NOTE:** A previously paired device will automatically pair to the controller when powered on.

## POWERING OFF

- Hold the Xbox button (  ) for 5 seconds to turn the controller off and save battery capacity.

## WIRED MODE

- Move the Wireless/Wired switch on the front center of the controller to USB (  ) which indicates the wired mode.
- Connect the Micro-USB end of the 11.8" (30 cm) or 6.6ft (2 m) cable to the lower port at the top of the controller, and connect another end to your gaming device.
- Gaming device input ports (Standard USB, Micro-USB, USB-C) will determine whether you use shorter or longer micro-USB cables for wired gaming.
- This MOGA controller supports DirectInput by default but also supports XInput mode. If the initial wired connection is unsuccessful, switch modes by pressing Start + Select for three seconds.
- Three LED flashes indicate mode was changed and retained in memory.
- Repeat the process to switch back.

## GAMING CLIP

A detachable gaming clip is included for use with gaming on your phone. You can use USB cables with a clip attached for charging or wired mode.

1. Slide the Xbox Wireless Controller into the Mobile Gaming Clip by tipping the top edge in first.
2. Push the controller's bottom edge down into the clip until it locks into place.
3. There are two adjustable articulation dials on the Mobile Gaming Clip.
  - Rotate dials in opposite directions to loosen and adjust position.
  - Rotate the dials back to tighten after reaching the desired viewing angle.
4. To insert the phone, push the top edge of the phone against the top of the phone grip to expand upward.
5. Push the bottom of the phone down flat into place as you reach the top limit of the phone grip. Adjust the phone horizontally as needed to center over the controller.
6. Remove clip by pulling the front edge forward to release from the notch.

## INTEGRATED POWER BANK

- A Power Bank built into the controller allows you to charge your phone during gameplay or while the controller is off.
- Connect the Standard USB end of the 11.8" (30 cm) cable to the upper port at the top of the controller, and connect the other end to your mobile device.
- During gameplay, move the Power Bank switch below the right thumbstick to the right (on) to start charging. If you prefer to use battery power to extend controller usage time rather than charge the phone, move it to the left (off).
- To charge a mobile device when the controller is not in use, simply connect a cable between the controller and the device to begin charging (the Power Bank Switch must be ON).
- Your mobile device will display the charge status once connected. If charging does not begin, the power bank battery may be too low: recharge the controller.
- The amount of charge available for your phone depends on how much battery capacity remains on the controller when charging begins.

## ASSIGNING THE ADVANCED GAMING BUTTONS

1. Press the Green Program Button on the bottom of the controller for 2 seconds. The LED Connection Indicator will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/LB/RB/LT/RT/Left Stick Press/Right Stick Press/D-pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign.
  - The LED connection indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.
  - **Note:** Advanced Gaming Button assignments will remain in memory even after being disconnected.


## RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in assign mode.
2. Press the previously assigned button for 5 seconds, and the function will be cleared.


## FAQS

For the latest FAQs, visit [PowerA.com/Support](https://www.powera.com/support)

### PROBLEM: My controller will not power on.

- **SOLUTION:** Confirm the controller is fully charged by pressing the battery status button (  ) on the front lower left of the controller. Plug in to recharge as needed.

### PROBLEM: I do not see the MOGA controller listed in mobile devices' Bluetooth settings.

- **SOLUTION:** Press and hold the Bluetooth sync button (  ) on the back of the controller for 2 seconds to



enter pairing mode (LED will flash rapidly).

## **PROBLEM: The integrated power bank is not functioning**

- **SOLUTION:** Confirm the controller has more than 25% charge and the Power Bank button is switched on.

## **CONTACT/SUPPORT**

- For support with your authentic PowerA accessories, please visit [PowerA.com/Support](https://PowerA.com/Support).
- MANUFACTURED FOR ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047
- [ACCOBRANDS.com](https://ACCOBRANDS.com) [POWERA.com](https://POWERA.com) MADE IN CHINA
- ADDITIONAL LEGAL
- © 2023 ACCO Brands. All Rights Reserved. MOGA and MOGA by PowerA logo, PowerA and PowerA Logo are trademarks of ACCO Brands.
- Microsoft, Xbox, and Windows are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

## **MOTION WARNING**

Playing video games can make your muscles, joints, skin, or eyes hurt.

**Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation, or eyestrain:**

- Avoid excessive play. Take a 10 to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

## **FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for Class B digital devices, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### **CAN ICES-003(B)/NMB-003(B)**

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### **RADIATION EXPOSURE STATEMENT**

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0cm between the radiator and your body.

### **WARRANTY AGAINST DEFECTS, AUSTRALIA & NEW ZEALAND CUSTOMERS**

- This product is provided with a 2-year warranty against defects in manufacturing or materials from the date of purchase. ACCO Brands will either repair or replace a defective product subject to the conditions of this warranty.
- Claims under this warranty must be made to the place of purchase within the warranty period with proof of purchase by the original purchaser only. Expenses associated with a warranty claim are the responsibility of the consumer.
- Conditions of this warranty are on our website: [PowerA.com/warranty-ANZ](https://PowerA.com/warranty-ANZ).
- This warranty is provided in addition to other rights or remedies available to you under the law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.
- You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
- You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **DISTRIBUTOR CONTACT DETAILS AUSTRALIAN CUSTOMERS**

- ACCO Brands Australia Pty Ltd, Locked Bag 50, Blacktown BC, NSW 2148 Phone: 1300 278 546
- Email: [consumer.support@powera.com](mailto:consumer.support@powera.com)

### **NEW ZEALAND CUSTOMERS**

- ACCO Brands New Zealand Ltd., PO Box 11-677, Ellerslie, Auckland 1542 Phone: 0800 800 526
- Email: [consumer.support@powera.com](mailto:consumer.support@powera.com)

## **BATTERY WARNING**

- Do not attempt to repair the Li-ion battery yourself—you may damage the battery, which could cause overheating, fire, and injury.
- The Li-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste.
- Dispose of batteries according to your local environmental laws and guidelines.
- Do not use or leave a device containing rechargeable batteries in a high-temperature environment (e.g., in strong direct sunlight, or a vehicle in hot weather).
- High temperatures may cause batteries to overheat or catch fire, and the battery performance or longevity may be negatively affected.
- Do not use a device containing rechargeable batteries in an environment with high levels of static electricity. Excessive static electricity can impair the batteries' internal safety measures, increasing the risk of overheating or fire.
- If liquid leaking from a battery pack comes into contact with your eyes, DO NOT RUB EYES! Immediately flush your eyes thoroughly with clean running water and seek medical attention to prevent injury to your eyes.
- If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging, or storage, immediately remove it from any charging device and place it in a sealed fireproof container such as a metal box, or a safe location away from people and flammable items.
- Discarded batteries may cause a fire. Do not heat the controller or battery, or place it either in or near the fire.

## **BATTERY LEAKAGE WARNING**

- Leakage of chemicals contained within the battery pack can cause personal injury as well as damage to a game controller.
- Avoid allowing battery chemicals to contact the skin. If contact occurs, immediately wash thoroughly with soap and water.
- If liquid leaking from a battery pack comes into contact with your eyes, DO NOT RUB EYES! Immediately flush your eyes thoroughly with clean running water and seek medical attention to prevent injury to the eyes.

## **REGIONAL COMPLIANCE SYMBOLS**

- More information was available via a search of each symbol name.

## **Waste Electrical and Electronic Equipment (WEEE):**

- Electrical and electronic devices and batteries contain materials and substances that can have damaging effects on human health and the environment.
- This symbol indicates that this device and the battery must not be treated as household waste and must be collected separately.
- Dispose of the device via a collection point for the recycling of waste electrical and electronic equipment within the EU, UK, and other European countries that operate separate collection systems for waste electrical and electronic equipment and batteries.
- By disposing of the device and the battery in the proper manner, you help to avoid possible hazards for the

environment and public health that could otherwise be caused by improper treatment of waste equipment.

- The recycling of materials contributes to the conservation of natural resources.
- The CE (Conformité Européene aka European Conformity) mark is a declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.
- The UKCA (UK Conformity Assessment) mark is a declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.
- The Regulatory Compliance Mark is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding electrical safety and/or electromagnetic compatibility (EMC).


## WARRANTY

- **2-Year Limited Warranty:** Visit [PowerA.com/Support](https://PowerA.com/Support) for details.
- **EU/UK DECLARATION OF CONFORMITY** Hereby, ACCO Brands USA LLC declares the wireless controller complies with Directive 2014/53/EU and UK Radio Equipment Regulation 2017, as well as other essential requirements and relevant provisions of EU directives and UK legislation. The full text of the declaration of conformity is available at the following internet address: [PowerA.com/Compliance](https://PowerA.com/Compliance)

## WIRELESS RATING FOR EU COMPLIANCE

- **Frequency Range:** 2402 MHz – 2480 MHz | Max E.I.R.P.: 6.1 dBm
- **ELECTRICAL RATING INFORMATION Battery:** DC3.7V

## Documents / Resources

	<a href="#">MOGA XP5-X Plus Bluetooth Controller For Mobile and Cloud Gaming</a> [pdf] Instruction Manual XP5-X Plus, XP5-X Plus Bluetooth Controller For Mobile and Cloud Gaming, Bluetooth Controller For Mobile and Cloud Gaming, Controller For Mobile and Cloud Gaming, Mobile and Cloud Gaming, Cloud Gaming, Gaming
---	---

## References

-  [PowerA | PowerA](#)
-  [Declaration of Conformity | PowerA](#)
-  [Support | PowerA](#)
-  [Warranty-ANZ | PowerA](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.