



mojawa MOJO1 Bone Conduction Headphone User Guide

[Home](#) » [mojawa](#) » mojawa MOJO1 Bone Conduction Headphone User Guide 

 
Contents

- 1 [mojawa MOJO1 Bone Conduction Headphone](#)
- 2 [Components](#)
- 3 [Quick Start](#)
- 4 [How to Wear](#)
- 5 [About Charging](#)
- 6 [Bluetooth Connection](#)
- 7 [Specification](#)
- 8 [LED Indicator](#)
- 9 [Storage and Maintenance](#)
- 10 [Optional Accessories](#)
 - 10.1 [Earplugs](#)
 - 10.2 [Adjustable clip](#)
 - 10.3 [Reset to Factory Default Settings](#)
- 11 [Contact Us](#)
 - 11.1 [FCC Statement](#)
 - 11.2 [FCC Statement](#)
- 12 [Documents / Resources](#)
 - 12.1 [References](#)
- 13 [Related Posts](#)






Components

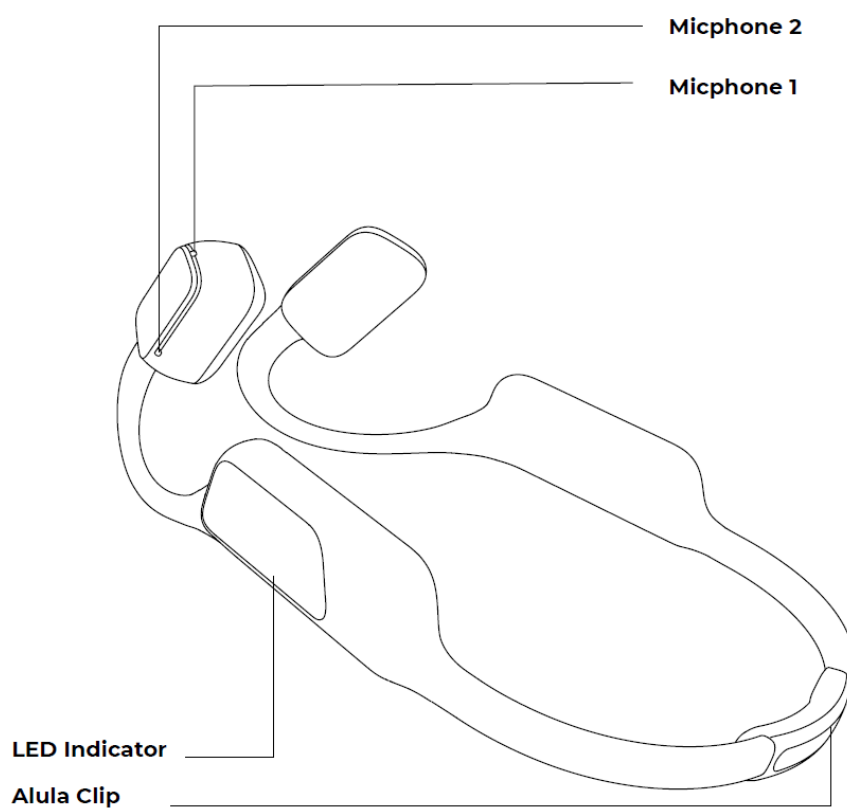

Quick Start

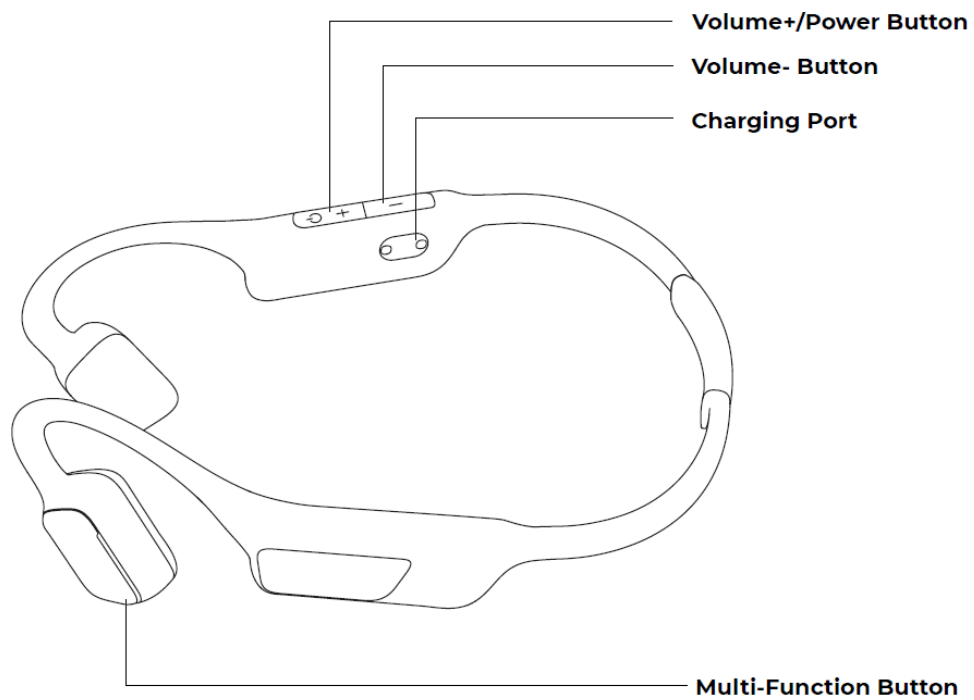 

1. **Power on:**

 
Press and hold the Power button for 2 seconds.

2. **Pairing:**

Press and hold the Power button for 4 seconds to enter the pairing mode. On your phone, tap to search for the Bluetooth device named “MOJO1” to connect.

How to Wear

Identify the left and the right of the headphones by the Volume button and the LED indicator should be on the right side. Wear the head-phones by putting it in the back of your head and make it firmly seat on your ears.

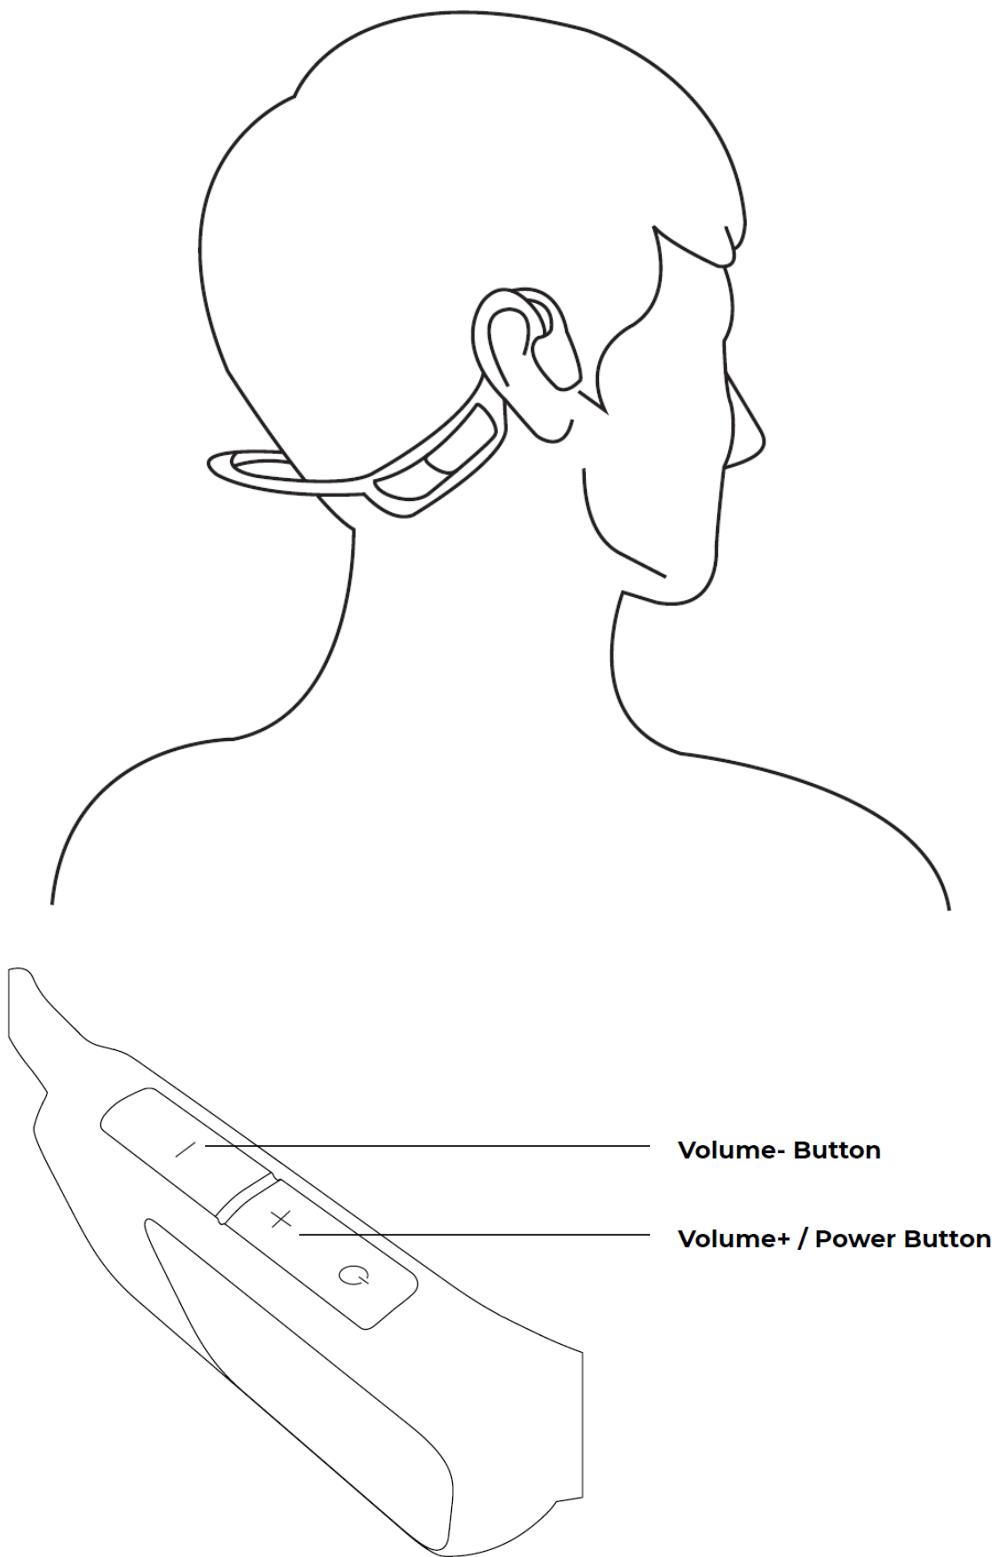

Power On

Press and hold the **Power button** for 2 seconds until it says "Power On"

 
Power Off

Press and hold the **Power button** for 2 seconds until the tone is heard and release the **Power button** then it will say "Power Off and the" indicator flashes red for 1 second then off.

Volume Up/Down

Click Vol+ / Vol-. A tone will sound whenever click the button and there will be a special tone when the volume is set to the maximum.

Multi-Function Button

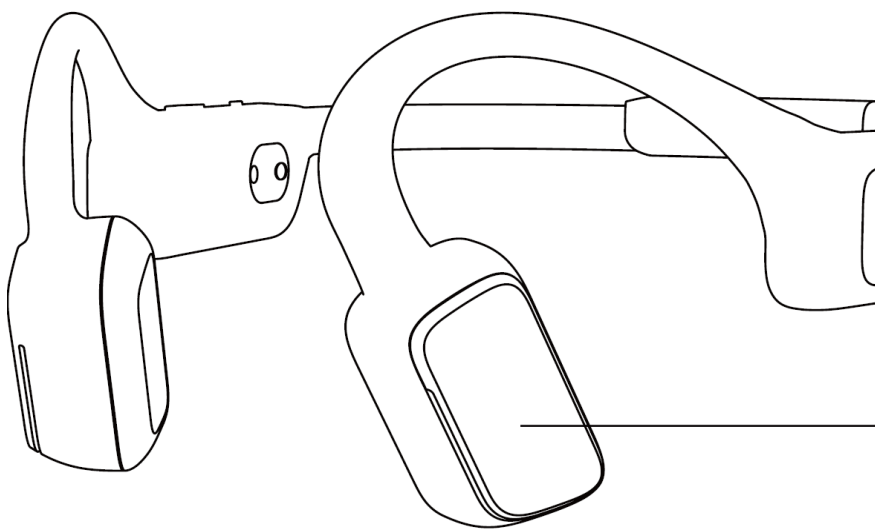

Multi-function Button

Function	Action
Play/Pause music	Click 1x
Skip to the next track	Click 2x
Back to the previous track	Click 3x
Answer a call	Click 1x
Decline an incoming call	Press and hold the button for 2 seconds
Cancel an outgoing call	Click 1x

Hang up a call	Click 1x
Continue to talk with A and decline B	While talking to A, press and hold the Function button for 2 seconds to decline the incoming call from B
Hang up on the call from A and answer B	Click the Function button twice to hang up on the current call with A and answer the incoming call from B.
Put A on hold and answer B	While talking on the call with A, click the Function button once to answer the incoming call from B.
Voice assistant	Press and hold the button for 2 seconds.
Switch between your phone and headphones for talk	Click the button twice on the call.

About Charging

Charge the headphones with the included magnetic charging cable. The indicator will flash blue after it is fully charged.

Before the first use, ensure the charging port is dry and free from liquid, and then charge the headphones.

Bluetooth Connection

Pair for the first time	<p>With the headphones powered off, press and hold the Power button for 4 seconds to enter the pairing mode. On your phone, tap to search for the Bluetooth device named "MOJO1".</p> <p>The headphones say "Power On" and "Pairing", and</p> <p>The red and blue indicators flash alternately until the headphones say "Source Connected"</p>
-------------------------	---

Connect automatically	With the headphones (with a pairing history) powered off, press and hold the Power button for 2 seconds to reconnect the last-connected Bluetooth-enabled device. The headphones say "Power On" and "Source Connected"
Disconnect	Disable Bluetooth on the phone for disconnection from the headphones. The headphones say "Source Disconnected twice slowly".
Turn on Bluetooth	With Bluetooth disabled, press and hold the Power button and the Function button simultaneously for 2 seconds for reconnecting through Bluetooth. The headphones say "Source Connected".
Turn off Bluetooth	When Bluetooth connection is established, press and hold the Power button and the Function button simultaneously for 2 seconds for disconnection of Bluetooth. The headphones say "Source Disconnected".
Unpair	Use the phone to cancel the pair with the headphones. The headphones say "Source Disconnected Pairing" and become discoverable again.
Reconnect automatically	<p>With the headphones powered on,</p> <ol style="list-style-type: none"> 1. When the headphones have been paired with the phone, move the headphones outside the Bluetooth range for disconnection; 2. When the headphones are moved back within the Bluetooth range within 10 minutes, the headphones automatically resume the connection with the last connected phone (if the headphones have been paired with several devices, the headphones automatically reconnect the last connected Bluetooth-enabled phone), say "Source Connected", and resume the status before the last disconnection.

Specification

Model: MOJO1	Speaker: Bone conduction speaker
Frequency response: 2.4GHz	Bluetooth range: 10 m
Microphone sensitivity: -36dB	Bluetooth version : Bluetooth 5.0
Bluetooth protocol: A2DP 1.3, HFP (Hands-	Endurance: Up to 8 hours
Battery type: Li-polymer battery	Charging time: <=80 minutes
Standby time: The product will power off automatically when it is not connected for 3 minutes.	Power supply:5V 500mA
Weight: 34g(with Alula)	Warranty period: 1 year
Charging voltage: 5±0.25 V	Ingress protection rating: IP67
Speaker impedance: 8.0 ohm±20%	Battery capacity: 150mAh
Bluetooth frequency range: 2.402-2.480 GHz	Bluetooth output power: >=3dBm

LED Indicator

Flashes blue for 1 second	Power on
Flashes red for 1 second	Power off
Flashes blue slowly	Connectable
Flashes red and blue 3 times every second	Ready to pair
Flashes blue for 1 second	Connected
The indicator flashes blue for 0.1 seconds every 0.5s	Incoming call
When the battery level is lower than 30%, the indicator flashes red at an interval of 1 second. When the battery level is between 30% and 80%, the indicator flashes green at an interval of 1 second. When the battery level is between 80% and 100%, the indicator flashes blue at an interval of 1 second. When the battery is fully charged, all indicators turn solid blue simultaneously.	Charging
The indicator flashes red for 0.05 seconds every 10 seconds for two times.	Low battery
The indicator flashes red for 0.5 seconds and then off for 0.5 seconds, repeating for three times.	Reset to factory default setting

Storage and Maintenance

The headphones should be stored in a cool and dry place. It should be used at the ambient temperature between 5°F (-15°C) and 131°F (55°C) and charged at the ambient temperature between 32°F (0°C) and 104°F (40°C). The lifespan of the battery may be reduced when it is operated in extreme environment where it is too cold, hot or damp.

When left unused for a long time, the headphones must be recharged before use.

The headphones may be cleaned regularly, but the microphone may not be flushed or immersed, otherwise, its performance may be affected.

Clean the headphones with a soft and dry cloth.

Please do not charge the headphones immediately after sports as any residual sweat at the charging port may damage the circuit of the headphones.

A dry charging port helps to reduce the damage risk of your headphones during charging.

Important Safety Instructions

Use manufacturer-designated accessories and supplies only.

Warning/Caution

- The headphones should be kept out of the reach of children and pets to avoid swallowing it in accident. There is a Li-polymer battery in the headphones, which can potentially cause a hazard. If the part is swallowed, seek medical care immediately. The unused headphones should be kept out of the reach of children and pets.
- Do NOT use the headphones at a high volume for an extended period.

- To avoid hearing damage, use the headphones at a comfortable, moderate volume level. Your hearing may be damaged and the sound may also be distorted at a super high volume.
- Turn the volume down on the headphones before placing it in your ears, then turn the volume up gradually until you reach a comfortable listening level.
- Use caution and follow applicable laws regarding the use of phone and head phones if using the headphones for phone calls while driving. Some jurisdictions impose specific limitations on the use of such products while driving. Do not use the headphones for any other purposes while driving.
- When you need to use the headphones while engaging in an activity needing concentrated efforts, for example, riding a bicycle, or walking in or near the traffic, a construction site or railroad, please beware of your safety and follow relevant laws regarding the use of headphones.
- This product contains small parts which may be a choking hazard. It is not suitable for children under age 3.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.
- Do not make unauthorized alterations to this product.
- Use this product only with an agency approved power supply that meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- Do NOT expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- Do not charge this product during thunder and lightning.

Optional Accessories

Earplugs

When traveling by plane or train, you may use ear earplugs to block out back-ground noise and enjoy better bone conduction sound.

Adjustable clip

Alula clip is suitable for different adjustable clips for varying grip.

Safety Reminder: When you wear the headphones with an Alula in a dark environment, there will be clear reflections when the car lights illuminate on the Alula, which will serve as a reminder to warn the driver to pay attention to safety driving.

Reset to Factory Default Settings

Press and hold the Power button and Function button simultaneously for 4 seconds.

The headphones will be reset. All the pairing history will be deleted and the volume is reset to the initial value, 8.

Contact Us

If you have any other questions, please use camera or QR scanner to scan to get assistance or visit [http://www.mojawa.afterservice.vip](http://www.mojawa afterservice.vip) or mail to: mojowa@afterservice.vip

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.



Documents / Resources

	mojawa MOJO1 Bone Conduction Headphone [pdf] User Guide MOJO1, Bone Conduction Headphone
	mojawa Mojo1 Bone Conduction Headphone [pdf] User Guide MOJO1, 2A2YHMOJO1, Mojo1 Bone Conduction Headphone

References

- [MOJVERSE](#)
- [mojawa afterservice.vip](#)