

# **mokibo Folio Keyboard User Manual**


[Home](#) » [mokibo](#) » **mokibo Folio Keyboard User Manual** 

## **Contents**

- [1 mokibo Folio Keyboard User](#)
- [2 Power On/Off](#)
- [3 Bluetooth pairing](#)
- [4 OS selection](#)
- [5 Multi-pairing](#)
- [6 Left, Right Click](#)
- [7 Scrolling](#)
- [8 Active touch area](#)
- [9 Dynamic Touch Area \(DTA\)](#)
- [10 User settings](#)
- [11 Combination key](#)
- [12 Gestures](#)
- [13 Product guide](#)
- [14 Important safety information](#)
- [15 Limited Warranty](#)
- [16 FCC](#)
- [17 Documents / Resources](#)
- [18 Related Posts](#)



**mokibo Folio Keyboard User**

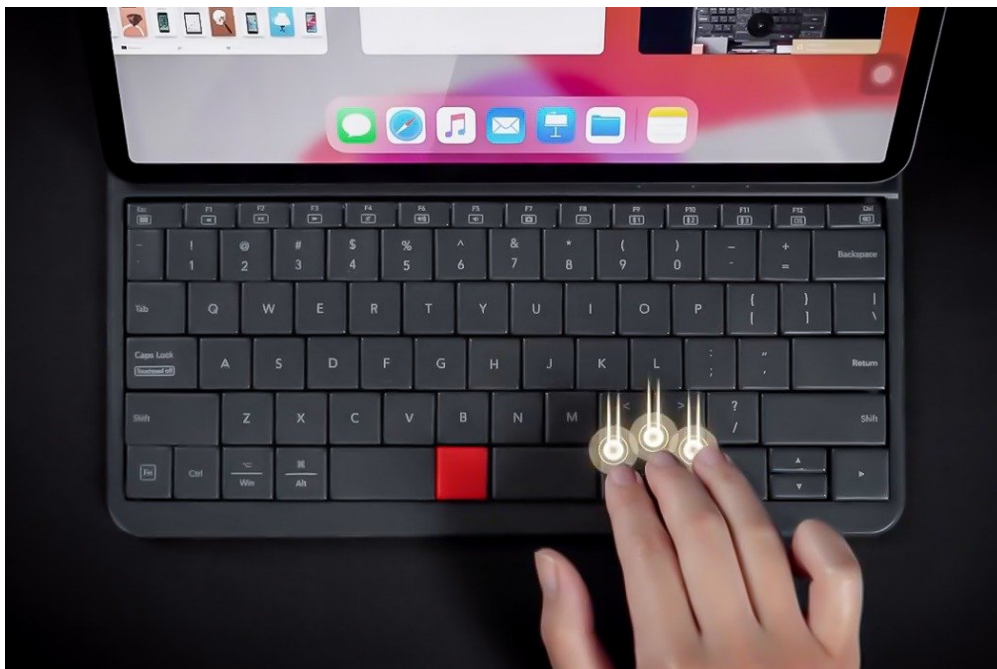

## Power On/Off



- Power is turned on automatically when the cover is opened.
- The LED channel indicator will blink and stop.
- Pressing the "fn" key will light an LED to indicate the current battery level and paired channel.
- When the cover is closed, the power is turned off.
- When the power is turned on and there is no input for 20 minutes, it enters hibernation mode to save power. If any input is received in hibernation mode, it will return to active mode.

## Bluetooth pairing



- Press and hold the “fn” key and press one of the Bluetooth “Channel keys” (F9, F10, F11) for 2 seconds.
- When the LED indicator at the top of the “Channel key” blinks, the pairing is ready.
- Find and select “Mokibo” in the Bluetooth setting window of your smart device.
- Confirm your pairing if you are asked.
- Pairing is successful when the LED stops flashing.

## OS selection



- Press and hold the “fn” key and press the “OS selection key” (F12) repeatedly until the color you want is displayed on the LED channel indicator.



- The OS selected for each of the three Bluetooth channels is memorized until Bluetooth is reset by step 2.
- For Linux, set as Windows OS (blue color).

## Multi-pairing



- Repeat steps 2 and 3 with different “Channel keys”(F9~F11). You can pair it with up to three devices.
- If you want to change the paired device, press the “fn” key and the corresponding “Channel key” shortly.
- The LED will blink for a short time (2-5 seconds) and then stop.
- Channel switching is complete.

## Left, Right Click



- The red key in the center of the space bar works the same as the normal left-click button of the mouse.
- If you press and hold the "fn" key and press the red key, it works the same as the right-click button of a normal mouse.
- If you tap the touch area with one finger once, it works as the left-click button of a normal mouse. A double-tap is a double-click, and a triple-tap is a triple-click.
- If you tap the touch area once with two fingers, it works as a right-click button of a normal mouse.

## Scrolling



If two fingers are placed on the keyboard(not pressed) and moved up, down, left and right, it functions as up-down scrolling, left-right scrolling.

## Active touch area



- Mokibo has a right-handed mode and a left-handed mode, and the area used as the touchpad is as shown in the figure above. By default, it is set to right handed mode.
- For how to set right-handed mode and left-handed mode, refer to the user settings section.

## Dynamic Touch Area (DTA)



When a touch input crosses the boundary of the active touch area, the touch area automatically extends to the Dynamic Touch Area (DTA).

## User settings

- If you press and hold the “fn” key and press the word below, the user settings are activated.

- ✓ / Left-handed mode  
Fn + L E F T
- ✓ / Right-handed mode  
Fn + R I G H T
- ✓ Update mode  
Fn + U P D A T E

- Place the cursor in notepad and press the next keys to print the information.

- ✓ / Print battery level  
Fn + B A T T E R Y
- ✓ / Print software version  
Fn + V E R S I O N
- ✓ / Print HELP information  
Fn + H E L P

## Combination key

기능 / Function	
 + 	홈으로 가기 / Home
 + 	마이크 끄기* / Mic mute*
 + 	카메라 끄기* / Camera mute*
 + 	음소거 / Speaker mute
 + 	음량감소 / Volume down
 + 	음량증가 / Volume up
 + 	스크린샷 / Screen shot
 + 	배터리량 / Battery level
 + 	가상키보드 / Virtual keyboard
 + 	블루투스 채널 1 / Bluetooth CH 1
 + 	블루투스 채널 2 / Bluetooth CH 2
 + 	블루투스 채널 3 / Bluetooth CH 3
 + 	OS 선택 / OS Selection
 + 	인서트키 / Insert key
 + 	터치패드 끄기-켜기 / Touchpad off-on

Works with Zoom and WebEx video conferencing programs and supports Windows, iPad, and Mac. (Android not supported)

## Gestures

Gestures	Windows	Android	iPad	Mac
	스크롤 Scrolling	스크롤 Scrolling	스크롤 Scrolling	스크롤 Scrolling
	웹페이지 전환 Switch web pages	웹페이지 전환 Switch web pages	웹페이지 전환 Switch web pages	웹페이지 전환 Switch web pages
	줌 인/아웃* Zoom in/out*	-	-	줌 인/아웃* Zoom in/out*
	미션컨트롤 Mission control	모든 앱 All open apps	모든 앱 All open apps	미션컨트롤 Mission control
	바탕화면 Desktop	홈스크린 Home	홈스크린 Home	앱윈도우 Application windows
	이전앱 Previous app	이전앱 Previous app	이전앱 Previous app	이전앱 Previous app
	태스크선택 Select task	태스크선택 Select task	태스크선택 Select task	태스크선택 Select task
	검색바 Search bar	검색바 Search bar	Dock 보기 Show dock	룩업 Look up
	미션컨트롤 Mission control	모든 앱 All open apps	모든 앱 All open apps	미션컨트롤 Mission control
	바탕화면 Desktop	홈스크린 Home	홈스크린 Home	앱윈도우 Application windows
	데스크탑전환 Switch desktops	-	-	데스크탑전환 Switch desktops



Transmit Control +/- on Windows and Android, and cmd +/- on iPad, supported only by some apps.

1. Do not remove the keycaps.
2. Be careful not to let contaminants such as powder or liquid get into the keyboard. If any contaminants get in, wash only the keyboard part by standing it under running lukewarm water. After it is completely dry, in most cases it will work fine.
3. Do not apply pressure or disassemble the product, such as twisting or bending it.
4. Do not use in hot or humid places.

Free repairs may be refused for malfunctions caused by non-observance of the above.

Visit our website for more information.

If you leave your e-mail through the website, you can receive Mokibo news, such as events and product launches, as quickly as possible.



## Product guide

**WARNING:** Improper installation, use, or careless handling of the product can cause serious injury, death, or damage of the device.

Read this product guide and keep all of your printed guide materials for future reference.

If you need more information, please visit [www.innopresso.com](http://www.innopresso.com) or [www.mokibo.com/service](http://www.mokibo.com/service) or contact us.

## Important safety information

### 1. Device using battery power

Improper use of batteries may cause electrolyte leakage, overheating or explosion. Leaked battery electrolyte is corrosive. Therefore, it may be toxic. Skin or eye contact may cause burns. It is harmful if swallowed.

### 2. To reduce the injury risks

Keep the battery out of children's reach.

Do not disassemble, heat, cut, incinerate, or pierce the battery with sharp objects.

### 3. Wireless device

Remove the battery or turn off the power (if there is a power switch) of the wireless device before you go on a plane or put the wireless device on cargo that passes through an airport security checkpoint. When the wireless device is accidentally powered on with the battery in place, it will send a radio frequency (RF) signal just like a cell phone.

### 4. Game controller, keyboard and mouse device

#### [Choking hazard]

Keep the small parts contained in this device out of the reach of toddlers under the age of three due to choking hazards.

#### [Usage and cleaning]

Use the device in accordance with the following instructions.

Do not use the device near a heat source.

Use the components or accessories designated by INNOPRESSO.

Use a dry cloth for cleaning.

Do not allow water to enter the product. Do not expose the product to rain, humidity, or moisture to reduce the risk of fire or electric shock.

#### 5. Tablet stand

Do not pull up the tablet stand excessively to the point it falls in order to prevent damage to the device mounted to tablet stand.

#### 6. Regulatory Information

Do not use the device for mechanical, medical or industrial applications. The device is classified as a commercial product operating from 5°C-35°C (41°F-95°F). To comply with RF exposure requirements, do not move or remove antennas installed by the manufacturer. Do not use the wireless device with any other types of antennas or transmitters or place near them.

### Disposal of Waste Batteries and Waste Electrical and Electronic Equipment (WEEE)

If a product, battery, or package has this sign on it, do not dispose of the product and its batteries together with household waste. Instead, dispose of such items at your local battery, electrical and electronics recycling collection point. Separate collection and recycling can help save resources and can help protect your health and the environment from harmful substances that may remain in batteries, electrical and electronic devices. For proper disposal of batteries and electrical and electronic waste, contact your local city hall office or the town /township Village office, your household waste disposal service company or the store where you purchased the product.

Please contact [service@innopresso.com](mailto:service@innopresso.com), for more information on WEEE (waste electrical appliances) and waste batteries.

### Technical support numbers by country

Note: For more information on the support policies in your country, Visit <http://www.innopresso.com> or [www.mokibo.com/service](http://www.mokibo.com/service) and select your country from the list.

If there is no INNOPRESSO subsidiary in your region or country, contact the store where you purchased INNOPRESSO.

Model Name: MKB420 | Components: Mokibo, charging cable, instruction manual Size: 260mmx130mmx7.5mm (LXWxH) | Weight: 245g | Charging method: USB Micro5 pin | Battery: 3.7v, 2.18Wh Wireless protocol: Bluetooth 4.0, 2.4Ghz Wireless | Bluetooth4.0 Range: 10m Compatibility. Android 4.0, Windows 10t, MacOS 9, iOS 13t, iPadOS 23+

**INNOPRESSO | 3-406, 20, Pangyo-ro 289beon-gil, Bundang-gu, Seongnam-si, Gyeonggi-do, Republic of Korea, (13488) | 070-4456-4451**

The contents and perspectives of this instruction manual, including URLs and website references, may change Without notice. This manual does not grant you any intellectual property rights of INNOPRESSO products. This document may be copied for internal use and for reference.

Mokibo™ and INNOPRESSO™ are registered trademarks of INNOPRESSO, Inc.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

All the other trademarks are the property of their respective owners.

### Limited Warranty

- Read the following content carefully and understand your rights and obligations.

“Hardware Device” means the INNOPRESSO® hardware products. “You” means an individual or a single corporate body. “Software” means the software provided by INNOPRESSO to use with the hardware device and may include approved upgrades or additional components provided by INNOPRESSO, such software,



such as media (including copies), printed materials, “online” or electronic documentation.

- **A. Warranty**

Express Warranty-According to the express warranty conditions, INNOPRESSO guarantees that the software and hardware will work normally if you follow the disclosed INNOPRESSO packaging and documents for one year from the day of receipt specified on your receipt. In the case of defects found after the warranty period, no warranty or condition of any kind shall be applied.

- **B. The only remedy**

INNOPRESSO shall give you a refund or repair parts or all of the defective software or hardware devices or compensate you for your loss based on reasonable calculation in accordance with applicable laws and the following terms and conditions if you return the software or hardware device with a proof or copy or receipt (in case the place of purchase refused to return) within the warranty period. However, the amount for compensating for damages shall not exceed the amount of reasonable depreciation rates based on the amount you paid for the software and / or hardware device. The following shall be applied to the remedies specified above. Software or hardware devices may

Be repaired or exchanged, refurbished, Or otherwise exchanged for USED products, in principle, and may contain third party items with the same function and performance as the original hardware device (or software), Any software or hardware device repaired or exchanged pursuant to this Limited Warranty shall be warranted for either

the remaining warranty period or 30 days from the date of shipment of the product.

- **C.Exclusion of other damages**

To the maximum extent permitted by applicable laws, INNOPRESSO and its suppliers, affiliates and agents shall not take responsibility for ( ) any consequential or incidental damages, (m) loss of profits, business interruption, loss of data, privacy or secret, or any other kind of loss or damage, not being able to use the service, injury, or any obligation (including, but not limited to, negligence, obligation of faith, duty of endeavor) (im) indirect, special, punitive damages arising out of or related the software or hardware devices. The above content shall apply to INNOPRESSO, its suppliers, affiliates or agents who have been aware of the possibility of such loss, damage, or for

failure, illegal acts (including negligence), liability without fault, product responsibility, or false statement. Since some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, the above limitation or exclusion may not apply to you.

- **D. Exclusion of Warranty**

This Limited Warranty shall not be applied if the software or hardware device is used for the commercial purpose (including renting or leasing), used beyond the scope of the software license, modified or altered, or in the case of force majeure, overvoltage, misuse, abuse, negligence, manipulation, or for any other reason not related to defects

of the hardware device or software, including damages caused by programs, data, viruses, files, shipment or transmission, usage not in accordance with the enclosed documentation and instructions, being repaired, modified or altered at any place other than INNOPRESSO authorized repair center and service center. This Limited Warranty does not include warranties related to legal rights or abilities or express and implied warranties.

- **E. Registration**

It is not necessary to register for the acquisition of software and hardware devices for the Limited Warranty to

take effect.

- **F. Beneficiary**

To the extent permitted by applicable laws, the Limited Warranty shall apply only to you, the user of the software or the buyer of the hardware device. The third party shall not be given the Limited Warranty. Unless otherwise required by law this Limited Warranty shall not be applied to other parties, including any other person, including grantees.

- **G. Additional information**

INNOPRESSO shall be a guarantor under this Limited Warranty. Please visit INNOPRESSO website ([www.INNOPRESSO.com](http://www.INNOPRESSO.com) or [www.mokibo.com/service](http://www.mokibo.com/service)) for guidance on implementing this Limited Warranty.

## FCC

### FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

[EN] This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).


Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

IC RF Radiation Exposure Statement: This equipment complies with IC RF Radiation exposure limits set forth for an uncontrolled environment.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

## Documents / Resources

	<b><a href="#">mokibo Folio Keyboard</a></b> [pdf] User Manual MKB420, 2ATQS-MKB420, 2ATQSMKB420, Folio Keyboard, Folio, Keyboard
---	--