



MOLINO GARDEN HEATER Built-in Bluetooth Speaker 4 Color LED Light Instruction Manual

[Home](#) » [MOLINO](#) » MOLINO GARDEN HEATER Built-in Bluetooth Speaker 4 Color LED Light Instruction Manual



Contents

- [1 MOLINO GARDEN HEATER Built-in Bluetooth Speaker 4 Color LED Light](#)
- [2 IMPORTANT SAFETY MEASURES](#)
- [3 SPECIFICATION](#)
- [4 INSTALLATION AND ASSEMBLY](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 TROUBLESHOOTING](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



MOLINO GARDEN HEATER Built-in Bluetooth Speaker 4 Color LED Light



This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury. If you are unable to understand the contents of this manual, please bring it to the attention of your supervisor. Do not operate this product unless you have read and understand the contents of this manual.

IMPORTANT SAFETY MEASURES

When using any kind of electrical appliance, some basic safety precautions must always be followed, including the following:

1. Instructions for visibly glowing radiant heaters warn about the possible danger of installation close to curtains and other combustible materials.
2. To avoid possible electric shocks, do not place the cable, plug or appliance in water or in any other liquid. Do not insert screwdrivers or metallic items inside the appliance.
3. If the power cable is damaged, it must be replaced by the manufacturer, its service technician or by someone else authorized by the manufacturer in order to avoid a hazard. In the event of handing of appliances by non-authorized people, the guarantee will immediately cease to be valid.
4. Do not use appliances if they are damaged.
5. To disconnect electrical appliances, wait until the engine stops and then unplug the cable from the electric socket.
6. Do not leave appliances working unattended. Ensure that the engine has come to a complete stop before dismantling appliances. Unplug appliance after each use.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
8. Do not dispose of this product as unclassified municipal rubbish. Due to the use of electrical and electric parts, this product must be collected separately
9. **CAUTION-** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
10. **WARNING:** In order to avoid overheating, do not cover the heater.
11. The heater must not be located immediately below a socket-outlet.

Notice

1. The power supplied to this unit must comply with electrical requirement on its label. Damage or fire may result if the incorrect power used.
2. Do not use the heater in somewhere with flammable objects, gas, dust.
3. In order to avoid scalding, forbid to touch the heater when it works.
4. Forbid to put anything on product surface when it is working.
5. To avoid possible electric shocks, do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
6. Do not use the heater with a programmer, timer or any other device that switches the heater on automatically. heater is not located immediately below a socket-outlet.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by Children without supervision.
8. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
9. Turn off all switches and unplug the heater if an emergency situation occurs.
10. Please contact with seller if it does not work properly. Do not try to repair the heater by yourself.
11. Please contact the seller if you find other problems not covered in this operation manual.
12. Cleaning and user maintenance shall not be made by children with supervision.

SPECIFICATION

Model: THL021-S

Voltage: 220-240V~50Hz

 
Power: 0/1500W

Weight: 6kg

Size: $\Phi 28 \times 135$ cm

Color: black

Parts	Description	Quantity
A	Main part	1
B	Base	1
C	Screw	3
D	Remote	1
E	Hex Key	1

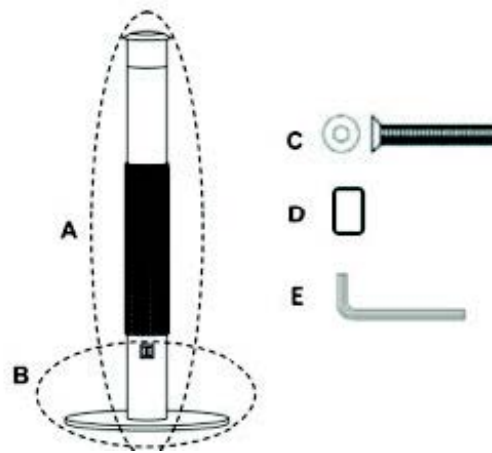


INSTALLATION AND ASSEMBLY

1. Please check all the items against the parts list after opening the box. Only all the items are complete, the installation could be followed.
2. Installation: Operation: Tighten the screws from the button by screw-driver E.




Figure 1

 3. Operation:

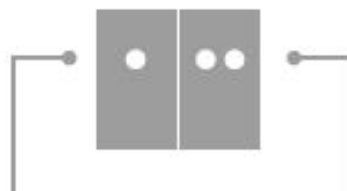


ON/OFF Switch for heating tube

ON/OFF Switch for LED & Bluetooth

To turn on/off the product, press the switch marked 

 To enable the Bluetooth and light settings, press the switch marked 

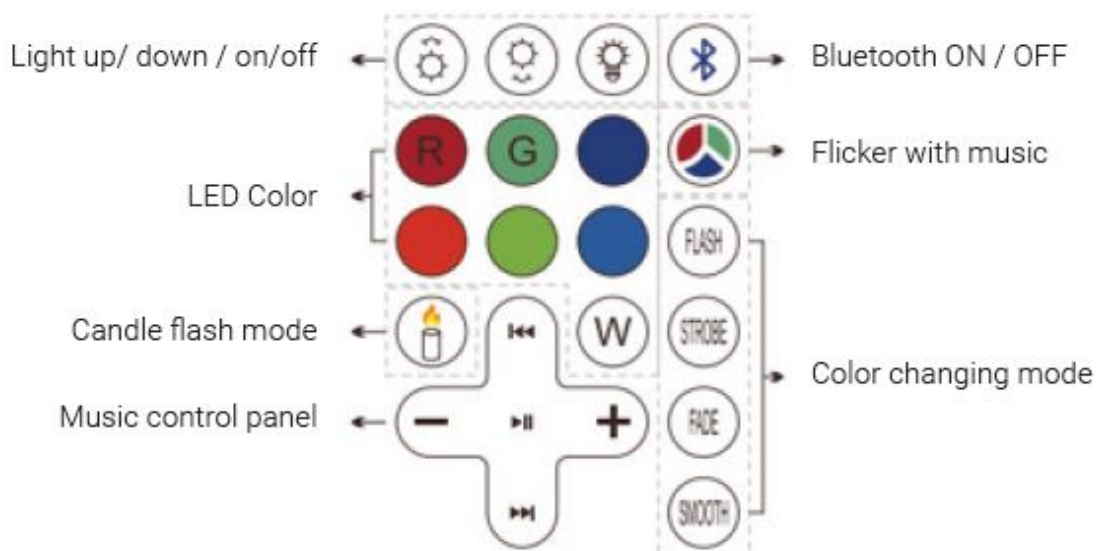

To connect/disconnect to Bluetooth, ensure the switch is on. Once the blue tooth is switched on it will make a sound to confirm. Access the Blue tooth settings on your device and select the relevant code to connect or disconnect your device to the heater.

CLEANING AND MAINTENANCE

1. Always turn off and unplug the heater before cleaning.
2. To clean the heater, use a damp cloth and make sure to dry excess water once cleaned.

ATTENTION Do not put the heater directly into any container with water in it.

TROUBLESHOOTING

1. If the heater does not emit heat after turning on, please check the power cord whether plugged into electric socket properly.
2. In first use, it is normal if the heater appears small amount of smoke and some smell because of protective-oil evaporation.
3. After a long time using, it is normal if found some black/brown tiny thing on heater surface. It is soft flocks.

ENVIRONMENTAL PROTECTION

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new once, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge.

Documents / Resources

<p>MOLINO GARDEN HEATER Built-in Bluetooth Speaker 4 Color LED Light</p> <p>CONTENTS</p> <ul style="list-style-type: none"> 1. SAFETY INSTRUCTIONS 2. TECHNICAL SPECIFICATIONS 3. INSTALLATION 4. OPERATION 5. MAINTENANCE 6. TROUBLESHOOTING 7. WARRANTY 	<p>MOLINO GARDEN HEATER Built-in Bluetooth Speaker 4 Color LED Light [pdf] Instruction Manual</p> <p>GARDEN HEATER, Built-in Bluetooth Speaker 4 Color LED Light</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

