



MONACOR ATT-325ST EAS Volume Controller Instruction Manual

[Home](#) » [MONACOR](#) » MONACOR ATT-325ST EAS Volume Controller Instruction Manual 

Contents

- [1 MONACOR ATT-325ST EAS Volume Controller](#)
- [2 Stereo Attenuator](#)
- [3 Applications](#)
 - [3.1 Important Notes](#)
 - [3.2 Electrical Connection](#)
- [4 Specifications](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



MONACOR

MONACOR ATT-325ST EAS Volume Controller



Stereo Attenuator

These instructions are intended for installers with specific knowledge of PA applications. Please read the instructions carefully prior to installation and keep them for later reference.

Applications

The attenuator is especially designed for audio systems and is inserted between the stereo speaker outputs of the power amplifier and the stereo speakers (impedance $4\ \Omega$). The maximum power rating of the attenuator is 25 W RMS per channel. The attenuator must be installed into a surface socket (e. g. MONACOR ATT-300).

Important Notes

- The unit corresponds to all relevant directives of the EU and is therefore marked with .
- The unit corresponds to the relevant UK legislation and is therefore marked with UKCA.
- The unit is suitable for indoor use only. Protect it against dripping water and splash water, high air humidity and heat (admissible ambient temperature range $0 - 40\ ^\circ\text{C}$).
- For cleaning only use a dry, soft cloth; never use chemicals or water.
- No guarantee claims for the unit and no liability for any resulting personal damage or material damage will be accepted if the unit is used for other purposes than originally intended, if it is not connected in an expert way or if it is overloaded.

If the unit is to be put out of operation definitively, dispose of the unit in accordance with local regulations.

Electrical Connection

The installation should only be carried out by skilled personnel.


1. If the audio system is switched on, switch it off completely first!
2. The figure shows the connection for a pair of stereo speakers. To connect multiple pairs of speakers to the amplifier output via a single attenuator, use a corresponding connection (series connection and, if necessary, parallel connection) to make sure that the total impedance will not fall below $4\ \Omega$. Otherwise, the power

amplifier may be damaged.

3. To facilitate handling, the terminals can be removed from their plug-in connections.

Specifications

- **Frequency range:** 20 – 20 000 Hz
- **Power rating:** 25 W, RMS per channel Ambient temperature: 0 – 40 °C
- **Dimensions, weight:** 80 × 80 × 73 mm, 277 g Mounting depth: 50 mm

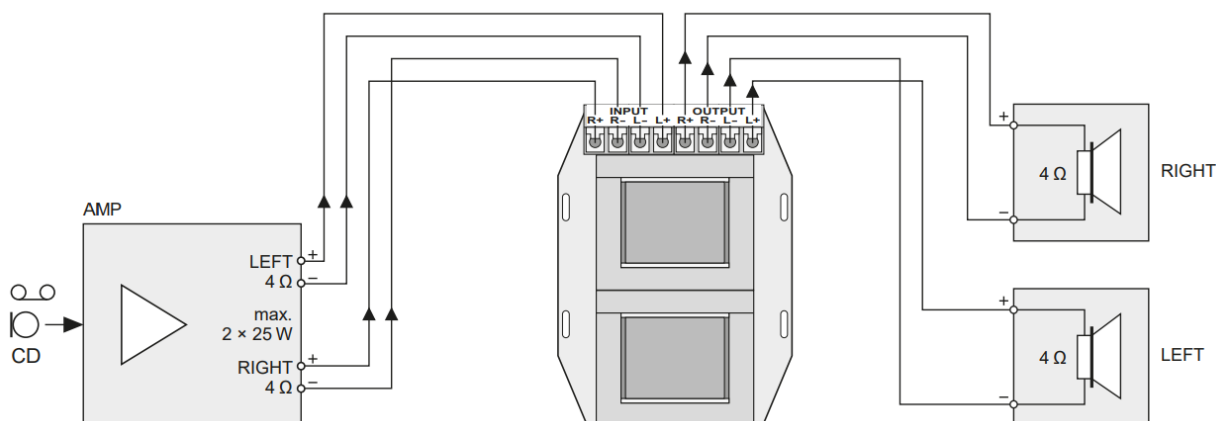


Subject to technical modification.

Copyright© by MONACOR INTERNATIONAL All rights reserved
A-0292.99.05.04.2022

MONACOR INTERNATIONAL GmbH & Co. KG Zum Falsch 36, 28307 BremenGermany

Documents / Resources

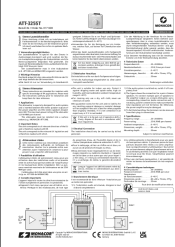	<p>MONACOR ATT-325ST EAS Volume Controller [pdf] Instruction Manual ATT-325ST EAS Volume Controller, ATT-325ST, ATT-325ST Volume Controller, EAS Volume Controller, Volume Controller</p>
---	---