

  
**MONACOR**  
LST-42 Pair of  
Universal Brackets



# MONACOR LST-42 Pair of Universal Brackets Instruction Manual

[Home](#) » [MONACOR](#) » MONACOR LST-42 Pair of Universal Brackets Instruction Manual 

## Contents

- [1 MONACOR LST-42 Pair of Universal Brackets](#)
- [2 Applications](#)
- [3 Installation](#)
- [4 Specifications](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**MONACOR LST-42 Pair of Universal Brackets**



### Pair of Universal Brackets

These instructions are intended for users without any specific technical knowledge. Please read the instructions carefully prior to installation and keep them for later reference.


### Applications

LST-42 is a pair of universal brackets designed for wall or ceiling mounting of loads such as speaker cabinets. Each bracket consists of two identical mounting plates joined via a connecting piece with two hexagon socket screws. The arrangement of the two joints allows the load to be swivelled and tilted. The joints are toothed and will keep the bracket in the position adjusted.

**ATTENTION!** The maximum permissible load of 8 kg must not be exceeded. This value applies to a centric load on the mounting plates. Any leverage forces in the event of objects protruding significantly will reduce the overall load-bearing capacity and must be taken into account accordingly.

### Installation

1. Unscrew one of the two hexagon socket screws, remove the corresponding mounting plate and screw it to the desired position on the wall or ceiling using screws and dowels of sufficient size (dimensions of the mounting holes → fig 2) Make sure the mounting position offers sufficient stability.

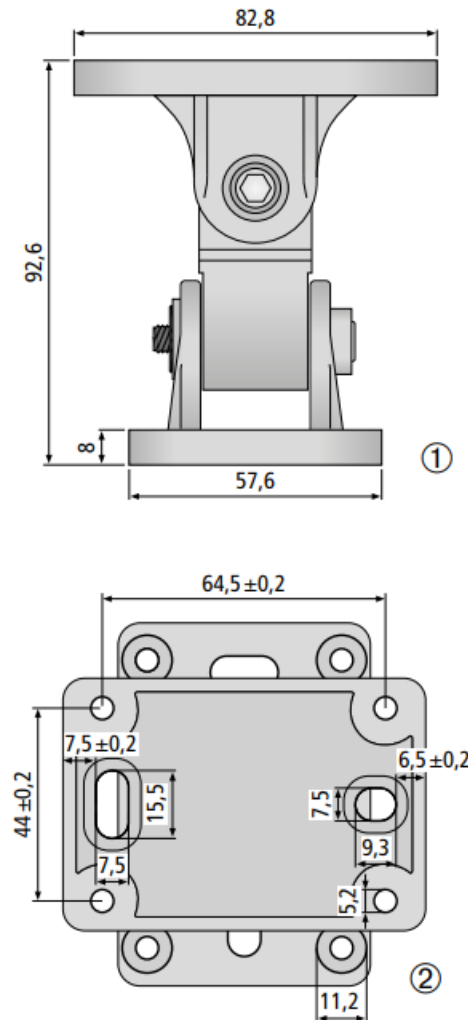

2. Attach the other mounting plate of the bracket to the housing of the load (speaker cabinet for example).
3. Reassemble the two parts of the bracket and reinsert the screw that was removed, align the load and tighten the screw.
4. To rotate the load around the other axis, loosen the second hexagon socket screw, align the load and tighten the screw again.
5. Make regular checks to ensure that the bracket is securely fastened; retighten the hexagon socket screws if necessary.

No guarantee claims for the bracket and no liability for any resulting personal damage or material damage will be accepted if the bracket is used for other purposes than originally intended, if it is not safely installed or if it is overloaded.

## Specifications

- Load capacity: 8 kg (with centric load) Material: plastic
- Colour: black
- Mounting plates: 828 × 576 mm Weight (pair): 300 g

Subject to technical modification.

MONACOR INTERNATIONAL GmbH & Co. KG

- Zum Falsch 36
- 28307 Bremen
- Germany © MONACOR INTERNATIONAL.

All rights reserved.

## FAQ

- **Q: Can the LST-42 brackets be used for heavy speaker cabinets?**

A: The maximum load capacity of 8 kg should not be exceeded to ensure safe usage with speaker cabinets or similar loads.


- **Q: How do I adjust the position of the load once mounted?**

A: Loosen the appropriate hexagon screw, align the load as needed, and retighten the screw securely to maintain stability.

- **Q: What should I do if I notice the bracket becoming loose over time?**

A: Regularly check the bracket's fastenings and tighten the screws if necessary to prevent any accidents or damage.

## Documents / Resources

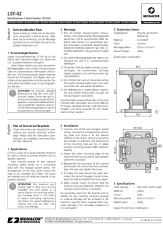	<p><a href="#">MONACOR LST-42 Pair of Universal Brackets</a> [pdf] Instruction Manual  LST-42 Pair of Universal Brackets, LST-42, Pair of Universal Brackets, of Universal Brackets, U  niversal Brackets</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.