



MONACOR M-32CD CD Player Module Instruction Manual

[Home](#) » [MONACOR](#) » MONACOR M-32CD CD Player Module Instruction Manual 

Contents

- [1 MONACOR M-32CD CD Player Module](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Applications](#)
- [5 Safety Notes](#)
- [6 Installation](#)
- [7 Operation](#)
- [8 Maintenance](#)
- [9 Specifications](#)
- [10 Overview: Functions of the buttons](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



MONACOR M-32CD CD Player Module



Product Information

The CD Player Module (Model: M-32CD) is a versatile audio player that can play standard audio CDs (CD-DA), as well as CDs, USB storage devices, and SD/SDHC memory cards with MP3 files. It also supports WMA file format. The module has various input and output ports, including +12V power input, audio output for left and right channels, and ground connection. The module is designed to be installed by a qualified professional.

Product Usage Instructions

Installation:

- The CD Player Module should only be installed by a qualified professional.
- Connect the +12V power input to the red wire and the ground connection to the black wire.
- Connect the audio output for the left channel to the L-CH port and the audio output for the right channel to the R-CH port.

Operation:

- After connecting the 12V power supply, the module will turn on and display “Welcome” on the screen.
- Use the buttons on the remote control or on the module itself to control the playback:
 - PLAY/PAUSE button: Press this button to play or pause the current track.
 - REV-SKIP-CUE button: Use this button to skip to the previous track or cue to a specific part of the current track.
 - STOP button: Press this button to stop playback.
 - EJECT button: Press this button to eject the CD or remove the USB/SD card.
 - FUNC button: Use this button to switch between different playback modes, such as playing all tracks or programming a custom sequence.

Programming Custom Sequence

- Press the FUNC button to enter the programming mode.
- For a standard audio CD (display shows “CDA”), enter the track number using the numeric buttons.
- For an MP3 playback, enter the folder number using the numeric buttons.
- Continue programming the desired tracks in the sequence.
- Press PLAY/PAUSE (II) to start playing the programmed sequence (display shows “MEM”).
- If you want to restart the programmed sequence, press PROG and then PLAY/PAUSE (II) again.

Additional Functions:

- DISPLAY button: Press this button to view track information, folder name, and number of folders and tracks.
- ID3 button: Use this button to access search functions for MP3 playback.
- FIND button: Press this button to search for a specific track or folder.
- A-B button: Use this button to enable single track playback and pause at the end of a track.
- REPEAT button: Press this button to enable repeat playback of a track or all tracks.
- MUTE button: Press this button to mute the audio output.

Please refer to the user manual for more detailed instructions and technical specifications of the CD Player Module.

CD Player Module

These instructions are intended for users without any specific technical knowledge. However, the installation of the module (chapter 3) must be made by qualified personnel only. Please read these instructions carefully prior to

operation/ installation and keep them for later reference.

Applications

The CD player module M-32CD is designed for installation into a basic device (e. g. active speaker system, amplifier) and offers extensive features, such as programming of a title sequence, continuous repeat, random replay, single title replay, remote control of the PLAY/ PAUSE function via a momentary foot switch. The player allows to replay standard audio CDs (CD-DA) and CDs, USB storage media and SD / SDHC memory cards with MP3 files.

Note:

1. The player also supports the reproduction of WMA files.
2. Depending on the CD type, the CD burner and the burning program used, problems may occur when CD-RWs are replayed.
3. Due to the large number of storage device manufacturers and device drivers, it cannot be guaranteed that all storage media are compatible with the player.

Safety Notes

The module corresponds to all relevant directives of the EU and is therefore marked with . The module corresponds to the relevant UK legislation and is therefore marked with UKCA.

- The module is suitable for indoor use only. Protect it against dripping water and splash water, high air humidity and heat (admissible ambient temperature range 0 – 40 °C).
- Do not use the basic device with the installed module

1. if the module or the device is visibly damaged,
2. if a defect might have occurred after the device was dropped or suffered a similar accident,
3. if malfunctions occur.

Any repairs on the module or the device must be carried out by specialists.

No guarantee claims for the module and no liability for any resulting personal damage or material damage will be accepted if the module is used for other purposes than originally intended, if it is not correctly operated or installed or not expertly repaired.

If the module is to be put out of operation definitively, dispose of the module in accordance with local regulations.

Installation

The CD player module must only be installed by qualified personnel!

1. Always switch off the basic device into which the module is to be inserted and disconnect it from the mains!
2. To accommodate the module, make a cutout of 155 mm × 50 mm on the basic device. The module must be installed into the device in a horizontal way.
3. Make the electrical connection to the basic device:

Marking	Core colour	Connection for
Operating Voltage		
+12V	red	+12 V (0.8 A)
GND	black	ground
Audio Output		
L-CH	white	left channel
S-GND	black	ground
R-CH	red	right channel

- The function PLAY/ PAUSE (▶||) can be re-mote-controlled by means of an optional momentary foot switch (e. g. FS-60 from MONACOR). Connect the foot switch to the 3.5 mm jack on the rear side of the module. For a foot switch with a 6.3 mm plug (e. g. FS-60) use a corresponding adapter.
- Push the module through the cutout on the basic device and fix it via its front panel with four screws.

Operation

Infrared remote control

To insert the batteries (2 × 1.5 V, size A A A), re-move the battery compartment cover on the rear side of the remote control. Insert the batteries as indicated in the battery compartment. Close the compartment with the cover. If the remote control is not in use for a longer period of time, remove the batteries as a precaution to prevent any damage due to battery leakage. When you press a button on the remote control, always direct the remote control to-wards the infrared sensor (D). There must be no obstacles between the remote control and the sensor.

If the range of the remote control decreases, the batteries are exhausted and must be replaced.

Never put batteries in the household waste. Always dispose of the batteries in accordance with local regulations.

Replaying music titles

After applying the 12 V operating voltage, the module is switched on. The display will show Welcome. Inserting a replay medium

- Insert a CD with the lettering facing up into the CD slot (A) until it is pulled in automat-ically.
- Connect a USB flash drive to the USB port (B) or connect a hard disk (with individual power supply, if required) to the USB port.
- Insert a memory card into the memory card slot (C), the notched corner of the card to the right. To remove the card, slightly push it in to eject the card from the slot.

After reading in a medium, its replay will start automatically. All operating options are listed in chapter 7.


Maintenance

Protect the module from dust, vibrations, hu-midity and heat. For cleaning only use a dry, soft cloth; never use water or chemicals.

Note concerning sound interruptions and reading errors: Cigarette smoke and dust will easily pene-trate through all openings of the module and will also settle on the optics of the laser sampling system. If this deposit should cause reading errors and sound interruptions, the CD player must be cleaned by skilled personnel. Please note that there will be a charge on cleaning, even during the warranty period!



Specifications

- **Frequency range:** 20 – 20 000 Hz
THD: < 0.1 %
- **Channel separation:** > 60 dB
- **S / N ratio:** > 70 dB
- **Audio output:** 1.2 V
- **Power supply:** 12 V, 800 mA
- **Ambient temperature:** 0 – 40 °C
- **Dimensions:** 174 × 52 × 160 mm*
- **Mounting cutout:** 155 × 50 × 150 mm*
- **Weight:** 1.145 kg * width × height × depth

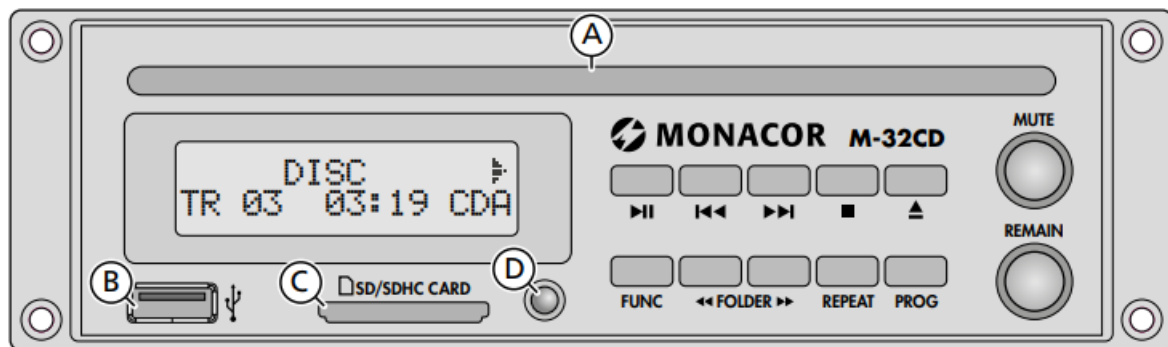

Overview: Functions of the buttons

Button			Function
on the remote control ↓			
on the module ↓			
①	▶ PLAY/PAUSE	×	to start the replay and to switch between replay and pause This function can also be operated via a foot switch connected to the module: see chap. 3, item 4.
②	◀◀ ▶▶ REV-SKIP-CUE	×	press button briefly: REV (◀◀) = to go to the beginning of the title; each time the button is pressed again, the player will go back one title at a time; CUE (▶▶) = to go to the next title keep button pressed for fast reverse/forward (sound muted for MP3 titles)
③	■ STOP	×	to stop the replay
④	▲ EJECT	×	to eject the CD If the CD is not removed, the player will automatically pull it in again after 10 seconds.
⑤	MUTE	×	to mute/unmute the sound
⑥	FUNC	×	to switch between CD (DISC), USB medium (USB) and memory card (CARD)
⑦	◀◀ FOLDER ▶▶	×	in MP3 mode: to go to the first title in the previous/next folder
⑧	REPEAT	×	to switch between: PLAY ALL = all titles will be replayed once (basic setting) REPEAT TRACK (🎵) = the title selected will be repeated continuously REPEAT FOLDER (📁) = all titles in the folder selected will be repeated continuously (in MP3 mode only) REPEAT ALL (🎵) = all titles will be repeated continuously RANDOM REPEAT (RDM 🎵) = all titles will be replayed continuously in random order RANDOM PLAY (RDM) = all titles will be replayed once in random order INT PLAY (INT) = the first 10 seconds of each title will be replayed After switching to stop, the basic setting PLAY ALL will be activated again.
⑨	PROG	×	Programming a user-defined title sequence (64 titles max.) 1. In the stop mode, press PROG: The programming mode will be activated (indication PROGRAM). Press all further buttons respectively within 15 seconds; otherwise, the programming mode will be exited. In this case, press PROG once again. 2. For a standard audio CD (indication CDA): Enter the title number with the numerical keys. Press PROG to confirm. For a replay medium with MP3 files: Enter the folder number with the numerical keys. Press PROG to confirm. Then enter the title number within the folder with the numerical keys. Press PROG to confirm. Note: You can also use REV and CUE (◀◀ and ▶▶) to select the title numbers / folder numbers. 3. Proceed in the same way to program all other titles. 4. Press PLAY/PAUSE (▶) to start the replay of the title sequence (indication MEM). 5. If no repeat function has been activated, the player will stop when the title sequence has been replayed. To restart the title sequence, first press PROG, then PLAY/PAUSE (▶). To delete the title sequence, press STOP (■) in the programming mode.
⑩	REMAIN	×	function available for standard audio CDs (indication CDA) only: to switch the time indication: time already played of the title → remaining time of the title → remaining time of the CD

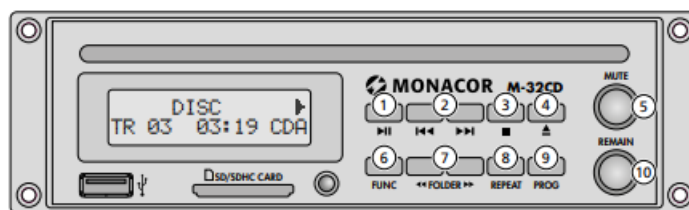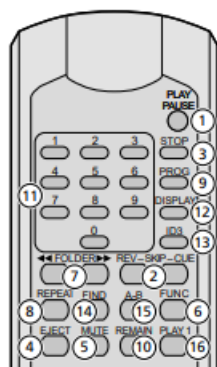

Subject to technical modification.



All rights reserved by MONACOR® INTERNATIONAL GmbH & Co. KG. No part of this manual may be reproduced in any form or by any means for any commercial use.

All rights reserved by MONACOR® INTERNATIONAL GmbH & Co. KG. No part of this manual may be reproduced in any form or by any means for any commercial use.

Copyright© by MONACOR INTERNATIONAL

All rights reserved

MONACOR INTERNATIONAL GmbH & Co. KG Zum Falsch 36, 28307 Bremen Germany

<p>CD-Spieler-Modul CD Player Module</p>   <p>M-32CD Stereo-4-Track-60-1500W</p> <p>FUNKTIONS- UND BETRIEBSANLEITUNG REPAIR-ADVICE AND OPERATING INSTRUCTIONS NOTES D'UTILISATION ET D'ENTRETIEN ISTRUZIONI PER L'USO E MONITORAGGIO PER L'USO</p>	<h1>MONACOR M-32CD CD Player Module [pdf] Instruction Manual</h1> <h2>M-32CD CD Player Module, M-32CD, CD Player Module, Player Module, Module</h2>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------

- **MONACOR: Monacor**

Manuals+,