



**S3 Maximum 22 kg
0 4 Years Cybex
Mios Stroller**



moni S3 Maximum 22 kg 0 4 Years Cybex Mios Stroller Instruction Manual

[Home](#) » [MONI](#) » **moni S3 Maximum 22 kg 0 4 Years Cybex Mios Stroller Instruction Manual**

Contents

- [1 moni S3 Maximum 22 kg 0 4 Years Cybex Mios Stroller](#)
- [2 Product Information](#)
- [3 Product Information](#)
- [4 Product Usage Instructions](#)
- [5 WARNINGS AND RECOMMENDATIONS FOR SAFE USE](#)
- [6 PARTS](#)
- [7 ASSEMBLY STEPS AND USE](#)
- [8 CLEANING AND MAINTENANCE OF THE PRODUCT](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



moni S3 Maximum 22 kg 0 4 Years Cybex Mios Stroller



Product Information

Specifications:

- **Product Name:** Baby Stroller BUGGY
- **Item Number:** S3

Product Information

The Baby Stroller BUGGY (Item Number S3) is designed to provide a comfortable and safe ride for your child. It meets EN 18881:2018+A1:2022 and EN 1888-2:2018+A1:2022 safety standards, ensuring high-quality construction and materials.

Product Usage Instructions

1. Assembly:

Follow the provided instructions to assemble the stroller properly. Ensure all components are securely attached.

2. Adjustments:

Adjust the seat position, canopy, and harness straps according to your child's comfort and safety needs.

3. Folding and Unfolding:

Learn how to fold and unfold the stroller for easy transportation and storage. Practice this mechanism before use.

4. Brake System:

Familiarize yourself with the brake system to ensure you can safely stop and secure the stroller when needed.

5. Cleaning and Maintenance:

Regularly clean the stroller with a damp cloth and mild soap. Check for any loose parts or signs of wear and tear.

FAQ:

- **Q: How do I clean the stroller?**

A: Use a damp cloth with mild soap to wipe down the stroller fabric and frame. Avoid using harsh chemicals that may damage the materials.

- **Q: Can I adjust the seat recline?**

A: Yes, you can adjust the seat recline to provide different seating positions for your child's comfort.

- **Q: How do I contact customer support?**

A: You can reach our customer support team at +359 02 936 079 or email us at office@moni.bg for assistance.

IMPORTANT! KEEP FOR FUTURE REFERENCE!

READ CAREFULLY! CONTAINS IMPORTANT INFORMATION, GUIDELINES, AND RECOMMENDATIONS FOR THE PRODUCT AND ITS SAFE USE.

WARNING!

THE SCHEMES AND FIGURES IN THIS MANUAL ARE ILLUSTRATIVE AND FOR GUIDANCE ONLY. THE PRODUCT YOU HAVE BOUGHT MAY DIFFER FROM THEM.

- The manufacturer reserves his right to make changes to the design of the product in order to improve it. This stroller is suitable for babies and children aged 0 to 4 years or up to 22kg (whichever comes first). A five-point belt ensures the safety of the child. The positions of the child's backrest, the footrest, and the sun visor are adjustable.
- The stroller is manufactured in accordance with the requirements of the European standard in 2 parts: EN 1888-1:2018+A1:2022 – 'Child care articles. Wheeled child conveyances. Part 1: Pushchairs and prams.' and EN 1888-2:2018+A1:2022 'Child care articles. Wheeled child conveyances. Part 2: Pushchairs for children above 15 kg and up to 22 kg'.

WARNING!

Your child will be maximally protected if you follow the warnings and recommendations from the instructions! Pay attention to the warnings and provide all necessary to avoid the risk of injury or impairment of the child if you do not provide its safety! You are responsible for the safety of the child, if you do not follow and do not comply with these warnings and recommendations! Make sure that anyone who uses the stroller is familiar with the instructions and follows them. Do not use parts or accessories for the stroller, which are not approved by the manufacturer or the distributor, because this may put your child at risk and lead to the voiding of the warranty of the stroller.

WARNINGS AND RECOMMENDATIONS FOR SAFE USE

WARNING:



 
- **IMPORTANT** – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.
- NEVER LEAVE THE CHILD UNATTENDED.
- ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.
- TO AVOID INJURY ENSURE THAT THE CHILD IS KEPT AWAY WHEN UNFOLDING AND FOLDING THIS PRODUCT.
- DO NOT LET THE CHILD PLAY WITH THIS PRODUCT.
- AS SOON AS THE CHILD CAN SIT UP BY ITSELF, ALWAYS USE A SAFETY BELT.
- THIS SEAT UNIT IS NOT SUITABLE FOR CHILDREN UNDER 6 MONTHS.
- ALWAYS USE THE RESTRAINT SYSTEM.
- CHECK THAT THE PRAM BODY SEAT UNIT OR CAR SEAT ATTACHMENT DEVICES ARE CORRECTLY ENGAGED BEFORE USE.
- THIS PRODUCT IS NOT SUITABLE FOR RUNNING OR SKATING.
- USE THE SEAT (SUMMER BASKET FUNCTION) FOR A CHILD WEIGHTING LESS THAN 22 KG (0-48 MONTHS).
- USE THE BASKET FOR A CHILD THAT CANNOT SIT WITHOUT SOMEONE'S HELP, TO ROLL AND STAND UP ON ITS OWN, USING YOUR HANDS AND KNEE SUPPORT! MAXIMUM WEIGHT OF THE CHILD: 9 KG.
- USE THE SEAT ONLY ON A RIGID, HORIZONTAL, AND DRY SURFACE!
- NEVER USE THE SEAT ON A STAND!
- FOR A NEWBORN BABY USE THE LOWEST POSITION OF THE BACKREST!
- USE THE POSITION OF THE BACKREST IN THE SEATING POSITION FOR CHILDREN AFTER 6 MONTHS OF AGE!
- KEEP OUT OF FIRE!
- DO NOT LIFT THE STROLLER BY THE SAFETY BOARD!
- The assembly of the product is only to be done by an adult!
- Do not put an extra mattress thicker than 25 mm in the seat!
- Always activate the rear brake when placing and removing the child from the stroller!
- Before use, make sure that the seat belts are properly fitted and adjusted.
- The maximum load on the luggage basket should not exceed 3 kg!
- Do not overload the stroller! Any load placed and/or attached to the handle, board, backrest, canopy, and /or sides of the stroller can affect its stability! The stroller and the seat are designed to carry only one child!
- Do not use spare parts and other components not supplied by the manufacturer! The manufacturer accepts no liability for safety if used spare parts, different from the original ones or approved by the approved type.
- Do not make changes or modifications to the construction! If necessary, contact your supplier or an authorized service center for advice and repair.
- The car seat does not replace the baby seat or crib. When the baby does not need sleep, it should be placed in a suitable baby stroller, seat, or crib.
- Do not use the product if you find any missing or damaged parts!
- Do not allow children under 3 years of age to fully assemble the product to avoid access to small and disassembled parts!
- Do not place additional cords or ties on the product to avoid the risk of suffocation!
- Do not use the stroller on the escalator and be careful when getting down or up on the sidewalk.
- Keep the plastic packaging away from children to avoid the risk of suffocation!
- DO NOT store the product in humid places and direct sunlight!

PARTS

SEE FIGURE PD:




PD:

1. Handle
2. Canopy
3. Safety board
4. Upholstery
5. Adjustable footrest
6. Adjustable seat
7. Five-point seat belt
8. Folding frame button.


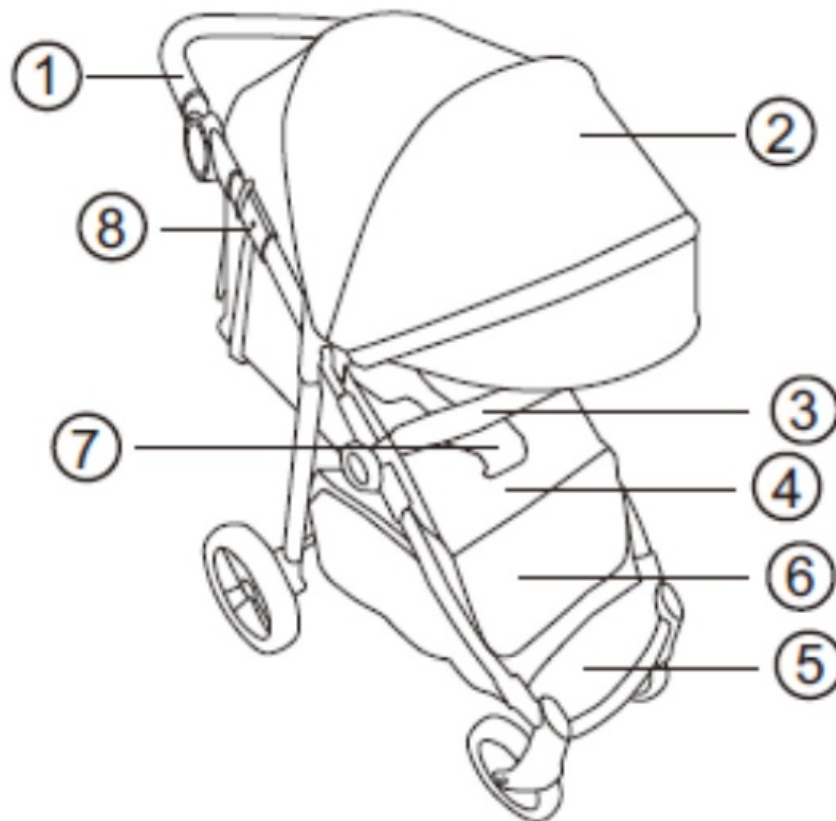


ASSEMBLY STEPS AND USE

   
1. **UNFOLDING THE STROLLER – FIGURES 1-3:** Pull the handle up until the frame reaches the end position. You should hear a click when the frame locks.

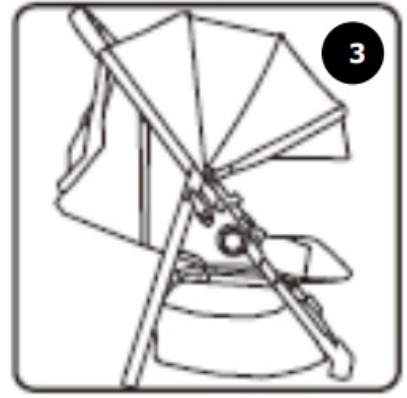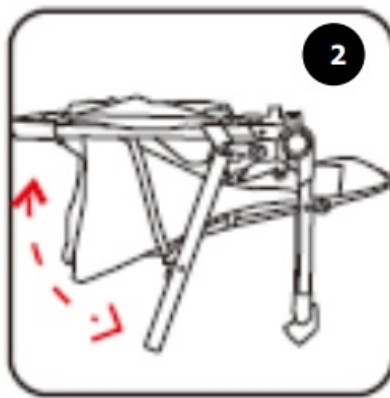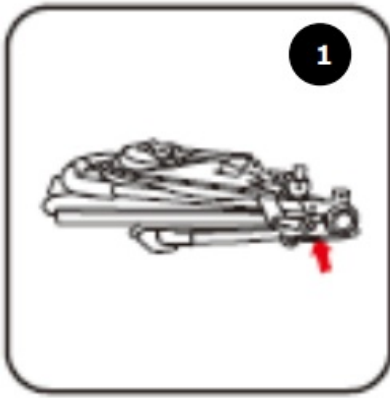

  
- 2. INSTALLING AND REMOVING THE FRONT WHEELS – FIGURES 4-5:** Insert the front wheel into the front frame hole, as shown in Figure 4. Fix it until you hear a “click”. To remove the front wheels, press the metal clip and the wheels are removed easily by pulling out (Figure 5).

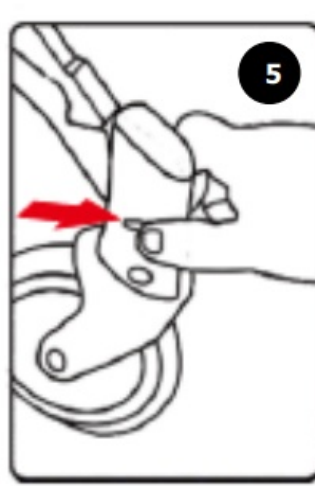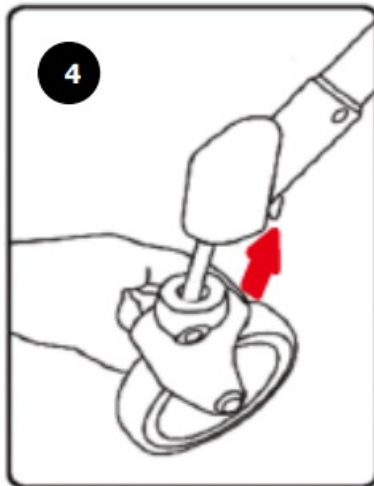

 
- 3. ORIENTATION OF THE FRONT WHEELS – FIGURE 6:** Press the lever downwards to activate the straight direction of the front wheels. Pull the lever upwards to activate the swiveling of the front wheels.

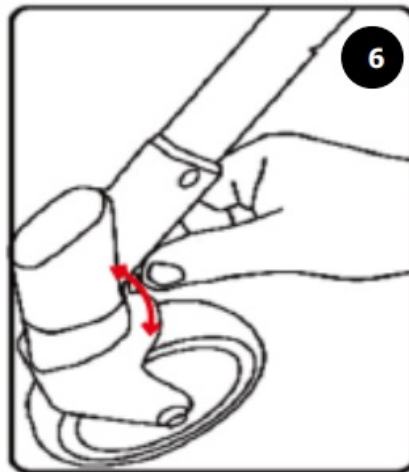

 
- 4. INSTALLING AND REMOVING THE REAR WHEELS – FIGURE 7:** Insert the rear wheel into the hole of the rear frame, as shown in Figure 7. Fix until you hear a click. To remove the rear wheels, push the button and the wheels are released quickly by pulling out.

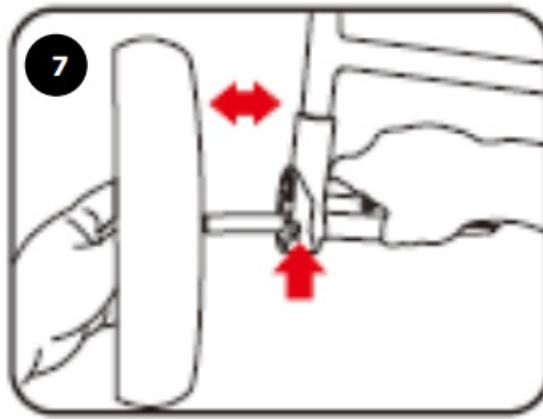

 
5. **USING THE BRAKE ON THE REAR FRAME– FIGURE 8:** To activate the parking device and lock the two rear wheels, press down the pedal on the rear axle (Figure 8). To release the brake, pull up the pedal using your foot.

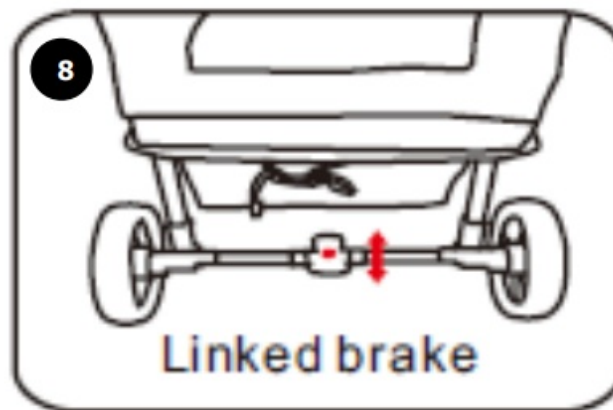

 
6. **ADJUSTING SEAT TILT – FIGURES 9:** Press the strap system button on the back of the seat and move it up to adjust the seat to the seated position. Press the strap system button and move it down to adjust the seat to the horizontal position.

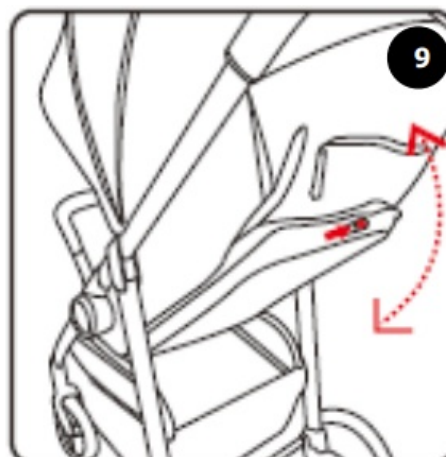

 7. **USING THE FOOTREST – FIGURE 10:** To adjust the footrest, hold the button on both sides for its release.

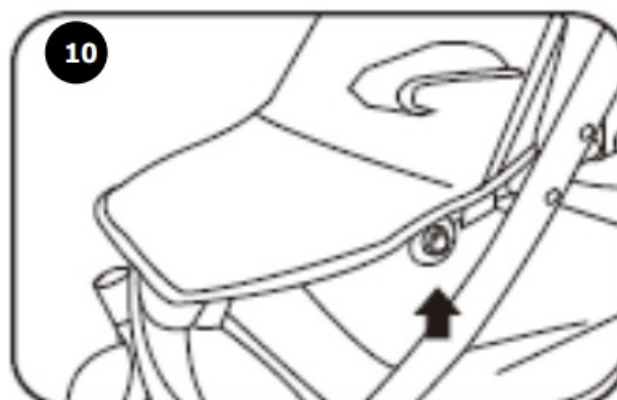

 
8. **ATTACH AND DETACH THE SAFETY BOARD – FIGURE 11:** Insert both ends of the safety board into the two side holes of the frame. Secure the guard until you hear a click. To remove the guard, press the release button on both sides of the frame and pull at the same time. The safety bumper has the function of pivoting, it can be opened on just one side for easier taking care of a baby or putting it in or taking it out.

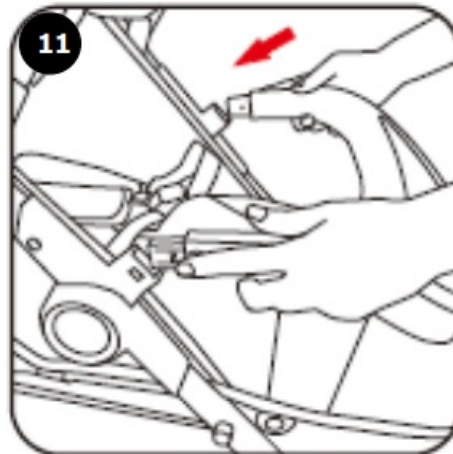



9. **HANDLE ANGLE ADJUSTMENT – FIGURE 12:** To adjust the angle of the handle, hold the button on either side and place it in the desired position.



 10. **FOLDING THE STROLLER – FIGURES 13-15:** Before folding the stroller, activate the parking device and fold the canopy. Simultaneously hold the unlock button and the fold button on the stroller frame (figure 12) and push the handle forward until the stroller folds.

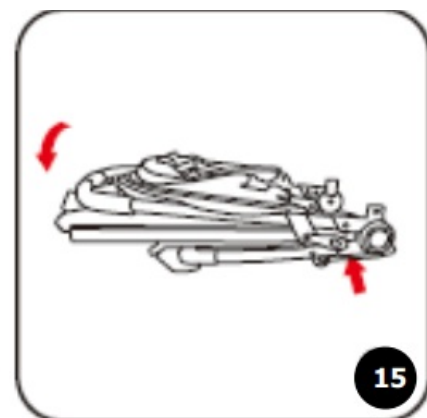

  11. **5-POINT SAFETY BELT – FIGURE 16:** To attach the belt, insert the two tabs of the lap belt into the buckle on both sides, should click when properly inserted. The shoulder straps are fitted as the metal tabs are assembled and inserted into the buckle. The sliding adjusters are fitted and must be carefully adjusted on each side so that the belt is fastened around your child without causing discomfort. To release the belt, press the buckle button, and pull to open.

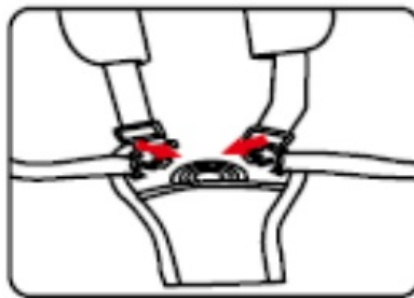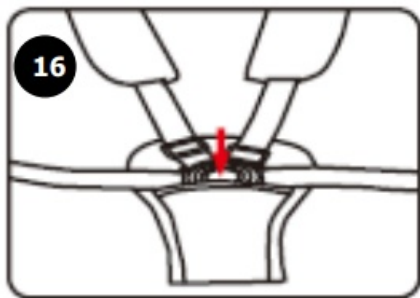

CLEANING AND MAINTENANCE OF THE PRODUCT

1. Regularly check the locking devices, brakes, safety belts and buckles, connectors, and fixing mechanisms to be sure that they are in good working order and are not worn or damaged.
 2. If you find loose, broken, and damaged parts, they should be repaired by an authorized service or replaced with original parts. Otherwise, the warranty of the stroller will be annulled.
 3. Do not make modifications to the construction and do not replace the work parts with ones that are not suitable and are not original. This may lead to incorrect functioning of the stroller and injury of your child. And also to annulment of your warranty of the stroller.
 4. To clean the cover, the dirty plastic and metal parts of the product, use a soft cotton cloth or sponge, wetted with water.
 5. Never clean with agents containing abrasive particles, ammonia, bleach, or alcohol. DO NOT wash in the laundry the removable and accessories – parts and accessories – canopy, etc., because this may lead to their damage. Otherwise, the warranty will be annulled.
 6. Always after cleaning leave the stroller to dry completely and afterwards use it or store it.
 7. Store the stroller indoors. The effects of the environment – sea air, roads sprinkled with salt, acid rains, etc., as well as the storage outdoors, lead to the emergence of corrosion.
 8. Do not store the stroller in a humid environment. In case you have used the stroller in a humid environment, you should unfold it, wipe it with a dry cloth, and let it dry completely naturally. Mold can appear if you store it while wet.
 9. Too much sunlight will affect the aging of the stroller parts and the fabric.
 10. Do NOT place other objects inside the stroller – luggage, bags with goods, handbags, etc. when you use it or store it, because this could damage the stroller and may lead to harm to your child inside of it.
- Not following this instruction will lead to guarantee cancellation.

 
Manufactured for Moni in PRC

Manufacturer and Importer:

Moni Trade Ltd.

- **Address:** Bulgaria, Sofia, Trebich, 1 Dolo Str.,
- **Phone number:** 003592/936 07 90
- **Website:** www.moni.bg.

Documents / Resources



This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.