

[Skip to content](#)

 
Manuals+

User Manuals Simplified.

MONODEAL MD-109 Rechargeable Portable CD Player with Built in Speakers User Guide

[Home](#) » [Monodeal](#) » MONODEAL MD-109 Rechargeable Portable CD Player with Built in Speakers User Guide 📖

MONODEAL MD-109 Rechargeable Portable CD Player with Built in Speakers

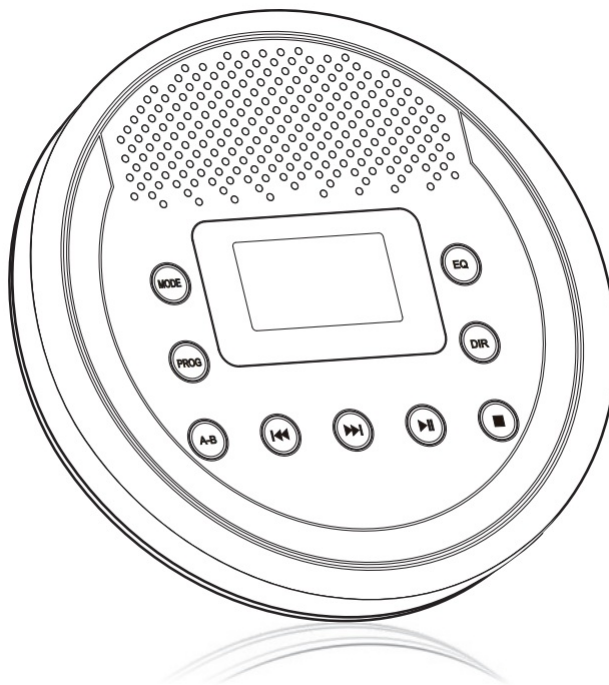

Contents

- [1 IMPORTANT SAFETY INSTRUCTIONS](#)
- [2 PACKAGING & PRODUCT](#)
- [3 TROUBLESHOOTING](#)
- [4 USER GUIDE](#)
- [5 PLAY](#)
- [6 OTHER FEATURES](#)
- [7 SPECIFICATIONS](#)
- [8 Documents / Resources](#)
- [8.1 References](#)
- [9 Related Posts](#)

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player and keep it for later reference.

Warning:

The player

To reduce the risk of fire or avoid the damage to the human body, please follow the instructions below:

1. Never touch the lens of the device. Always keep the disc compartment closed to prevent dust from collecting on the lens.
2. If the device is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.
3. Clean the device with a clean, damp leather cloth. Do not use any cleaning agents.
4. If the player fails to work, please contact our after-sales staff in time, professional technical support staff will provide you with detailed answers.
5. The player can not be used or stored in moist environment, please keep the player away from any liquid, steam or vapor, such as rain drop, mist etc.
6. Please do not place any liquid or metal gadgets onto the player, such as pin or a cup of coffee.
7. Please do not expose the player to the sunlight and keep it away from fire heater. The player can not be placed under high temperature environment.
8. All professionals with extensive electronic knowledge and maintenance experience are allowed to disassemble the player for maintenance. The replacement of spare parts must be done in strict accordance with the parameters of the circuit design.
9. Please do not stick or hit the player with sharp objects.
10. There are light emitting diodes in this player, staring directly with eyes should be avoid to prevent visual impairment from being caused.
11. Children under 12 years is not allowed to use the player individually.
12. When charging, ensure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.

Battery

If the player you purchased contains batteries, please do not disassemble the player or charge the player with other adapters that do not meet the electrical parameters of this product to avoid circuit failure. For your safety, please treat the built-in high-capacity polymer lithium battery by following the instructions below:

1. Please do not remove the battery pack.
2. Please do not beat or impact this player.
3. Please do not make the battery short circuit or pierce it.
4. Please do not place the player under high temperature which is above 140°F (60°C).
5. Please do not put the battery in a fire.
6. If the battery has been damaged, please ask a professional to replace the battery with same specification, or contact our after-sales support for help.

Hearing protection

Listen at medium volume:
Please adjust the volume to an appropriate level. If the volume is too high, it may damage your hearing or even cause a permanent damage.

Set the volume to a low level:
Increasing the volume slowly, until a comfortable, clear sound can be heard.

Listen to the audio within a reasonable time frame:
Long time listening, even at a reasonable volume may cause damage to your hearing. Please use the product properly and get a rest when necessary.

Environmental protection

To protect the environment and human health, please follow local laws and regulations on the abandon of the package, electronic product or battery. Please do not put the product together with household waste.

PACKAGING & PRODUCT

What’s in the box

- 1* CD player
- 1* 3.5 to 3.5mm AUX cable
- 1* USB to micro usb charging cable
- 1* User manual
- 1* Earphones
- 1* Storage bag

The CD player

Item	Function	Item	Function
1	TF card	10	A-B
2	Power ON/OFF Switch	11	Previous
3	DC In 5V	12	Next
4	Charging LED	13	Play/Pause
5	Earphone Port	14	Stop
6	Volume Knob	15	DIR
7	Hold ON/OFF	16	EQ
8	Mode	17	Open
9	PROG		

The CD player

TROUBLESHOOTING

Problems	Reasons	Solutions
Cannot be turned on.	Switch is not turned on.	Please turn the OFF/ON button on the side to ON.
	HOLD is be turned on.	Please turn the HOLD button on the side to ON.
	The battery is exhausted.	Charge the battery.
Cannot read discs.	The disc is installed incorrectly.	Please contact us or ask a professional for repairs.
	The disc cannot be recognized.	<ol style="list-style-type: none"> 1. Make sure the label side of the disc is facing up 2. Ensure the disc is inserted fully into the place.
	The disc is dirty or damaged.	<p>The player is only compatible with CD, CDR, MP3, H</p> <ol style="list-style-type: none"> 1. Make sure the disc is not heavily scratched or c 2. Wipe the disc gently from the center radially ou cloth; 3. Try another new disc to check if the disc is fault
Cannot charge battery.	The loader is dirty.	Wipe the lens gently with a degreasing cotton swab.
	There is no current at power outlet.	NOTE: DO NOT TOUCH THE LENS WITH YOUR H
	The plug is not plugged in correctly.	Make sure the power outlet is working.
Automatically skips part of the contents of disc.	The charger is damaged.	Make sure that the two plugs of the power cords are
	The player is damaged.	Replace the charger with another one matching the
	The player has MODE function (Repeat, Repeat all, Random play, Preview play), Preview play means that only 10 s per track will be played.	Please ensure the Preview play MODE is off
Noisy and screaming when it plays.	Usage time of the disk may be too long, so the disk is not smooth.	<ol style="list-style-type: none"> 1. Make sure the disc is not heavily scratched or c 2. Wipe the disc gently from the center radically o cloth; 3. Try another new disc to check if the disc is fault
	If there is a "Jiji" sound inside the earphone, it may be caused by scratching of the disc.	Please change to another disc, and do not use the o from damage.

USER GUIDE

How to insert a disc

Push the OPEN button to the right to open the door. Insert your index finger into the center hole of the disc and take the edge of the disc with your thumb. Keep the side with words upward while inserting the disc into CD player, press the disc gently to make it steady, and make sure if the disc has been in place. Close the disc door gently and completely, otherwise the player will not read the disc. (**Note:** The player is only compatible with CD, CD-R, CD-RW, MP3, WMA, HDCD formats.)

How to insert a disc



Insert TF card

After inserting the TF card, long press the play button on the player to play it.

NOTE: The TF card supports up to 32GB.


How to turn on the player

There are two ways to turn on the player:

1. The power switch is located on the side. Slide it to ON position to turn on the player.
2. When the power switch is in ON position, only press PLAY button once to turn on the player.

NOTE 1: When a disc is played to the end and there is no activity after 20 seconds, the player will enter a standby mode. Please press the PLAY button to restart the player.

 NOTE 2: A HOLD switch is on the side to lock the operations of all buttons to avoid mistouch. When the HOLD switch is in ON position, all buttons will be locked; toggled it to OFF position to release all buttons.

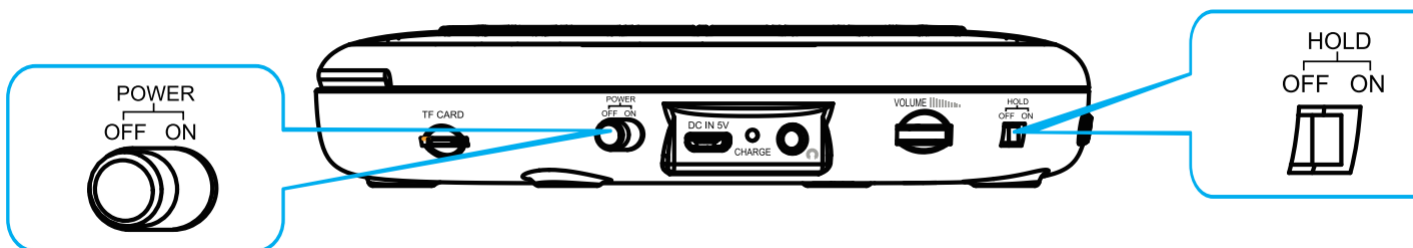


How to turn off the player

There are two ways to turn off the player:

1. Press STOP button twice to turn off the player. (In this way, the player will start from the beginning)
2. Slide the power switch to OFF position to turn off the player. It will start from where you stopped when you turn it on.

 NOTE: Please turn the power switch to OFF position if the player no longer be used for a long time.

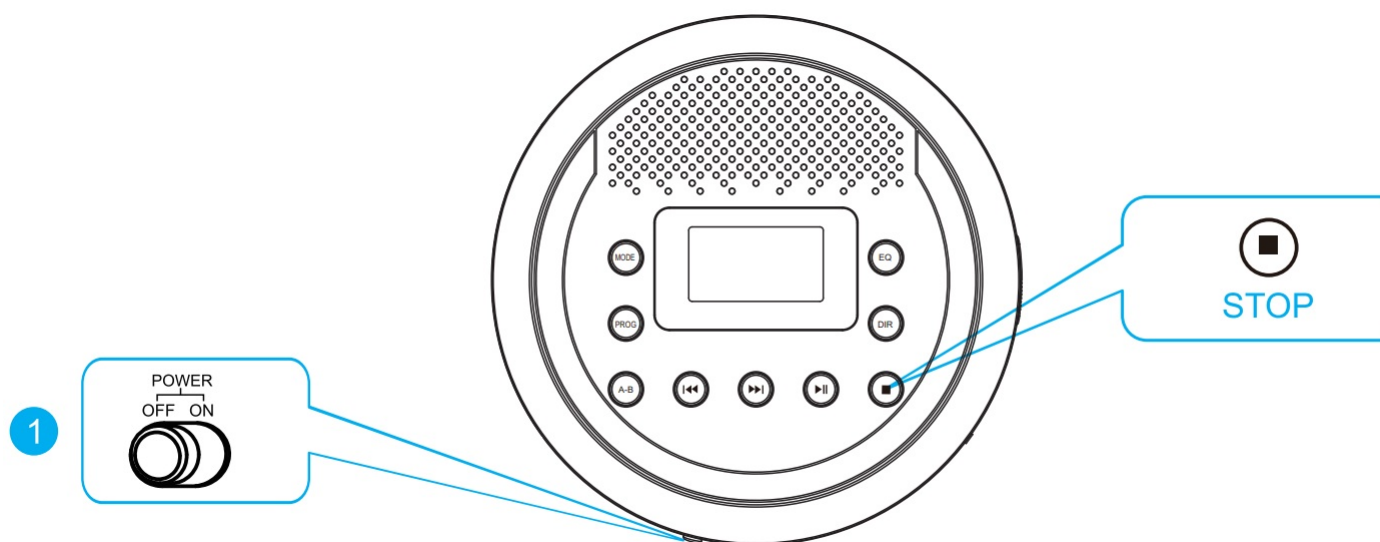


How to charge for the player

How to choose a charger: This product is only equipped with one charging cable. You can choose any charger that supports USB2.0 protocol or standard USB charger of a cellphone running in Android or iOS system to charge for the player.

Charging time: It will take around 4 hours to fully charge the player according to the standard USB2.0 protocol. When the battery is being charged, the LED indicator is red. Once the player is fully charged, the LED indicator will turn green.

 NOTE: When there is low batter symbol showing on the screen, it means that you need to charge the player.

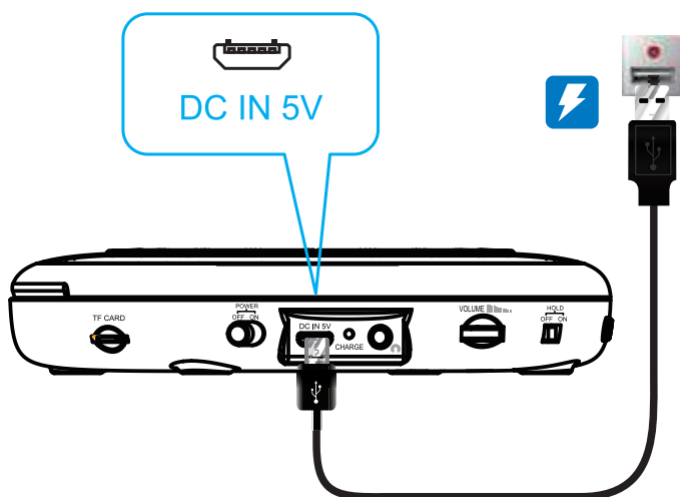

PLAY

How to setup the circle mode

Each time the MODE button is pressed, the order of the tracks played will be as follows: Repeat 1 (REP1), Repeat all(ALL), random play (SHUF), preview play (INTRO) (only 10 second per track will be played in this mode).



How to program the play

Press the PROG button to enter the programming mode when the play stops, press the PREVIOUS or NEXT button to select the track you want to program, press PROG again to confirm the programming. Up to 30 tracks can be programmed in this mode. After that, press the PLAY button to enter the programming play mode. Press the STOP button directly to enter the stop mode to cancel or reprogram.



How to play MP3 disc

 
Be sure the player is power on, while inserting the MP3 disc into the player, then close the disc door gently and completely.

DIR Button: Select the playlist when it plays a MP3 disc.

How to setup sound.

How to adjust volume

The volume knob is located on the side of the player. Rotate it to the left or right to decrease or increase the volume. Please listen to music at an appropriate volume to protect your ears.

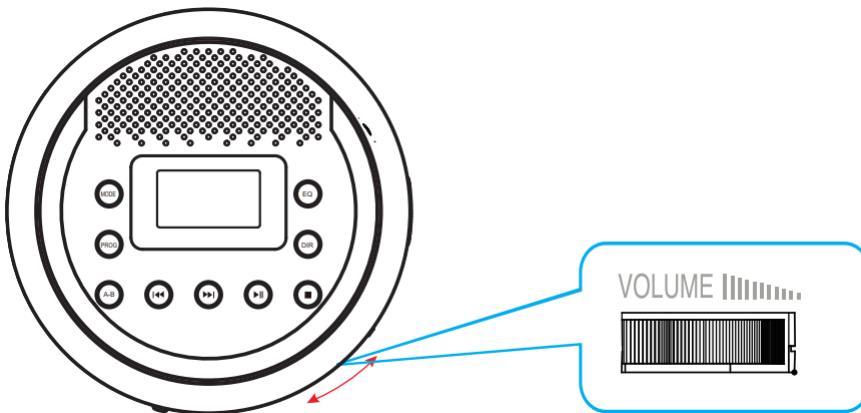

How to setup EQ effect

Press the EQ button to changes the different sound effects. There are a total of 5 sound effects: BBS, POP, JAZZ, ROCK, and CLASSIC.



A-B Repeat

Press it he display shows "A on".
Press it again, the display shows "Ab on", which means it will be repeat by A-B.
Cancel A-B: press A-B button once again, the display shows" Ab OFF".

 
OTHER FEATURES

Time setting of screen sleep

The screen will be turned off after 10 second of inactivity. The screen will be turned on when any button is pressed.


Key lock

After playback mode and sound effects have been setup, you can toggle the power switch to the HOLD position in order to prevent the environment, for example naughty children or crowded occasions from affecting the setting of player.

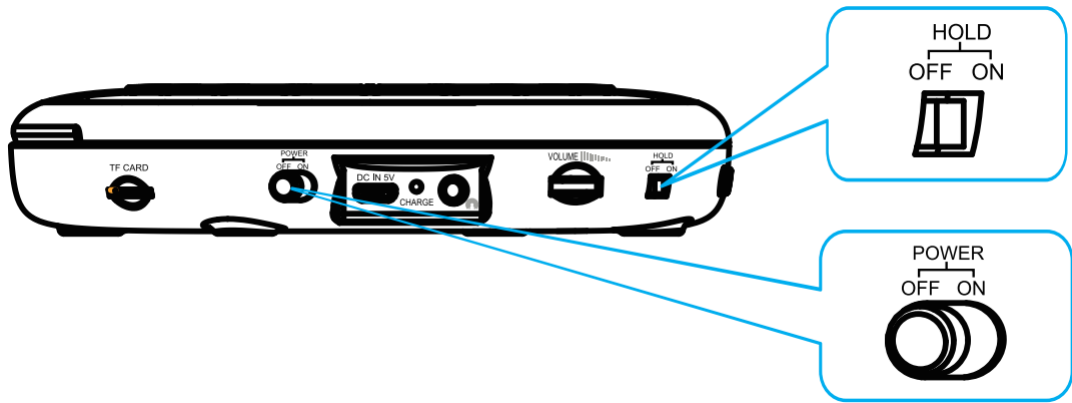

Last memory

 ON: The player will return to the last stop-track on the disc.
OFF: The player will not return to the last stop-track on the disc.
Press and hold the PROG button to turn the last memory function on or off. The ON or OFF word will be displayed on the screen at this time. The last memory function is turned on by default.
Note: Press STOP button twice and PLAY button once, it will be played from the begin.

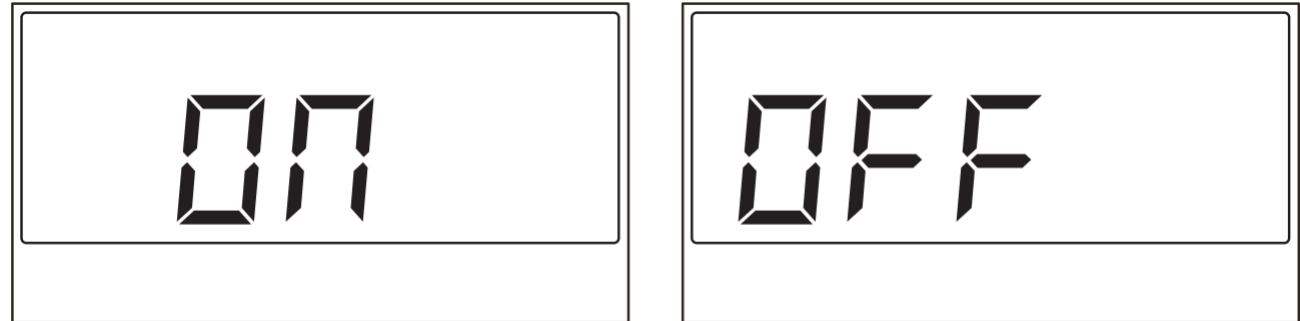


Connect to AUX devices

In order to use this player in different occasions, an extra AUX cable has been supplied to connect this player to any device with AUX interface conveniently, such as: home theater, music center, Bluetooth speakers, vehicles, headphone amplifiers and more.

SPECIFICATIONS

Size	141x141x29mm	D/C conversion	16Bit
Weight	256g	Sampling frequency	44.1KHZ
Power source	DC 5V/1A Micro USB2.0 Standard	Frequency response	20-20KHZ
Charging voltage	DC 5V/1A	Power output of earphone	16mW+16mW/16-32Ohm
Operating voltage	3.7V	Impedance of earphone	32ohm/16mW
Power consumption	about 1.5W	Supported disc formats	CD, CD-R, CD-RW, MP3, WMA, HDCD
Battery	Lithium-ion polymer 3.7V/1400mah	Shockproof time	CD 100 seconds/ MP3 180 seconds or more
TF	Max 32G	Speaker	2*1.3W stereo speakers

Documents / Resources



[MONODEAL MD-109 Rechargeable Portable CD Player with Built in Speakers](#) [pdf] User Guide

MD-109 Rechargeable Portable CD Player with Built in Speakers, MD-109, Rechargeable Portable CD Player with Built in Speakers, Portable CD Player with Built in Speakers, CD Player with Built in Speakers, Player with Built in Speakers, Speakers

References

- [User Manual](#)
- [Manuals+](#), [Privacy Policy](#)