



MONODEAL MD-602 Portable CD Player with Bluetooth User Manual

[Home](#) » [Monodeal](#) » MONODEAL MD-602 Portable CD Player with Bluetooth User Manual 

Contents

- [1 MONODEAL MD-602 Portable CD Player with Bluetooth](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Hearing protection](#)
- [5 PACKAGING & PRODUCT](#)
- [6 TROUBLESHOOTING](#)
- [7 How to turn off the player](#)
- [8 OTHER FEATURES](#)
- [9 FCC Statement](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

MONODEAL

MONODEAL MD-602 Portable CD Player with Bluetooth



Product Information

- **Model:** MD-602
- **FM Transmitter Frequencies:** 78.1, 79.3, 87.5, 88.5, 93.6, 103, 107.1, OFF

Product Usage Instructions

Playing and Repeating Tracks

1. To play a track, press the stop() button.
2. To enter programming mode, press the PROG/FM button.
3. To repeat a specific part of a track:
 - When the player reaches that part, press the A-B button once. The display will show "A ON".
 - When it reaches the end of that part, press the A-B button again. The display will show "A-B ON".
 - The player will now only repeat that specific part.
 - To stop repeating that part, press the A-B button again. The display will show "A-B OFF". The player will resume playing in order.

Connecting to a Bluetooth Device

1. Turn on your Bluetooth headphone/speaker and ensure that Bluetooth is turned on.
2. Select the "BT Search" option.
3. Press the PLAY button to start searching for nearby Bluetooth devices.
4. Press the PLAY button to select the name of your device that needs to be connected to.
5. After successfully pairing, press the BLUETOOTH button to return to the play interface.

Using the FM Transmitter

1. When playing CDs, press the play/pause() button first, then press the PROG/FM button.
2. The FM transmitter frequency will appear on the display. Press the PROG/FM button again to change the frequency.
3. Choose one of the available frequencies: 78.1, 79.3, 87.5, 88.5, 93.6, 103, 107.1, or OFF.
4. Turn on the car radio device and adjust the frequency to match the one chosen on the CD player.
5. You can now listen to the CD through the car radio device.

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player and keep it for later reference.

Warning:

The player

To reduce the risk of fire or avoid damage to the human body, please follow the instructions below:

1. Never touch the lens of the device. Always keep the disc compartment closed to prevent dust from collecting on the lens.
2. If the device is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.
3. Clean the device with a clean, damp leather cloth. Do not use any cleaning agents.
4. If the player fails to work, please contact our after-sales staff in time, professional technical support staff will provide you with detailed answers.
5. The player can not be used or stored in a moist environment, please keep the player away from any liquid, steam, or vapor, such as raindrops, mist, etc.
6. Please do not place any liquid or metal gadgets onto the player, such as a pin or a cup of coffee.
7. Please do not expose the player to the sunlight and keep it away from the fire heater. The player can not be placed in a high-temperature environment.
8. All professionals with extensive electronic knowledge and maintenance experience are allowed to disassemble the player for maintenance. The replacement of spare parts must be done in strict accordance with the parameters of the Circuit design.
9. Please do not stick or hit the player with sharp objects.
10. There are light-emitting diodes in this player, staring directly with eyes should be avoided to prevent visual impairment from being caused.
11. Children under 12 years are not allowed to use the player individually.
12. When charging, ensure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.

Battery

If the player you purchased contains batteries, please do not disassemble the player or charge the player with other adapters that do not meet the electrical parameters of this product to avoid Circuit failure. For your safety, please treat the built-in high-capacity polymer lithium battery by following the instructions below:

1. Please do not remove the battery pack.
2. Please do not beat or impact this player
3. Please do not make the battery short-circuit or pierce it.
4. Please do not place the player under high temperature which is above 140 F (60 C).
5. Please do not put the battery in a fire.
6. If the battery has been damaged, please ask a professional to replace the battery with the same specification, or contact our after-sales support for help

Hearing protection

Listen at medium volume:

Please adjust the volume to an appropriate level. If the volume is too high, it may damage your hearing or even cause permanent damage.

Set the volume to a low level:

Increasing the volume slowly, until a comfortable, clear sound can be heard.

Listen to the audio within a reasonable time frame:

Long time listening, even at a reasonable volume may cause damage to your hearing. Please use the product

properly and get a rest when necessary.

Environmental protection

 
To protect the environment and human health, please follow local laws and regulations on the abandonment of the package, electronic product, or battery. Please do not put the product together with household waste.

PACKAGING & PRODUCT

What’s in the box

1*CD player	1*3.5 to 3.5mm AUX cable
1•uss type-C charging cable	1•user manual
1*Earphones	

The CD player

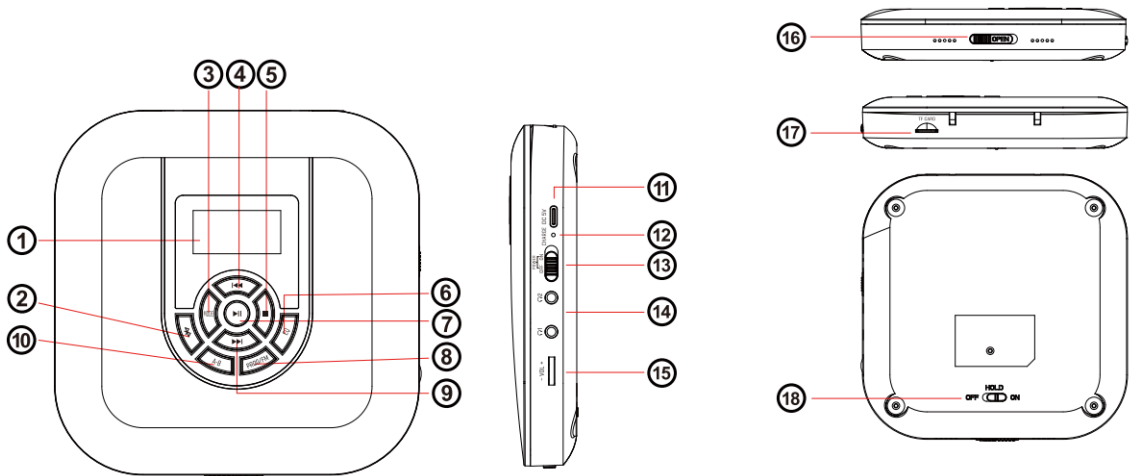


Item	Function	Item	Function
	Display screen	11	DC5V
2	Bluetooth	12	Charging LED
3	MODE	13	Power ON / OFF
4	Previous/ Rewind	14	Headphone jack 1 jack 2
5	Stop	15	Volume Konb
6	EQ	16	OPEN
7	Play/ Pause	17	TFCARD
8	PROG/FM	18	HOLD ON/OFF
9	Next/ Fast forward		
10	A-B		

TROUBLESHOOTING


Problems	Reasons	Solutions
Cannot be turned on.	The switch is not turned on.	Please turn the OFF/ON button on the side to ON.
	HOLD is turned on.	Please turn the HOLD button on the side to ON.
	The battery is exhausted.	Charge the battery.
	The player is damaged.	Please contact us or ask a professional for repairs.
Cannot read discs.	The disc is installed incorrectly.	1. Make sure the label side of the disc is facing up; 2. Ensure the disc is inserted fully into the place.
	The disc cannot be recognized.	The player is only compatible with CD, CDR, MP3, HDCD formats.
	The disc is dirty or damaged.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radially out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	The loader is dirty.	Wipe the lens gently with a degreasing cotton swab. NOTE: DO NOT TOUCH THE LENS WITH YOUR HANDS
Cannot charge the battery.	There is no current at power outlet.	Make sure the power outlet is working.
	The plug is not plugged in correctly.	Make sure that the two plugs of the power cords are connected properly.
	The charger is damaged.	Replace the charger with another one matching the specification (DC 5V/1A).
	The player is damaged.	Please contact us or ask a professional for repairs. NOTE: While charging, please make sure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.

Automatically skips part of the contents of the disc.	The player has MODE function (Repeat, Repeat all, Random play, Preview play), Preview play means that only 10 s per track will be played.	Please ensure the Preview play MODE is off
Noisy and screaming when it plays.	The usage time of the disk may be too long, so the disk is not smooth.	<ol style="list-style-type: none"> 1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radically out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	If there is a "Jiji" sound inside the earphone, it may be caused by scratching of the disc.	Please change to another disc, and do not use the old one again to prevent the player from damage.

How to insert a disc

- Push the OPEN button to the right to open the door. Insert your index finger into the center hole of the disc and take the edge of the disc with your thumb.
- Keep the side with words upward while inserting the disc into the CD player, press the disc gently to make it steady, and make sure the disc has been in place.
- Close the disc door gently and completely, otherwise, the player will not read the disc.
- Keep pressing  for 2 seconds to switch to the TF card

 (Note: The player is only compatible with CD, CDR, MP3, and HDCD formats.)

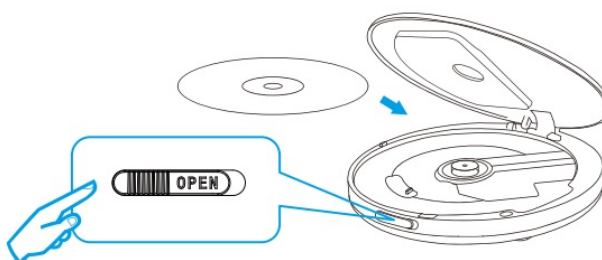


Insert an earphone

Only earphone with a 3.5mm plug is compatible with this player.

Note: Only "  1" supports headset control

How to turn on the player

 The power switch is located on the side. Please toggle it to the ON position to play normally. When a disc is played to the end or there is no disc, the player will enter a standby mode after 20 seconds. Please press the PLAY button again to restart the player.

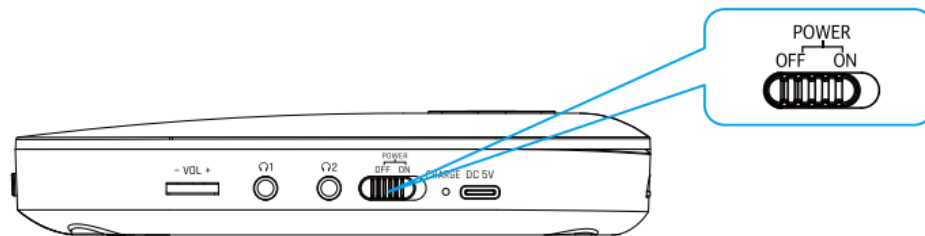


How to turn off the player

There are two ways to turn off the player:


1. Please toggle the power switch to OFF position if the player will no longer be used for a long time;
2. The player will enter a standby mode by pressing the STOP button twice in succession, but at this time, the power of the player is not completely disconnected.

 Note: Please turn the power switch to the OFF position if the player will no longer be used for a long time.

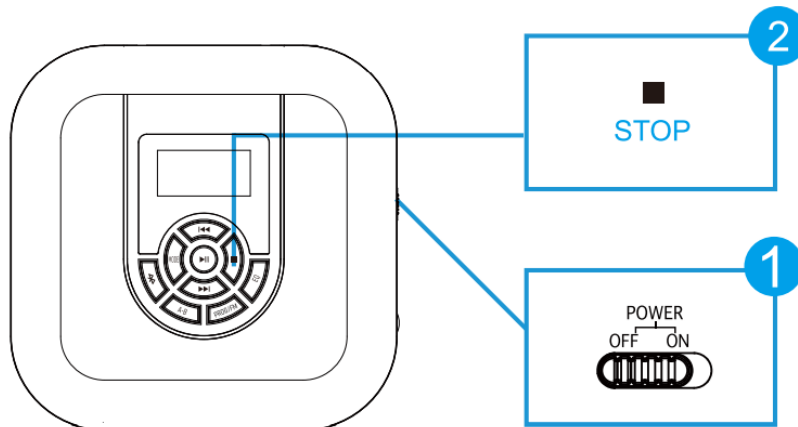



How to charge for the player

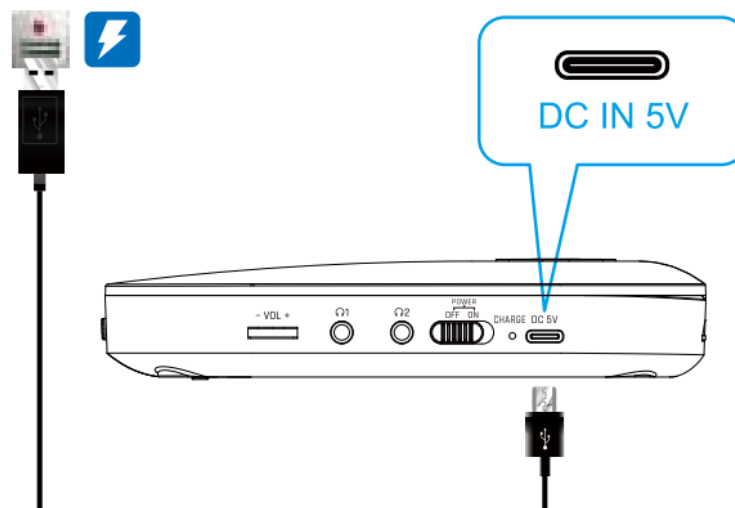 
- **How to choose a charger:** This product is only equipped with one charging cable. You can choose any charger that supports USB2.0 protocol or a standard USB charger of a cellphone running in Android or iOS system to charge the player.
- **Charging time:** It will take around 4 hours to fully charge the player according to the standard USB2.0 protocol. When the battery is being charged, the LED indicator is red. Once the player is fully charged, the LED indicator will turn green.




PLAY


How to set up the circle mode

 - Each time the MODE button is pressed, the order of the tracks played will be as follows: Repeat  (1),
- Repeat all  (ALL), random play (RAND), and preview play (INTRO) (only 10 seconds per track will be played in this mode).

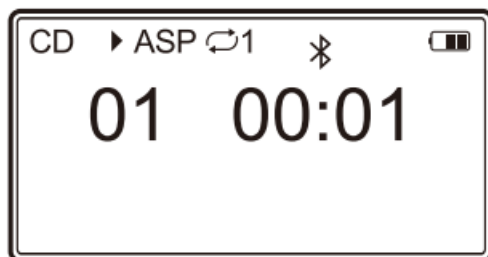


How to program the play

 - Press the stop button  first and press the PROG/FM button to enter the programming mode when the play stops, press the PREVIOUS or NEXT button to select the track you want to program, and press PROG again to confirm the programming.
- Up to 30 tracks can be programmed in this mode. After that, press the PLAY button to enter the programming play mode. Press the STOP button directly to enter the stop mode to cancel or reprogram.

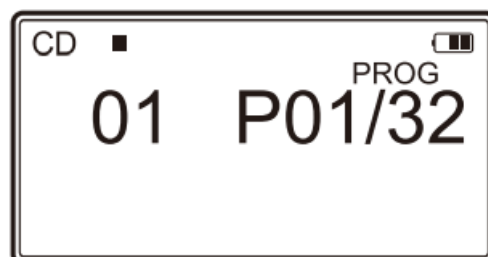

How to set sound

 How to adjust volume: The volume knob is located on the side of the player. Rotate it to the left or right to decrease or increase the volume. Please listen to music at an appropriate volume to protect your ears.

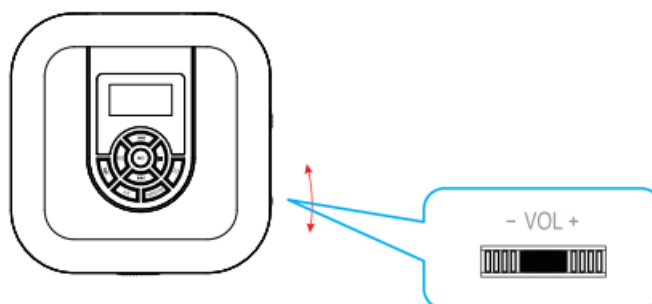


AB: If you just want to repeat the specific part of a track, when the player is playing that part, please press the A-B button one time, the display show "A ON", then when it plays to the end of that part, press the A-B button once again, the display shows "Ab ON".After that, the player will only repeat that specific part.

NOTE: If you want to stop repeating that part, just press the A-B button once again, the display will show "Ab OFF", and it will play in order.

How to set sound


How to adjust the volume

 The volume knob is located on the side of the player. Rotate it to the left or right to decrease or increase the volume. Please listen to music at an appropriate volume to protect your ears.

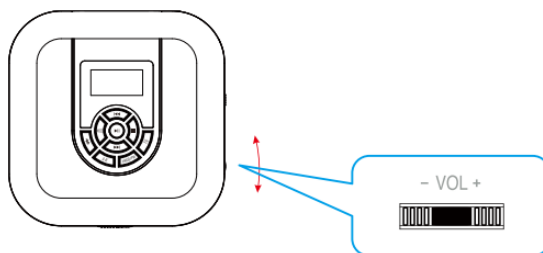



How to set EQ effect

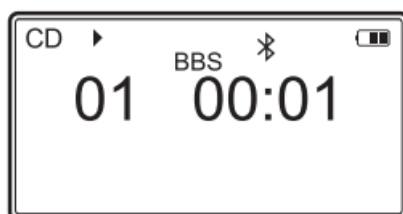 Press the EQ button to change the different sound effects. There are a total of 5 sound effects: BBS, POP, JAZZ, ROCK, and CLASSIC.



How to connect Bluetooth devices

 
1. Turn on your Bluetooth headphone/speaker and make sure that the Bluetooth is turned on.

2. Press the Bluetooth button  on the player. If the Bluetooth is off, you need to press the play button  to turn on the Bluetooth.

3. Select the "BT Search" option, then press the PLAY button, and the CD player will start searching nearby Bluetooth devices.

4. Press the PLAY button to select the name of your device that needs to connect to.

5. After being paired successfully, press the BLUETOOTH button to return to the play interface.

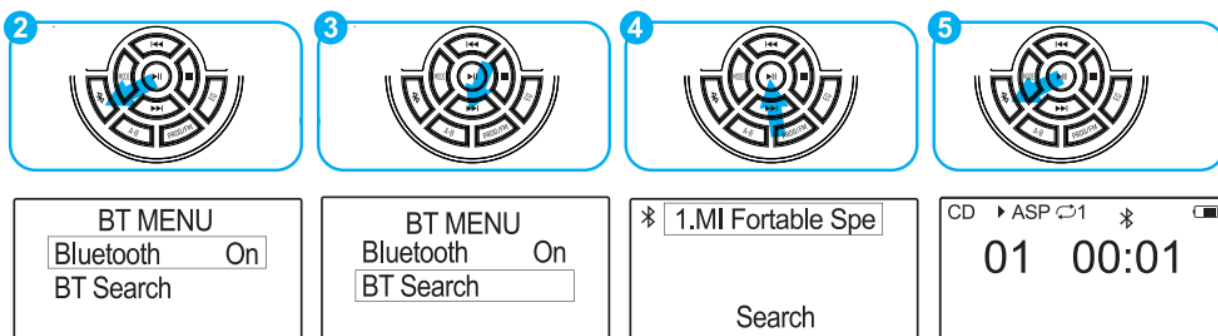

OTHER FEATURES

 
The time setting of the screen sleep

The screen will be turned off after 10 seconds of inactivity. The screen will be turned on when any button IS pressed.

Key lock

After playback mode and sound effects have been set up, you can toggle the power switch to the HOLD position

to prevent the environment, for example, naughty children or crowded occasions from affecting the setting of the player.

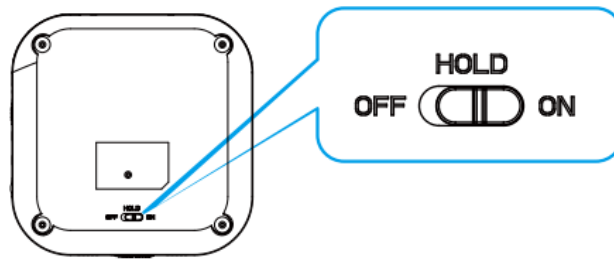

Connect to AUX devices

To use this player on different occasions, an extra AUX cable has been supplied to connect this player to any device with an AUX interface conveniently, such as home theater, music center, Bluetooth speakers, vehicles, headphone amplifiers, and more.

How to use an FM transmitter

please follow the below steps to use Fan M transmitter to connect the car radio device

1. When playing CDs, press the play/pause ►||) button first and pressthe PROG/FM button, FM transmitter frequency Will show up on the display. Press it again, the frequency will change. Choose one frequency you prefer.
Six FM transmitter frequencies are optional 78.1, 79.3, 87.5, 88.5, 93.6, 103, 107.1, OF
2. Turn on the car radio device and adjust the frequency to the same frequency you choose on the CD player.
3. You can listen to the CD on the car audio device now.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is Connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources

	<p>MONODEAL MD-602 Portable CD Player with Bluetooth [pdf] User Manual</p> <p>MD-602 Portable CD Player with Bluetooth, MD-602, Portable CD Player with Bluetooth, CD Player with Bluetooth, Player with Bluetooth, Bluetooth</p>
---	---

References

- [User Manual](#)