



MONODEAL MD-706 Boombox CD Player with Bluetooth Transmitter User Manual

[Home](#) » [Monodeal](#) » MONODEAL MD-706 Boombox CD Player with Bluetooth Transmitter User Manual 

Contents

- [1 MONODEAL MD-706 Boombox CD Player with Bluetooth Transmitter](#)
- [2 Product Features](#)
- [3 Accessories](#)
- [4 Buttons Instruction](#)
- [5 Remote Control](#)
- [6 Button Operation](#)
- [7 Bluetooth Mode Instructions](#)
- [8 USB Mode Instructions](#)
- [9 AUX Connection](#)
- [10 FM Mode Instructions](#)
- [11 BT TX](#)
- [12 Troubleshooting](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

MONODEAL

MONODEAL MD-706 Boombox CD Player with Bluetooth Transmitter



Specifications

- Model: MD-706
- Frequency response: 30Hz-20KHz
- Power output of earphone: 16mW+16mW
- Impedance of earphone: 32Ohm
- Compatible Disc: CD/CDR/HDCD/MP3/WMA
- Bluetooth HIFI Speaker, Version: 5.0
- Support EQ function
- Power output: 3Wx2
- Support MAX 32G/ FAT 32 Format
- Rechargeable battery: 3.7V 2000mAh
- Type-C Standard about 10W
- Dimensions (L*W*H): 142x182x60mm
- Weight: 530g

Accessories

- Remote control
- User Manual
- USB to Type-C charging cable
- 3.5mm-3.5mm AUX cable
- AC adapter

Buttons Instruction Remote Control

- BT TX VOL-
- VOL+
- MODE
- EQ
- CD/FM

- Standby Pause/Play
- MODE Stop
- EQ Previous CD/FM Next
- VOL+ BT TX
- VOL-
- DC Charging Port
- Power on/off
- Earphone /AUX Out Port
- AUX In Port
- USB Port
- CD Cover Open

Button Operation

1. STANDBY: Please first turn the power switch that next to the charging port to ON, then click the standby button on the remote control or the player to perform standby/open.
2. MODE: Press to change the playing mode CD/BT/USB/FM Radio/AUX).
3. EQ: Press this button to change the different sound effect.
4. CD/FM: Press this button to change the CD/FM mode quickly.
5. VOL+/VOL-: Press to increase or decrease the volume output.
6. BT TX: Press this button to enter into Bluetooth transmitter mode.
7. Previous/Next: Press this button to please Previous or Next song.
8. STOP: Press STOP button to stop playback. Press PLAY Button to play from the beginning.
9. PLAY/PAUSE: Press PAUSE button to pause playback;Press it again to continue playing from where it was paused.

Product Features

Model	MD-706
Frequency response	30Hz-20KHz
Power output of earphone	16mW+16mW/16-32Ohm
Impedance of earphone	32Ohm/16mW
Compatible Disc	CD/CDR/HDCD/MP3/WMA
Bluetooth	Bluetooth Speaker, Version: 5.0
HIFI Speaker	Support EQ function 3Wx2
USB	Support MAX 32G/ FAT 32 Format
Battery	Rechargeable battery 3.7V 2000mAh .
Power source	Type-C Standard
Power consumption	about 10W
Dimensions (L*W*H)	142x182x60mm
Weight	530g

Accessories



Remote
control



USB to Type-C
charging cable



AC
adapter

 


User
Manual




3.5mm-3.5mm
AUX cable

Buttons Instruction

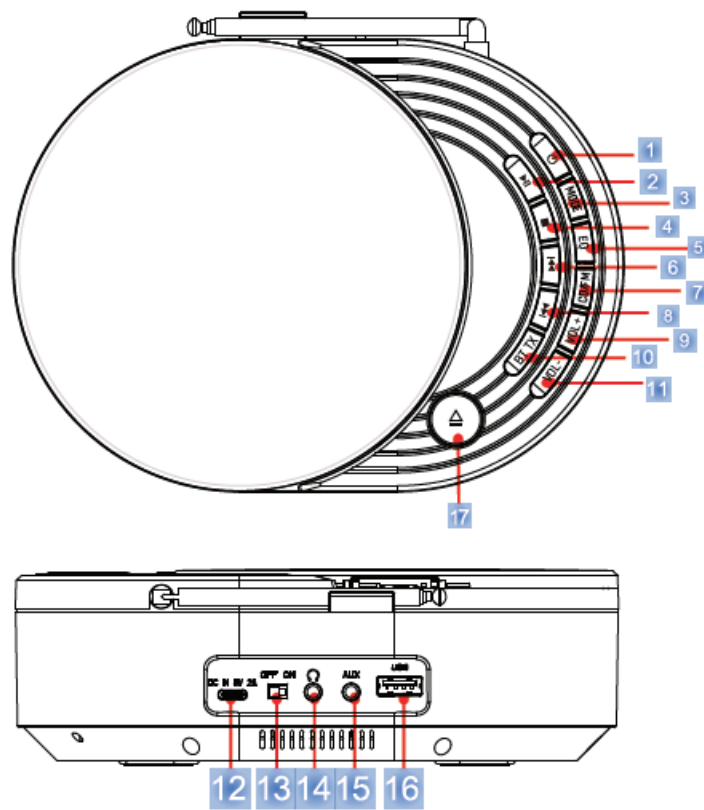

1. Standby
2. Pause /Play
3. MODE
4. Stop
5. EQ
6. Previous
7. CD/FM
8. Next
9. VOL+
10. BT TX
11. VOLCD
12. Cover Open
13. DC Charging Port
14. Power on/off
15. Earphone /AUX Out Port
16. AUX In Port
17. USB Port

 Remote Control

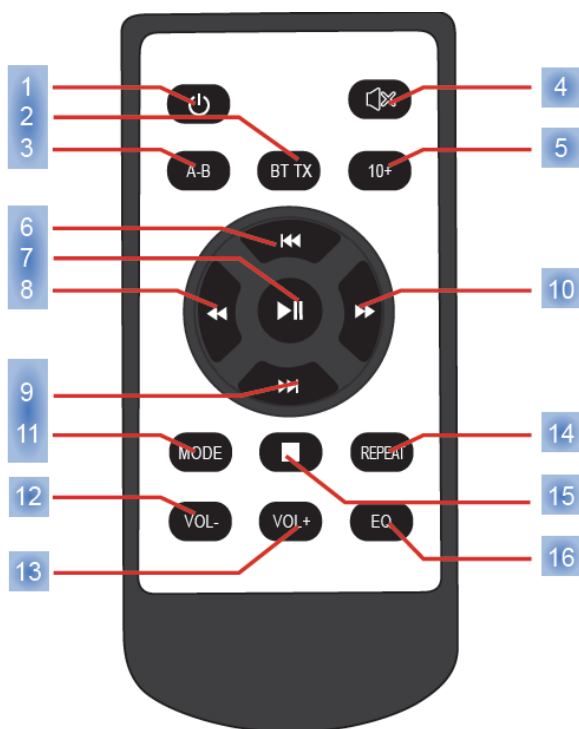

Item	Function	Item	Function
1	Standby	9	Next
2	Bluetooth transmitter	10	Fast Forward
3	A-B	11	MODE
4	Mute	12	VOLUME -
5	Number 10+	13	VOLUME +
6	Previous	14	REPEAT
7	Pause/Play	15	Stop
8	Fast Rewind	16	EQ

Button Operation

1. **STANDBY**

Please first turn the power switch that next to the charging port to “ON”, then click the “standby” button on the remote control or the player to perform standby/open.

2. **MODE**

Press to change the playing mode (CD/BT/USB/FM Radio/AUX).

3. **EQ**

Press this button to change the different sound effect.

4. **CD/FM**

Press this button to change the CD/FM mode quickly.

5. **VOL+/VOL-**

Press to increase or decrease the volume output.

6. **BT TX**

Press this button to enter into Bluetooth transmitter mode.

7. **Previous/ Next**

Press this button to please Previous or Next song.

8. **STOP**

Press STOP button to stop playback.

Press PLAY Button to play from the beginning.

9. **PLAY/PAUSE**

Press PAUSE button to pause playback; Press it again to continue playing from where it was paused.

Basic Operation

1. **How to turn on/turn off the player**

 
A. The power switch is located on the side. Please toggle it to ON position to play normally.

B. The power switch is located on the side. Please toggle it to OFF position to turn it off.

2. How to charge for the player

Connect the supplied USB charging cable with the power adapter, then plug it into a power source to charge the player. OR Connect the supplied USB Charging cable to a car charger/power bank to charge it.

Charging Time: It will take about 3 hours for a full charge. The red light will light up when charging, and it will turn off after charging is complete.

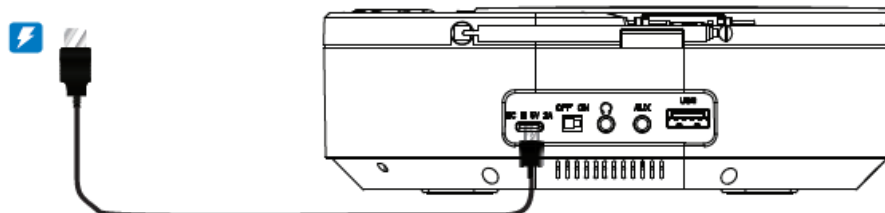

NOTE: When the player is in low battery, the LCD screen will be flashing. Please charge it.\

3. How to setup the repeat mode

Each time the REPEAT button on the mote control is pressed, the order of the tracks played will be as follows: Repeat1 (REP1), Repeat all (ALL), random play (SHUF), Play first 10s of file (INTRO).

4. How to setup EQ effect

Press the EQ button to changes the different sound effects. There are a total of 5 sound effects: BBS, POP, JAZZ, ROCK, and CLASSIC.



5. A-B Repeat (Press "A-B" button on the remote)

- During playback press a first time "A-B" to set the Starting Point A.
- Press "A-B" a second time to set the Ending Point B and player will repeatedly play the part between Point A and Point B.
- Press "A-B" a third time to cancel "A-B" repeat and resume normal playback.

 


Bluetooth Mode Instructions

1.



A-B Repeat Starting Point

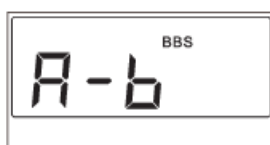

A-B Repeat Ending Point



A-B Repeat Cancelled

Press the "MODE" button to switch to Bluetooth mode, the "bt" will shown on the LED display, then the unit will be ready to pair other Bluetooth devices such as mobile phone, pads etc.

2. Activate the Bluetooth in your mobile phone and it will automatically search nearby Bluetooth device to pair.
3. Choose the name " MD-706 " device in your mobile phone Bluetooth device list to pair.

4. Your mobile phone will be paired/connected to the CD player in a few seconds.
5. Playing music on your mobile phone and the audio will be transmitted to the CD player speaker through bluetooth.

Note:

Under this mode, This Player doesn't compatible with Bluetooth headsets, Bluetooth speakers and Car's Bluetooth.

USB Mode Instructions

1. Plug in a USB flash drives to the CD player USB port.
2. Press the "MODE" button to switch to USB mode.
3. The CD player will read and play the music in the USB flash drives automatically.


Note

1. Supports a maximum 32GB USB flash drive, which must be FAT32 format.
2. If can't read the USB flash drives, please check the format and capacity. If not FAT32 format, please format it to FAT32.

AUX Connection

1. Press the "MODE" button to select the AUX mode.
2. Use the AUX cord to connect to other devices which have the AUX OUT function.

FM Mode Instructions

1. Press the "MODE" button to switch to FM radio mode.
2. Press the " " button to go to auto searching, the channels will be automatically stored when searching channels.
3. After auto searching finished, press  " " button to adjust channels. (Note : the channels storage capacity is 40 channels. P1-P40)

BT TX


The Bluetooth transmitter function is used to connect devices such as Bluetooth stereo and Bluetooth headset, please make sure they are in pairing status before connecting, otherwise they will not be connected.

1. Press the BT TX button of the remote control, the Bluetooth icon of the player will flash and enter the auto search state.
2. After successfully connecting the Bluetooth device, the Bluetooth icon will become always on, and the player's speaker will be turned off at this time.
3. When there are several Bluetooth devices waiting to be connected nearby, the player will automatically select the one with the best signal to connect, if you need to connect to a specific device, you can turn off the other devices that do not need to be connected.
4. Bluetooth transmitter function is supported in CD, USB, FM mode, but not in AUX and Bluetooth audio mode.

Troubleshooting

Problems	Reasons	Solutions
Cannot be turned on.	Power Switch is not turned on.	Please turn the OFF/ON button on the side to ON.
	The battery is exhausted.	Charge the player.
	The player is damaged.	Please contact us or ask a professional for repairs.
Cannot read discs.	The disc is installed incorrectly.	1. Make sure the label side of the disc is facing up; 2. Ensure the disc is inserted fully into the place.
	The disc cannot be recognized.	The player is only compatible with CD, CDR, MP3, HDCD formats.
	The disc is dirty or damaged.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radially out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	The loader is dirty.	Wipe the lens gently with a degreasing cotton swab. NOTE: DO NOT TOUCH THE LENS WITH YOUR HANDS.
Cannot charge battery.	There is no current at power outlet.	Make sure the power outlet is working.
	The plug is not plugged in correctly.	Make sure that the two plugs of the power cords are connected properly.
	The charger is damaged.	Replace the charger with another one matching the specification (DC 5V/2A).
	The player is damaged.	Please contact us or ask a professional for repairs. NOTE: While charging, please make sure that the Power source and the Charging voltage are DC 5V/2A. Excessive voltage input may cause machine overload damage.
Automatically skips part of the contents of disc.	The player has MODE function (Repeat, Repeat all, Random play, Preview play), Preview play means that only 10 s per track will be played.	Please ensure the Preview play MODE is off
Noisy and screaming when it plays.	Usage time of the disk may be too long, so the disk is not smooth.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radically out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	If there is a "Jiji" sound inside the earphone, it may be caused by scratching of the disc.	Please change to another disc, and do not use the old one again to prevent the player from damage.

If you have any questions about the products you received, please feel free to contact us.

	<p>MONODEAL MD-706 Boombox CD Player with Bluetooth Transmitter [pdf] User Manual MD-706 Boombox CD Player with Bluetooth Transmitter, MD-706, Boombox CD Player with Bluetooth Transmitter, CD Player with Bluetooth Transmitter, Bluetooth Transmitter, Transmitter</p>
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.