



MONOPRICE 43240 DT-3BT 40-Watt Multimedia Desktop Powered Speaker with Bluetooth User Manual

[Home](#) » [Monoprice](#) » **MONOPRICE 43240 DT-3BT 40-Watt Multimedia Desktop Powered Speaker with Bluetooth User Manual** 

Contents

- [1 MONOPRICE 43240 DT-3BT 40-Watt Multimedia Desktop Powered Speaker with Bluetooth](#)
- [2 SAFETY WARNINGS AND GUIDELINES](#)
- [3 FEATURES](#)
- [4 PACKAGE CONTENTS](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



MONOPRICE 43240 DT-3BT 40-Watt Multimedia Desktop Powered Speaker with Bluetooth



SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and

guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately remove it from its power source and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- If operating this speaker in a humid environment, ensure that no condensation occurs. Condensation could cause damage to the speaker cone and could cause a short in the amplifier, which in turn could cause fire or severe electric shock.
- Do not install this device on an unstable surface where it could fall and cause either personal injury or damage to the device and/or other equipment.
- Do not expose this device to excessive vibration or extreme force, shock, or fluctuations in temperature or humidity.
- Avoid prolonged exposure to excessive volume levels, which could cause hearing damage. Reduce the volume to minimum before using these speakers, then increase the volume to a comfortable listening level.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.
- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.
- Ensure that power is turned off and disconnected before making any electrical connections.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

FEATURES

- 3" polypropylene cone woofers
- 3/4" silk dome tweeters
- 75Hz – 20kHz frequency response
- Class AB amplifiers
- ch speaker and driver independently amplified
- 2x 12 watt amplifiers for the woofers
- 2x 8 watt amplifiers for the tweeters
- Unbalanced stereo RCA pair, unbalanced stereo 3.5mm TRS, stereo balanced 1/4" TRS pair, and Bluetooth® inputs

- 3.5mm headphone jack

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website www.monoprice.com or via email at support@monoprice.com. Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

- 1x DT-3BT Primary Speaker
- 1x DT-3BT Secondary Speaker
- 1x Speaker Interconnect Cable
- 1x 3.5mm Stereo Audio Cable
- 1x Stereo RCA Cable
- 1x Foot Mat
- 1x AC Power Cord
- 1x User's Manual

Documents / Resources

	<p>MONOPRICE 43240 DT-3BT 40-Watt Multimedia Desktop Powered Speaker with Bluetooth h [pdf] User Manual</p> <p>43240, 2ADDH-43240, 2ADDH43240, DT-3BT, 40-Watt Multimedia Desktop Powered Speaker with Bluetooth, DT-3BT 40-Watt Multimedia Desktop Powered Speaker with Bluetooth, 43240 40-Watt Multimedia Desktop Powered Speaker with Bluetooth, 43240 DT-3BT 40-Watt Multimedia Desktop Powered Speaker with Bluetooth</p>
---	---