

MONOPRICE 44520 Wireless Split Ergonomic 105 Keys Keyboard



MONOPRICE 44520 Wireless Split Ergonomic 105 Keys Keyboard User Manual

[Home](#) » [Monoprice](#) » MONOPRICE 44520 Wireless Split Ergonomic 105 Keys Keyboard User Manual 

Contents

 
- [1 MONOPRICE 44520 Wireless Split Ergonomic 105 Keys Keyboard](#)
- [2 Keyboard Product Overview](#)
- [3 Keyboard Specifications](#)
- [4 Install Battery in the Keyboard](#)
- [5 Multimedia Hotkeys Functions](#)
- [6 Cleaning and Maintenance](#)
- [7 General Safety Warnings](#)
- [8 REGULATORY COMPLIANCE](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



MONOPRICE 44520 Wireless Split Ergonomic 105 Keys Keyboard



Keyboard Product Overview

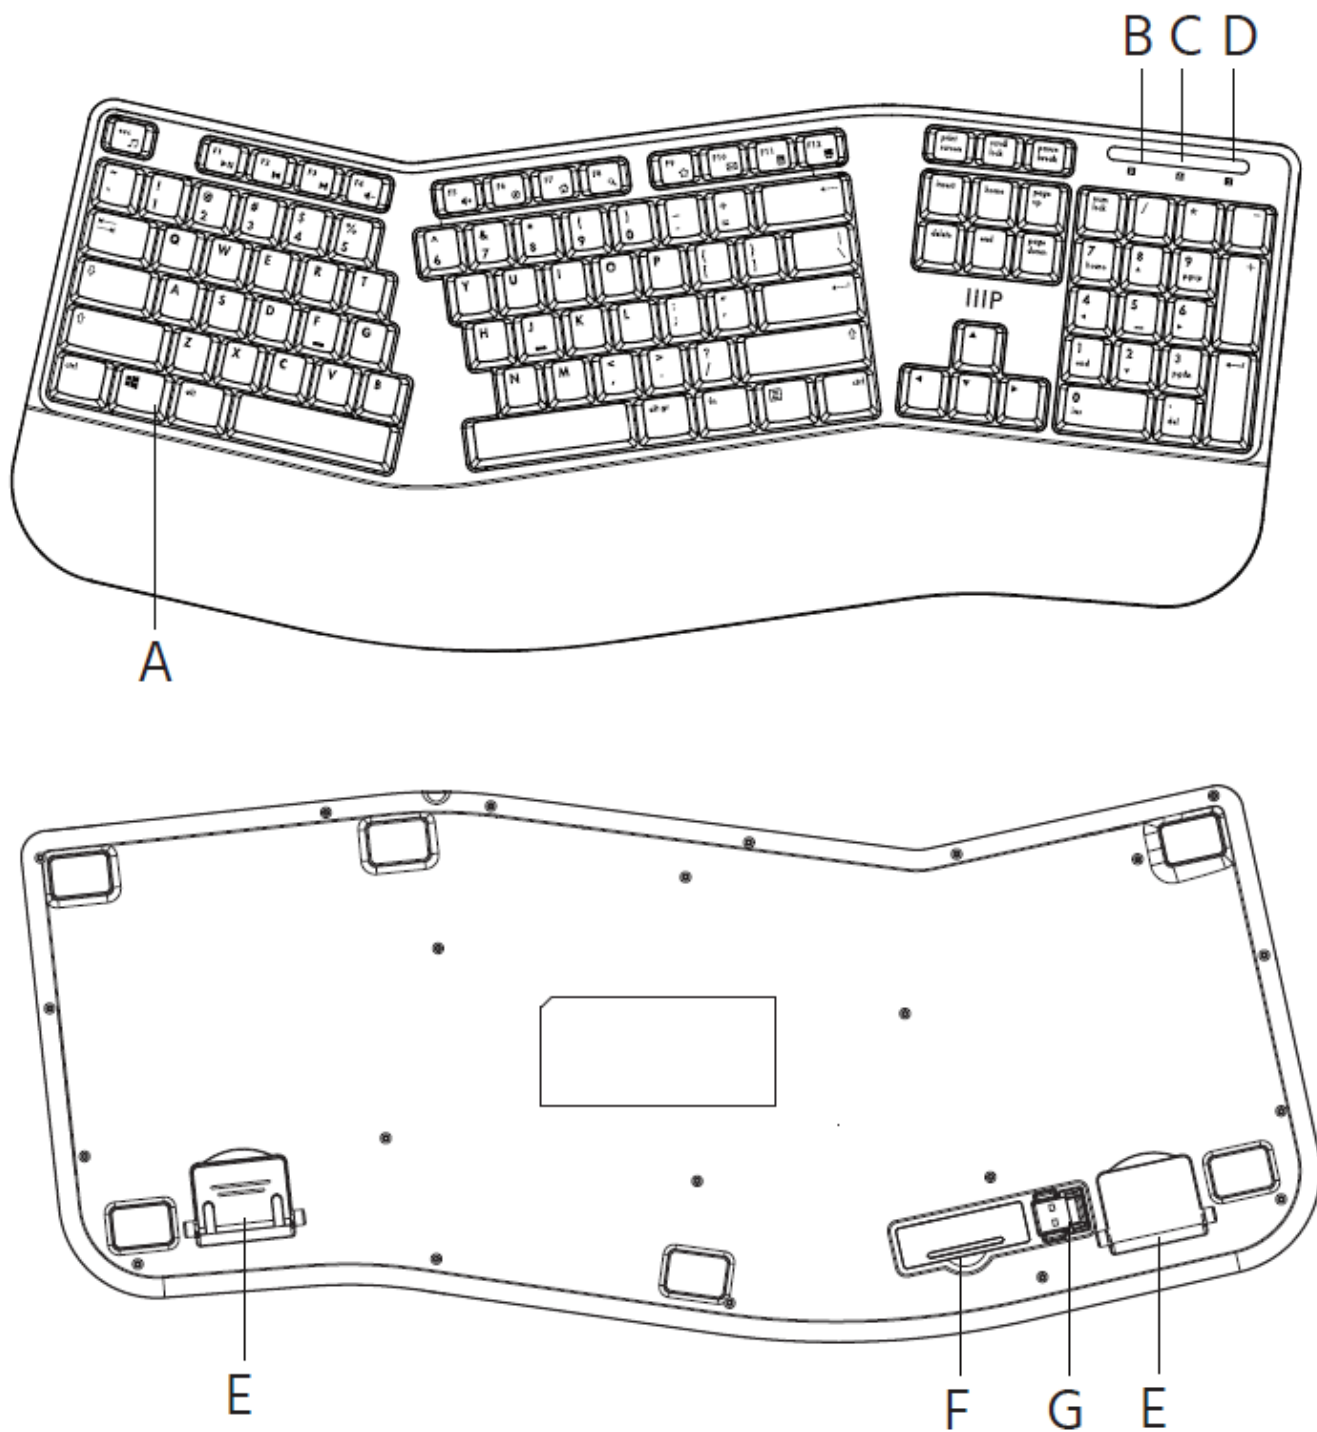

- A . Windows Key
- B . Num Lock Indicator
- C . Caps Lock Indicator
- D . Low Battery Indicator
- E . Keyboard Scaffold
- F . Battery Compartment
- G . USB Receiver

Keyboard Specifications

- Transmission mode 2.4GHz
- Keys 105 keys

- Product Size 501x212x41.5mm
- Product Weight about 1105g
- Working Voltage 3V (AA 1.5V*2)
- Working Current 6-15mA
- Working Distance up to 8 meters
- Support System WinXP/ Win7/Win8/ Win10 etc.

Install the Batteries

 
2x AA alkaline batteries needed (not included)

Install Battery in the Keyboard

Step 1: Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it



Step 2: Insert the batteries as shown inside the battery compartment

Step 3: Replace the cover

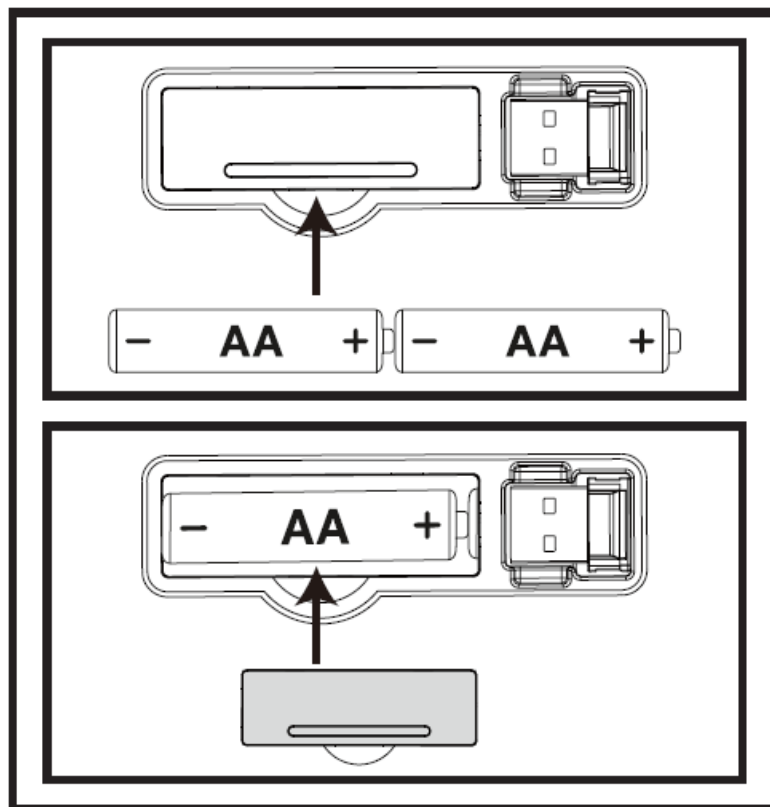


Connecting the Receiver

  Please insert the USB receiver into the USB port of your computer or laptop. (*the USB nano receiver is inserted on the back of the keyboard.

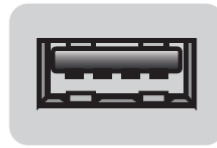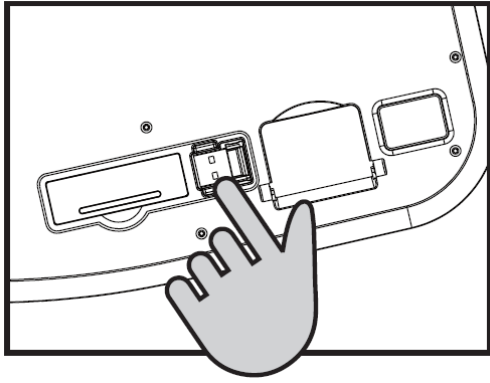

USB Port

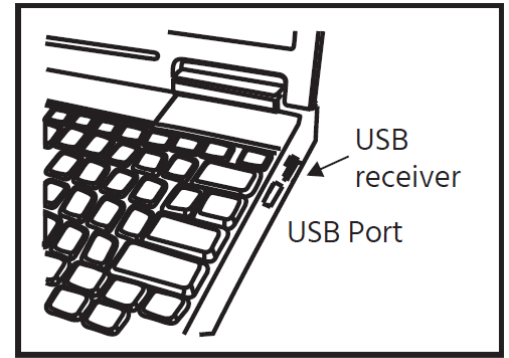 

The connection will be done automatically after 1-3 seconds.

Multimedia Hotkeys Functions

- FN+ESC Music
- FN+F1 Play/Pause
- FN+F2 Previous Track
- FN+F3 Next Track
- FN+F4 Volume Down
- FN+F5 Volume UP
- FN+F6 Mute
- FN+F7 Homepage
- FN+F8 Search
- FN+F9 Favorite
- FN+F10 Mailbox
- FN+F11 Calculator
- FN+F12 My computer

Remarks

Some hotkey functions may not work properly due to different devices/systems or application compatibility.

Power-Save function

The keyboard will automatically power off when not in use. When the low battery indicator lights up on the keyboard, please replace the batteries.

Cleaning and Maintenance

Unplug or turn off the product before cleaning it. Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.

Disposal

Always dispose the used appliance at a recycling center. Do not dispose the used appliance together with household waste.

Note: Due to 2.4GHz wave technology adoption, the connection can be subject to interference from obstacles, like walls, metals, or other electronic devices. Please keep the space between the keyboard and the USB receiver free of obstacles. In line with the policy of continuous development, the manufacturer reserves the right to amend the

specifications without prior notification. The illustrations in this user manual are for reference only. Please operate according to the real design.

General Safety Warnings

- Make sure the location for the product is well ventilated, and away from damp and cold areas, protected from overheating and away from direct sunlight, away from moisture drips or splashes and protected from excessive dust or grease.
- Do not place the product set near heat sources (eg. radiators, stoves, electrical equipment, amplifiers).
- Do not place containers with liquids (eg. vases) or with small metallic objects on top of the product.
- Do not place any naked flame sources (eg. lit candles, cigarettes) on the product.
- Supervise young children to ensure they do not play with the product.
- When removing or replacing batteries, make sure to keep them out of reach of infants and children.

Notes on batteries

- Only use top-quality batteries. Cheap batteries can leak and damage the device as a result.
- If the batteries leak, remove them with a cloth and dispose of them accordingly.
- Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes in to contact with your skin, wash the affected area with lots of water and soap. If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.
- Batteries do not belong in household waste! Expired batteries must be disposed, of in an environmentally friendly way and according to the applicable legal regulations.
- Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.
- Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited. Remove the batteries prior to disposing of the device.

REGULATORY COMPLIANCE

Notice for FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Notice for FCC

Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio Notice for ISED Canada

This device complies with ISED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio Frequency Exposure

This device meets the ISED Canada requirements for exposure to radio waves and is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy. To comply with Canada RF exposure compliance requirements, this device must not be co-located or operating in conjunction with any other antenna or transmitter.

Notice for ISED Canada:

CAN ICES-3 (B)/NMB-3(B)

www.monoprice.com

Need Help? We're here for you!

Contact us: www.monoprice.com/contactus

Product pictures are for reference only.

Specifications described herein are subject to change without prior notification. Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

Copyright © 2023 Monoprice, Inc. All rights reserved.


Monoprice, Inc.

1 Pointe Drive, Suite 400 Brea, CA 92821 – USA



www.monoprice.com

Tel. 877.271.2592

Documents / Resources

	<p>MONOPRICE 44520 Wireless Split Ergonomic 105 Keys Keyboard [pdf] User Manual</p> <p>44520 Wireless Split Ergonomic 105 Keys Keyboard, 44520, Wireless Split Ergonomic 105 Keys Keyboard, Split Ergonomic 105 Keys Keyboard, Ergonomic 105 Keys Keyboard, 105 Keys Keyboard, Keyboard</p>
---	--

References

-  [HDMI Cable, Home Theater Accessories, HDMI Products, Cables, Adapters, Video/Audio Switch, Networking, USB, Firewire, Printer Toner, and more! - Monoprice.com](#)
-  [Support](#)
- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.